

User's Manual

HK955070FB 36" Induction Cooktop -
User's Manual



 **AEG**

perfekt in form und funktion

HK955070FB

User manual

Ceramic glass hob

Thank you for choosing one of our high-quality products.

To ensure optimal and regular performance of your appliance please read this instruction manual carefully. It will enable you to navigate all processes perfectly and most efficiently. To refer to this manual any time you need to, we recommend you to keep it in a safe place. And please pass it to any future owner of the appliance.

We wish you much joy with your new appliance.

Contents

<u>Safety information</u>	2	Starting the STOP+GO	9
<u>Installation</u>	3	Locking / unlocking the control panel	9
<u>Description of the appliance</u>	6	The child safety device	9
<u>Operating the appliance</u>	7	OffSound Control (Switching off and on the sounds)	10
On and Off	7	<u>Helpful hints and tips</u>	10
Automatic Switch Off	7	<u>Care and cleaning</u>	11
The heat setting	8	<u>What to do if...</u>	12
/ Switching the outer rings on and off	8	<u>Environment concerns</u>	13
The Automatic heat up	8	Packaging material	13
Using the Timer	8		

Subject to change without notice



Safety information

General safety



WARNING!

Persons (including children) with reduced physical sensory, mental capabilities or lack of experience and knowledge must not use the appliance. They must have supervision or instruction for the operation of the appliance by a person responsible for their safety.

Child safety

- Only adults can use this appliance. Children must get supervision to make sure that they do not play with the appliance.
- Keep all packaging away from children. There is a risk of suffocation.
- Keep children away from the appliance when it is on.



WARNING!

Start the child safety device to prevent small children and pets from an accidental activation of the appliance.

Safety during operation

- Remove all packaging, stickers and layers from the appliance before the first use.

- Set the cooking zones to "off" after each use.
- Risk of burns! Do not put cutlery or saucepan lids on the cooking surface, as they can become hot.



WARNING!

Fire danger! Overheated fats and oils can ignite very quickly.

Correct operation

- Always monitor the appliance during operation.
- Only use the appliance for domestic cooking tasks!
- Do not use the appliance as a work or a storage surface.
- Do not put or keep very flammable liquids and materials, or fusible objects (made of plastic or aluminium) on or near the appliance.
- Be careful when you connect the appliance to the near sockets. Do not let electricity bonds touch the appliance or hot cookware. Do not let electricity bonds tangle.

How to prevent a damage to the appliance

- If the objects or cookware fall on the glass ceramic, the surface can be damaged.
- Cookware made of cast iron, cast aluminium or with damaged bottoms can scratch the glass ceramic if you move them on the surface.
- Do not let cookware boil dry to prevent the damage to cookware and glass ceramics.
- Do not use the cooking zones with empty cookware or without cookware.
- Do not cover any part of the appliance with aluminium foil.



WARNING!

If there is a crack on the surface, disconnect power supply to prevent the electric shock.

Installation



Before the installation , note down this data from the rating plate:

- Model description (Modell).....
- Product number (Prod. Nr.)
- Serial number (Ser. Nr.)

You find the rating plate of the appliance on its lower casing.

Modell HK955070FB		Prod.Nr. 949 593 337 00	
Typ 58 HCD AA A0	220-240 V	50-60 Hz	
Made in Germany	Ser.Nr.	7,9 kW	
AEG-ELECTROLUX			

Safety instructions



WARNING!

You must read these!

Make sure that the appliance is not damaged because of transportation. Do not connect a damaged appliance. If it is necessary, speak to the supplier.

Only an authorised service technician can install, connect or repair this appliance. Use only original spare parts.

Only use built-in appliances after you assemble the appliance into correct built-in units and work surfaces that align to the standards.

Do not change the specifications or modify this product. Risk of injury and damage to the appliance.

Fully obey the laws, ordinances, directives and standards in force in the country where you use the appliance (safety regulations, recycling regulations, electrical safety rules etc.)!

Keep the minimum distances to other appliances and units!

Install anti-shock protection, for example install the drawers only with a protective floor directly below the appliance!

Protect the cut surfaces of the worktop against moisture with a correct sealant!

Seal the appliance to the work top with no space left with a correct sealant!

Protect the bottom of the appliance from steam and moisture, e.g. from a dishwasher or oven!

Do not install the appliance adjacent to doors and below windows! If not, hot cookware can be hit off the hob when you open doors or windows.



WARNING!

Risk of injury from electrical current. Carefully obey the instructions for electrical connections.

- The electrical mains terminal is live.
- Make electrical mains terminal free of voltage.
- Install correctly to give anti-shock protection.
- Loose and incorrect plug and socket connections can make the terminal become too hot.
- A qualified electrician must install the clamping connections correctly.
- Use a strain relief clamp on cable.
- Use the correct mains cable of type H05BB-F Tmax 90°C (or higher) for a single-phase or two-phase connection.
- Replace the damaged mains cable with a special cable (type H05BB-F Tmax 90°C; or higher). Speak your local Service Force Centre.







The appliance must have the electrical installation which lets you disconnect the appliance from the mains at all poles with a contact opening width of minimum 3 mm.

You must have correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.

Sticking on the seal


- Clean the worktop in the area of the cut-out section.
- Bond the sealing tape to the lower edge of the cooking surface along the outer edge of the glass ceramic. Do not extend it. Let stay the cut ends in the middle of one side. When you have cut it to length (add some mm), push the two ends together.

Assembly

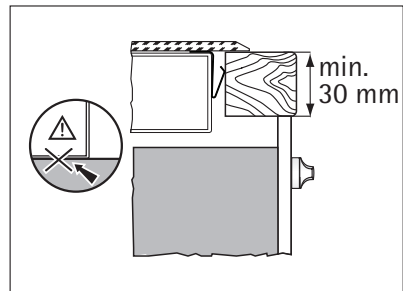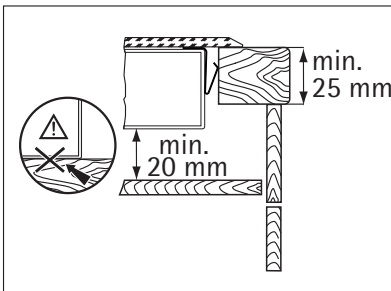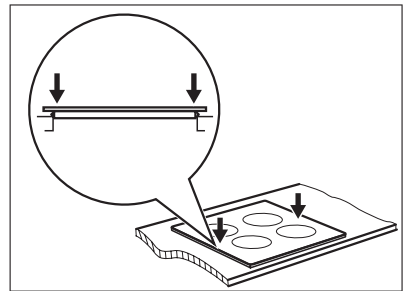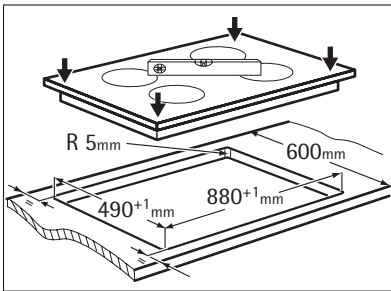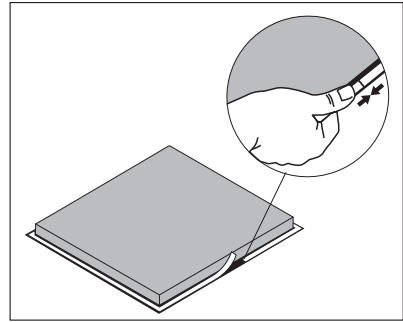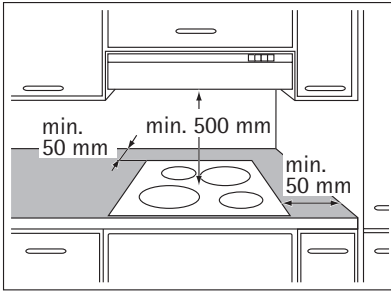


Description of the appliance

Cooking surface layout

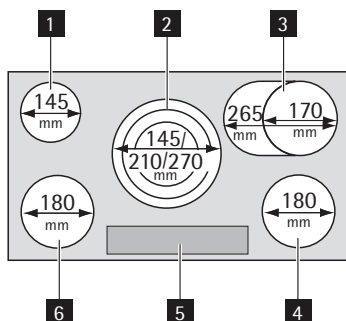

- 1** Single cooking zone 1200 W
- 2** Triple cooking zone 1050/1950/2700 W
- 3** Oval cooking zone 1400/2200 W
- 4** Single cooking zone 1800 W
- 5** Control panel
- 6** Single cooking zone 1800 W

Control panel layout

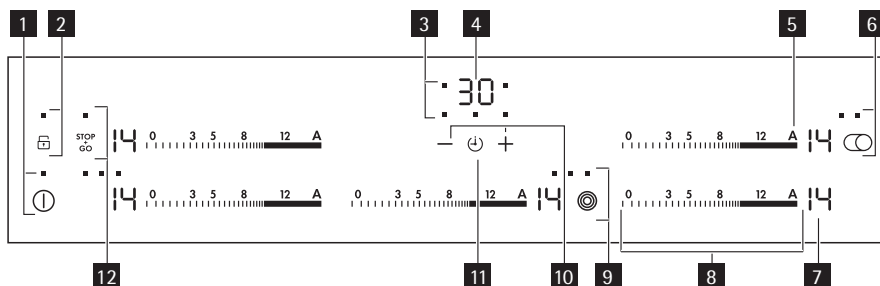

Use the sensor fields to operate the appliance.

	sensor field	function
1	⊞	starts and stops the hob
2	🔒	starts and stops the key lock or child lock
3	cooking zones' indicators of timer	shows for which zone you set the time
4	the timer display	shows the time in minutes
5	A	activates automatic heat-up
6	🔥 with an indicator	starts and stops the roasting zone
7	a heat setting display	shows the heat setting
8	a control bar	to set the heat setting
9	⊙ with an indicator	starts and stops the outer rings
10	+ / -	increases or decreases the time
11	🔘	selects the cooking zone

	sensor field	function
12	STOP +GO with an indicator	starts and stops STOP+GO

Heat setting displays

Displays show which functions operate

Display	Description
	The cooking zone is off
	The cooking zone operates
	Keep Warm
	The automatic heat-up function is on
	There is a malfunction
	OptiHeat Control (3 step Residual heat indicator): still cooking / keep warm / residual heat
	Lock/Child safety function is on
	The automatic switch off is on

OptiHeat Control (3 step Residual heat indicator)



WARNING!

Risk of burns from residual heat!

OptiHeat Control indicates the level of the residual heat.

Operating the appliance

On and Off

Touch for 1 second to start or stop the appliance.

Automatic Switch Off

The function stops the hob automatically and comes on if:


- all cooking zones are off .
- you do not set the heat setting after you start the hob.
- you cover a sensor field with an object (a pan, a cloth, etc.) for longer than 10 seconds. The sound operates some time and the hob stops. Remove the object or clean the control panel.
- you do not stop a cooking zone or change the heat setting after some time. See the table.

Automatic Switch Off times

Heat setting				
Stops after	6 hours	5 hours	4 hours	1.5 hours

The heat setting

Touch the control bar at the necessary heat setting. Change to the left or the right, if it is necessary. Do not release before you have a correct heat setting. The display shows the heat setting.

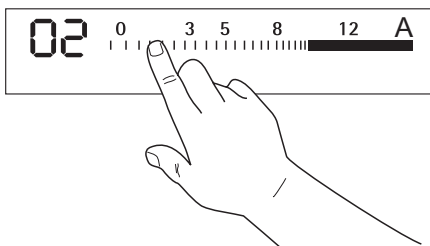

☉ / ☉ Switching the outer rings on and off

You can match the effective heating surface to the size of the cookware.

To switch on the outer ring touch the sensor field ☉ / ☉. The indicator comes on. For more outer rings touch the same sensor field again. The next indicator comes on. Do the procedure again to switch off the outer ring. The indicator goes out.

The Automatic heat up

The Automatic heat up function sets the highest heat setting for some time, and then decreases to the necessary level.


To start function touch the symbol

A

and then set the necessary heat setting.

☉ comes on when the cooking zone operates on the highest heat setting.

To stop the function change the heat setting.

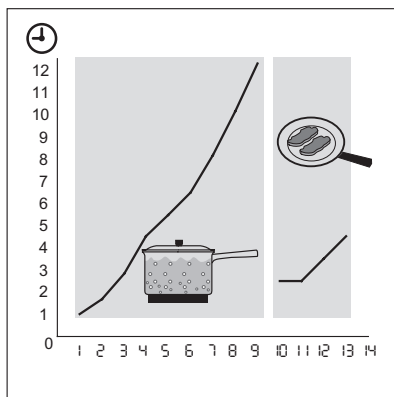

Using the Timer

Count Down Timer

Use the Count Down Timer to set how long the cooking zone operates for one cooking session.

Set the Count Down Timer after the selection of the cooking zone.

You can set the heat setting before or after you set the timer.

- **Selection of the cooking zone:** touch ☉ again and again until the indicator of a necessary cooking zone comes on.
- **Starting the Count Down Timer:** touch + of the timer to set the time (00 - 99 minutes). When the indicator of the cooking zone flashes slower, the time counts down.
- **Checking the remaining time:** select the cooking zone with ☉. The indicator of the cooking zone flashes faster. Display shows the remaining time.
- **Changing the Count Down Timer:** select the cooking zone with ☉ touch + or -.

- **Stopping the timer:** select the cooking zone with . Touch . The remaining time counts backwards to . The indicator of the cooking zone goes out. To switch off You can also touch and at the same time.

When the time elapses, the sound operates and flashes. The cooking zone switches off.

- **Stopping the sound:** touch

CountUp Timer (Count up timer)

Use the CountUp Timer to monitor how long the cooking zone operates.

- **Selection of the cooking zone (if more than 1 cooking zone operate):** touch again and again until the indicator of a necessary cooking zone comes on.
- **Starting the CountUp Timer:** touch of the timer comes on. When the indicator of the cooking zone flashes slower, the time counts up, display switches between and time elapsed (minutes)
- **Checking the elapsed time:** select the cooking zone with . The indicator of the cooking zone flashes faster. Display shows the elapsed time.
- **Stopping the CountUp Timer:** select the cooking zone with and touch or to switch off the timer. The indicator of the cooking zone goes out.

Minute Minder

You can use the timer as a **Minute Minder** while cooking zones do not operate. Touch . Touch or of the timer to select the time. When the time elapses, the sound operates and flashes.

Starting the STOP+GO

The function sets all cooking zones that operate to a keep warm setting.

- **Touch to start** this function. The symbol comes on.
 - **Touch to stop** this function. The heat setting that you set before comes on.
- does not stop the timer function.
- fully locks the control panel but not the sensor field .

Locking / unlocking the control panel

You can lock the control panel, but not . You can stop the appliance.

Touch the symbol . The symbol comes on for 4 seconds.

The Timer still operates.

Touch the symbol to switch off this function. The heat setting that you set before comes on.

When you switch off the appliance, you also switch off this function.





The child safety device

This function prevents an accidental operation of the hob.





Starting the child safety device

- Start the hob with . **Do not set the heat settings.**
- Touch for 4 seconds. The symbol comes on.
- Stop the hob with .

Switching off the child safety device





 
- Start the hob with . **Do not set the heat settings**. Touch  for 4 seconds. The symbol  comes on.
- Stop the hob with .

 
Overriding the child safety device for one cooking session

- Start the hob with . The symbol  comes on.
- Touch  for 4 seconds. **Set the heat setting in less than 10 seconds.** You can operate the hob.
- When you stop the hob with , the child safety device operates again.

OffSound Control (Switching off and on the sounds)**Switching off the sounds**






Switch off the appliance.

Touch  for 3 seconds. The displays come on and go out. Touch  for 3 seconds.  comes on, the appliance is in standard mode. Touch ,  comes on, the sound is off.

When the sound is off, you hear only when you touch , Minute Minder or Count Down Timer come down or when you cover the control panel.

Switching on the sounds

 Switch off the appliance.

Touch  for 3 seconds. The displays come on and go out. Touch  for 3 seconds.  comes on, because the sound is off. Touch ,  comes on, the appliance is in standard mode. The sound is on.

Helpful hints and tips**Cookware**

- The bottom of the cookware must be as thick and flat as possible.
- Cookware made of enamelled steel and with aluminium or copper bottoms can cause discoloration on glass ceramic surface.

Energy saving

- If possible, always put the lids on the cookware.
- Put cookware on a cooking zone before you start it.
- Stop the cooking zones before the end of the cooking time to use residual heat.
- The bottom of pans and cooking zones must have the same dimension.

Öko Timer (Eco Timer)

To save the energy, the heater of the cooking zone switches itself off earlier than count down timer signal. The heating time reduction depends on cooking level and cooking time.

Examples of cooking applications

The data in the table is for guidance only.

Heat setting	Use to:	Time	Hints
 1	Keep cooked foods warm	as required	Cover
1-3	Hollandaise sauce, melt: butter, chocolate, gelatine	5-25 min	Mix occasionally
1-3	Solidify: fluffy omelettes, baked eggs	10-40 min	Cook with a lid on
3-5	Simmer rice and milkbased dishes, heating up ready-cooked meals	25-50 min	Add at least twice as much liquid as rice, stir milk dishes part way through
5-7	Steam vegetables, fish, meat	20-45 min	Add a few tablespoons of liquid
7-9	Steam potatoes	20-60 min	Use max. ¼ l water for 750 g of potatoes
7-9	Cook larger quantities of food, stews and soups	60-150 min	Up to 3 l liquid plus ingredients
9-12	Gentle fry: escalope, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts	as required	Turn halfway through
12-13	Heavy fry, hash browns, loin steaks, steaks	5-15 min	Turn halfway through
14	Boil large quantities of water, cook pasta, sear meat (goulash, pot roast), deep fry chips		

Information on acrylamides



According to the newest scientific knowledge, if you brown food (specially the one which contains starch), acrylamides can pose a health risk. Thus, we recommend that you cook at the lowest temperatures and do not brown food too much.

Care and cleaning

Clean the appliance after each use.

Always use cookware with clean bottom.



WARNING!

Sharp objects and abrasive cleaning agents will damage the appliance.

For your safety, do **not** clean the appliance with steam blasters or high-pressure cleaners.










Scratches or dark stains on the glass ceramic have no effect on how the appliance operates.

Removing the dirt:

1. – **Remove immediately:** melting plastic, plastic foil, and food containing sugar. Use a special glass ceramic scraper. Put the scraper on the glass ceramic surface at an acute angle and slide the blade on the surface.

- **Stop the appliance and let it cool down** before you clean: limescale rings, water rings, fat stains, shiny metallic discolorations. Use a special cleaner for glass ceramic or stainless steel.
2. Clean the appliance with a damp cloth and some detergent.
 3. At the end **rub the appliance dry with a clean cloth.**


What to do if...

Problem	Possible cause and remedy
You cannot start the appliance or operate it.	<ul style="list-style-type: none"> • Start the appliance again and set the heat setting in 10 seconds. • The child safety device or  operates . Stop child safety device or . See the section "Child safety device" or "Stop and go". • You touched 2 or more sensor fields at the same time. Only touch one sensor field. • There is water or fat stains on the control panel. Clean the control panel
A sound operates when the appliance is off.	You covered one or more sensor fields. Uncover the sensor fields. Clean the control panel.
The residual heat indicator does not come on.	The cooking zone is not hot because it operated only for a short time. If the cooking zone must be hot, speak to the after sales service.
You cannot switch on the outer rings.	Switch on the inner ring first.
A sound operates and appliance starts and stops again. After 5 seconds one more sound operates.	You covered  . Uncover the sensor field.
 comes on	The automatic switch off operates. Stop the appliance and start it again.
 and number come on.	There is an error in the appliance. Disconnect the appliance from the electrical supply for some time. Disconnect the fuse from the electrical system of the house. Connect again. If  comes on again, speak to the after sales service.
There is no signal when you touch panel keys	The signals are off. Switch on the signals.

If you tried the above solutions and cannot repair the problem, speak to your dealer or the Customer Care Department. Give the data from the rating plate, three-digit-letter code for the glass ceramic (it is in the corner of the cooking surface) and an error message that comes on.

If you operated the appliance incorrectly, the servicing by a customer service technician or dealer will not be free of charge, even during the warranty period. The instructions about the customer service and conditions of guarantee are in the guarantee booklet.

Environment concerns

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Packaging material



The packaging materials are friendly to the environment and can be recycled. The plastic components are identified by marking: >PE<,>PS<, etc. Discard the packaging materials as household waste at the waste disposal facilities in your municipality.

Q - Warranty

AEG products are designed and built to the highest standards.
We expect your appliances to provide many years of trouble free enjoyment.
In the event of an appliance requiring attention, each appliance is covered by a 2 year warranty from the date of purchase.

Refer to warranty policy for complete terms and conditions.

Coverage is for costs of parts and labor for appliances in capital cities & metropolitan areas. We reserve the right to charge directly for handling expenses outside the metropolitan region.

AEG products are supported by a national service support system.
Call our customer service department for attention.

Please retain your invoice **AEG to quote should you require service assistance. This will identify your product for our priority service back-up. Please attach your invoice to this manual for easy future reference.**

AEG Canada
871 Cranberry Court
Oakville, Ontario L6L 6J7
Canada

Tel 905-829.3980
Fax 905-829.3985
email marketing@euro-line-appliances.com

For Service & Spares:
EURO-PARTS
1.800.678.8352

Important: Please record details of your purchase below and mail or fax to AEG

-----cut along line-----

AEG

Name: _____ TEL No _____
Address: _____
City : _____ State: _____ Zip Code: _____
Where purchased: _____ Purchase date: _____
Items purchased: _____
Serial No. (s): _____

*AEG appliances are imported and distributed in North America by Euro-Line Appliances
Inc. For more information visit
www.ela.ca / www.elawest.ca*

EURO-LINE APPLIANCES INC.

*871 Cranberry Court
Oakville, ON L6L 6J7
Canada
Toll Free: 1.800.421.6332 Showroom:
905.829.3980 [marketing@euro-line-
appliances.com](mailto:marketing@euro-line-appliances.com)*

EURO-LINE APPLIANCES WEST INC.

*101-1014 Homer St.
Vancouver, BC V6B 2W9
Canada
Toll Free: 1.855.352-9378
Showroom: 604.235.3980
info@elawest.com*