


# Blomberg®

seit 1883

To prevent accidents and machine damage, read these instructions before installation or use. Use the washer-dryer only as instructed in this owner's guide and installation instructions included with your product. Keep this guide for future reference

## Front-Loading Automatic Washer-Dryer

Owner's Guide & Installation  
Instructions

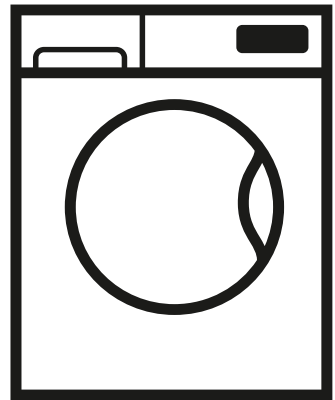

As an ENERGY STAR® partner, BLOMBERG has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.



Use only HE High Efficiency detergent.

WMD24400W



## **Please read this guide first!**

Dear Customer,

We hope that your product which has been manufactured in modern facilities and passed through a strict quality control procedure will give you the best results.

Therefore, we advise you to read through this document carefully before using your product and keep it for future reference.

## **This guide will...**

...help you use your washer-dryer in a fast and safe way.

- Please read the guide before installing and starting your washer-dryer.
- Particularly follow the instructions related to safety.
- Keep this guide within easy reach. You may need it in the future.
- Please read all additional documents supplied with this washer-dryer.

Please note that this owner's guide & installation instructions may be applicable for several other models. Differences between models will be identified in the guide.

## Explanation of symbols

Throughout this guide the following symbols are used:



### CAUTION

- Important information or useful hints about usage.



### WARNING

- Warning for hazardous situations with regard to life and property.



### WARNING

- Warning for electrical shock



- Allergy UK, is the brand of British Allergy Association. Their main endorsement is the 'Seal of Approval'. When you see a product with this logo on it, you have the reassurance the product has been scientifically tested to prove it is efficient at reducing/removing allergens from the environment of allergy and asthma sufferers or the products have significantly reduced allergen/chemical content.

If you have questions, call:

Call Center (toll free number)

1-800-459-9848 (USA)

or send e-mail to:

info@blomberginternational.com

For the list of dealers/retailers, distributors and authorized service agents, visit:<http://www.blombergappliances.com>

Please fill in the information below for future reference.

Model no.:

Serial no.:

Purchase date:

# TABLE OF CONTENTS


<b>1 Your Washer-dryer</b>	<b>6</b>
Overview . . . . .	6
Specifications . . . . .	8
<b>2 Important Safety Instructions</b>	<b>9</b>
<b>3 Installation Instructions</b>	<b>14</b>
The Right Location of Installation . . . . .	14
Installation Clearances . . . . .	15
Allowable Clearances for Undercounter Installation . . . . .	16
Allowable Clearances for Closet Installation . . . . .	16
Removing packaging reinforcement . . . . .	17
Removing shipping bolts . . . . .	18
Leveling the product . . . . .	19
Electrical Connection . . . . .	19
Power supply and circuit . . . . .	21
Water Supply Connection . . . . .	22
Drainage . . . . .	24
Installation Checklist . . . . .	25
Transportation . . . . .	25
Disposal Information . . . . .	26
Appliance Disposal . . . . .	26
<b>4 Operating Instructions</b>	<b>27</b>
First Use . . . . .	27
Laundry Tips . . . . .	28
Preparing the laundry . . . . .	30
Loading the washer . . . . .	31
Detergent Use . . . . .	32
Detergent Quantity . . . . .	33
Detergent Dispenser . . . . .	34
(II) Main Wash Detergent Compartment . . . . .	35
Liquid Fabric Softener Compartment . . . . .	35
Using liquid detergents . . . . .	36
(I) Liquid Chlorine Bleach Compartment . . . . .	36
Water Consumption . . . . .	37
<b>5 Selecting a Program and Operating Your Washer-Dryer</b>	<b>38</b>
Control panel . . . . .	38
Display symbols . . . . .	39
Preparing the machine . . . . .	39
Program and consumption table . . . . .	40
Selecting the washing program . . . . .	42

## TABLE OF CONTENTS

Washing programs . . . . .	42
Temperature selection . . . . .	47
Spin speed selection . . . . .	48
Drying programs . . . . .	51
Washing and drying programs . . . . .	52
Auxiliary function selection . . . . .	54
Drying steps . . . . .	56
Time display . . . . .	57
End Time . . . . .	57
<b>6 Preparation</b>	<b>59</b>
Starting the program . . . . .	59
Loading door locking system . . . . .	60
Adding or taking out laundry . . . . .	60
Changing the selections after program has started . . . . .	61
Child Lock . . . . .	62
Cancelling the program . . . . .	64
Re-spinning the laundry . . . . .	64
End of program . . . . .	65
Energy saving mode . . . . .	65
<b>7 User maintenance instructions</b>	<b>66</b>
Cleaning detergent dispenser . . . . .	66
Cleaning the door seal . . . . .	67
Cleaning the drum . . . . .	67
Cleaning the outer cabinet and control panel . . . . .	68
Cleaning the water inlet strainers . . . . .	68
Cleaning the drain pump filter . . . . .	69
Descaling the washer-dryer . . . . .	71
<b>8 Troubleshooting</b>	<b>72</b>
<b>9 WARRANTY STATEMENT FOR THE BLOMBERG CLOTHES WASHER-DRYER</b>	<b>87</b>
<b>10 HOW TO GET SERVICE</b>	<b>88</b>

# 1 Your Washer-dryer

## Overview

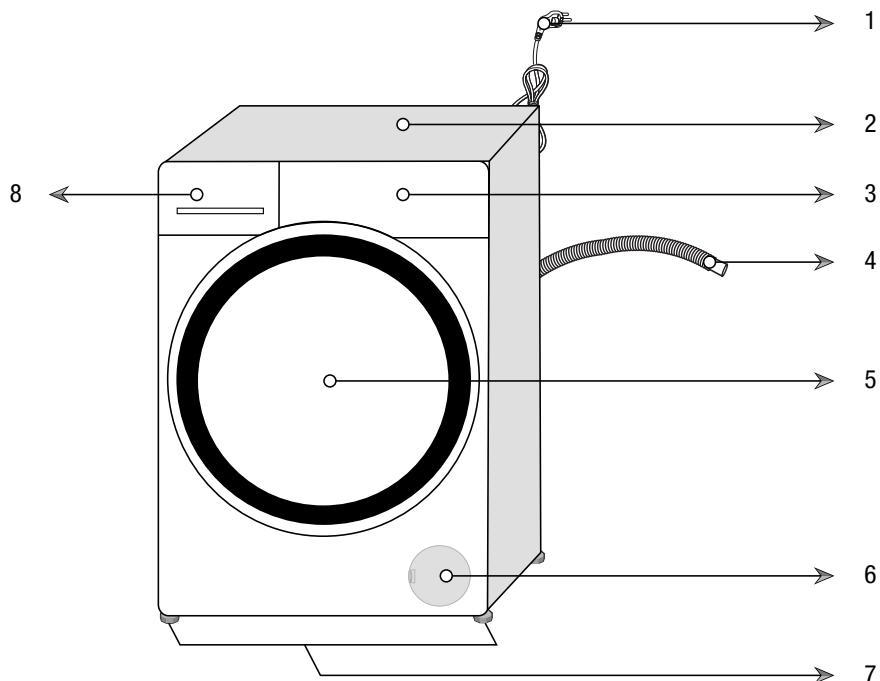



- 1- Power cable
- 2- Top panel
- 3- Control panel
- 4- Drain hose
- 5- Loading door
- 6- Filter cap
- 7- Adjustable feet
- 8- Detergent drawer

## Your Washer-Dryer

 
 
### Package contents




Power cable




Water discharge hose

 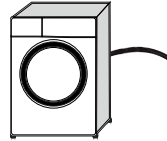

Transit bolts

 

Mains water inlet hose

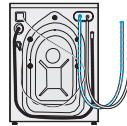

Liquid detergent container (\*)



User manual



Plastic plug group



### CAUTION

- Figures in this manual are schematic and may not match the product exactly.

(\*) This may be supplied with the machine depending on the model of your product.

## Your Washer-Dryer

### Specifications

	<b>Front Loading Automatic Washer-Dryer</b>
Models	WMD24400W
Height (in) / (cm)	33.1 / 84
Width (in) / (cm)	23.6 / 60
Depth (in) / (cm)	23.2 / 59
Net Weight (lbs) / (kg)	158.7 / 72
Electricity (V/Hz.)	208-240 / 60
Total Current (A)	10
Total Power (W)	2000-2350
Spinning cycle (rpm max.)	1400
Water pressure (psi) / (bar)	(15-145) / (1-10)
Drain height (ft.) / (m.)	4.9 / 1.5
Declared capacity (cu. Ft.)	2.5
Rated capacity-Washing (lbs)/(kg)	17.6 / 8
Rated capacity-Drying (lbs)/(kg)	11.0 / 5

Specifications of this appliance may change without notice to improve the quality of the product. Figures in this guide are schematic and may not match your product exactly.

Values stated on the product labels or in the documentation accompanying it are obtained in laboratory in accordance with the relevant standards. Depending on operational and environmental conditions of the appliance, these values may vary.



## 2 Important Safety Instructions



### WARNING

- To reduce the risk of fire, electric shock or injury to persons while using your appliance follow basic safety precautions, including the following:
- Read all instructions before using the washer-dryer.
- Do not wash or dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances (acetone, alcohol, kerosene, some liquid household cleaners, some spot removers, turpentine, waxes and wax removers) as they give off vapors that could ignite or explode.
- Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode.
- Under certain conditions, hydrogen gas may be produced in a hot-water system that has not been used for 2 weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot-water system has not been used for such a period, before using a washing machine, turn on all hot-water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door and the power cord / main plug to prevent accidents.
- Do not reach into the appliance if the drum is moving. Wait until the drum has completely stopped before opening the door.
- Do not install or store this appliance where it will be exposed to the weather and direct sunlight.
- Do not tamper with controls.

## Important Safety Instructions

- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- This appliance must only be used for the purpose of washing, rinsing and spinning machine-washable items using laundry additives that are suitable for use in washers . The appliance manufacturer cannot be held responsible for damage caused by improper or unintended use of the appliance.
- Only detergents, softeners and additives suitable for use in HE (High-efficiency) washers may be used. Always follow the instructions and information given by the laundry detergent manufacturers when using these products.



Use only HE High Efficiency detergent.

- Always follow the fabric care instructions of garment manufacturers.
- Do not touch the door glass while running at high temperatures. Danger of burning!
- Do not sit on top of the product.
- Do not climb onto the product.
- Destroy the shipping carton, plastic bag and other packing materials after the product is unpacked. Keep children away from these packing materials. Danger of suffocation from plastic sheets and cartons!
- Do not mix chlorine bleach with ammonia or acids such as vinegar and/or rust remover when washing. This mixture can produce hazardous fume which may cause death.
- Do not operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.

## Important Safety Instructions

- Store laundry detergents and additives in a cool, dry place out of children's reach due to danger of chemical poisoning and skin irritation. Follow the manufacturers' instructions when using laundry products.
- Do not wash or dry fiberglass materials. Small particles can stick to fabrics while running and may lead to skin irritation.
- Do not wash or dry items stained with vegetable oil, cooking oil or petroleum. These items may contain some flammable oils after laundering and the fabric may smoke or catch fire by itself.
- Be sure to unplug the power cable before attempting maintenance or cleaning of your appliance to minimize the risk of electric shock. Always unplug the cable by grasping the plug, not the cord.
- Do not use wet hands when plugging/unplugging the power cable.
- Check the water inlet and drain hose connections regularly for any leakage. Hoses should be replaced every 5 years.
- Do not leave the product door open to prevent children hurt themselves by hanging on the door or going inside the drum.
- Be careful when the appliance is draining hot water. Danger of burning!
- At the end of a washing day, turn off the water faucets to prevent any leakage that may occur due to a faulty condition of the appliance.
- Check the appliance and inlet hose connections for water leakage after each use. If there is leakage, turn off the appliance and water faucets and call service.
- Do not machine wash or dry items having large or heavy metal parts such as buttons or buckles. These items could severely damage the appliance.
- Always be sure to empty all foreign materials from the pockets of your clothing as small items such as coins, pins etc. could severely damage the appliance.
- Do not install and operate the appliance in places exposed to temperatures below freezing. Frozen water may cause severe damage by bursting hoses and pump.

## Important Safety Instructions

- Make sure that shipping bolts are removed before you operate the product. If service is required as a result of not removing the bolts, it will not be covered by the warranty.
- Make sure that the drum is empty before you load the product.
- Do not store and use any flammable and combustible substances such as lint, paper and chemicals near the appliance.
- Always follow the manufacturer's instructions when you are using a descaling agent. Be sure that descaling agent contains rust-protective materials and rinse the washer a few times thoroughly after the descaling process (See, Descaling the washer).
- Install and operate the product on a solid floor to prevent vibration or movement. It is not recommended to install and operate the product on wooden floor or on a carpet.
- The rated voltage of your washer is 208/240V, so it should not be directly connected to the wall power of 110/120V.
- If an abnormal sound is heard while running, refer to the "Troubleshooting" of this guide.
- Call service for checking any possible damage or fault if the appliance is dropped or bumped.
- The end of drain hose should not contact the discharge water in any way as this might cause siphoning of water.
- Always leave the property after checking that the program cycle is completed and the product is turned off.
- Damaged or worn power cords and plugs must only be replaced by a Blomberg Service technician.
- Never use an extension cord or adapter to connect the appliance to the electrical power due to the risk of electric shock and/or fire.
- All broken and faulty components, panels and parts must only be replaced with original Blomberg spare parts by a Blomberg Service technician.
- Do not force the product's door to open when it is locked. The door must be closed any time during the program cycle.

## Important Safety Instructions

- Do not use fabric softeners or products to reduce static unless recommended by the manufacturers of the fabric softener product.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire. To reduce the risk of fire due to contaminated loads, the final part of a tumble dryer cycle occurs without heat (cool down period). Avoid stopping a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Check the drain pump filter occasionally to remove coins, buttons and such small objects.
- Always drain off the water completely before cleaning the pump filter, before transporting the product, when there is a danger of frost and when there is a power failure (For emergency draining, See User maintenance instructions).
- Always be sure that the product has been properly installed by licensed personnel, water and electrical connections and grounding conform to all relevant codes and requirements.
- This manual does not cover every possible condition and situation that may occur. Use common sense and caution when installing, operating, and maintaining any appliance.



### **WARNING**

- This product may contain chemicals known to the state of California to cause cancer or birth defects or other reproductive harm.

### SAVE THESE INSTRUCTIONS

Always follow the instructions on this user guide. If you aren't sure how to perform them, please call Customer Service for assistance and scheduling service.

### **3 Installation Instructions**

Read this first !

Install the clothes dryer according to the manufacturer's instructions and local codes.

This product can be individually installed in free-standing and built-in installations. Before you install your appliance, read the following instructions completely and carefully:

- Save these instructions for future reference.
- This appliance must be properly installed and grounded by qualified and skilled technicians in accordance with all local codes and ordinances and the latest edition of the National Electrical Code, ANSI/NFPA 70.
- Proper installation of this appliance is the responsibility of the owner and failure due to improper installation is not covered by the warranty.

#### **The Right Location of Installation**

You can install your product in a basement, closet or in a laundry room if the location has proper drainage, plumbing and power supply system. Always follow these instructions for installation:

- Do not install or store this appliance where it will be exposed to the weather, rain, damp places, water and direct sunlight. The ambient temperature must be higher than 60°F (15.6°C) for proper operation. Installation location must have the proper ventilation.
- Do not store and use any flammable and combustible substances such as lint, paper, curtains, gasoline, coal and liquid or vapor chemicals near the appliance.
- Install and operate the product on a strong solid concrete floor to prevent vibration, noise or movement in case of load unbalance. The floor must have sufficient load carrying capacity and the product must be leveled properly before the operation.

## Installation Instructions

- It is not recommended to install and operate the product on a wooden floor or soft floor. If you have to install your product on a wooden or frame construction floor, the floor must be reinforced properly and the product must be located in the corner of the room if possible.
- Never place your product on a carpet. This prevents air circulation. The electrical components of the machine may overheat and cause damage.
- Do not stand appliance on the power cable.
- Do not install and operate your product in ambient temperatures lower than 32°F (0°C). Controls may stop working properly in such condition.
- If there is danger of frost, drain all remaining water in pump and hoses since it may freeze and cause damage by bursting them (see “Cleaning the drain pump filter”).

## Installation Clearances



### CAUTION


- The installation location must be large enough for the product door to be fully opened for loading.
- The installation location must be large enough for ease of operation, maintenance and service.
- Ensure there is min 1/2” of clearance on each side of the product to allow slight sideways movement during washing and spin drying.

## Installation Instructions

### Allowable Clearances for Undercounter Installation

The dimensions are for the recommended spacing. Counter depth should be 23.5-24.5" (60-62 cm).

Custom undercounter installation – Washer-Dryer only

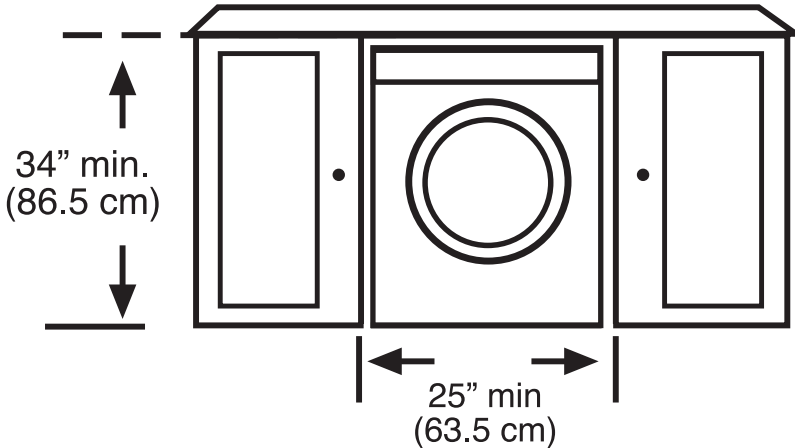

### Allowable Clearances for Closet Installation

When installed in closet:

Sides, Rear, Front 1/2 in. (1.27 cm), Top= 1 in. (2.54 cm)

Closet door ventilation requirement: A louver having minimum 23 in<sup>2</sup> (148 cm<sup>2</sup>) air opening located at 3 in (7.62 cm) from the bottom of closet door.



## Installation Instructions

### Removing packaging reinforcement

Tilt the product to remove the packaging reinforcement. Remove the packaging reinforcement by pulling the ribbon.






### Removing shipping bolts



#### WARNING

- Shipping bolts must be removed before operating the product! Otherwise, the appliance will be damaged seriously!

1. Loosen all the bolts with a spanner wrench until they rotate freely.

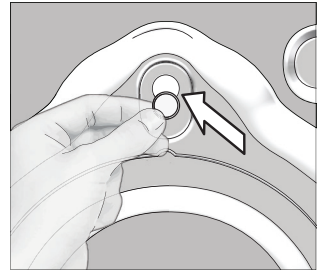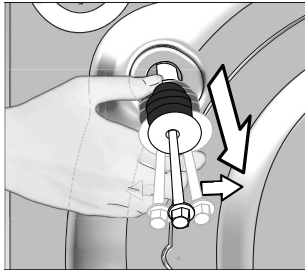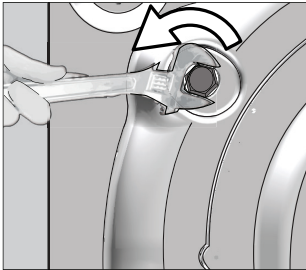

2. Remove the shipping bolts by turning them gently.

3. Bolt hole covers (supplied in the bag with the owner's guide) are fitted into the holes on the rear panel with a special lock mechanism. To fit the cover, first insert it into the hole and then rotate it counterclockwise with a screwdriver until it is locked. To unlock, apply the procedure in reverse.



#### CAUTION

- Keep the shipping bolts in a safe place to reuse when the product needs to be moved again in the future.
- Never move the appliance without shipping bolts properly fixed in place!

## Installation Instructions


### Leveling the product



#### **WARNING**

- Do not use any tools to loosen the lock nuts. Otherwise, they can be damaged.

1. Manually (by hand) loosen the lock nuts on the feet.
2. Adjust them until the washer stands level and firmly.
3. Important: Tighten all lock nuts up again.

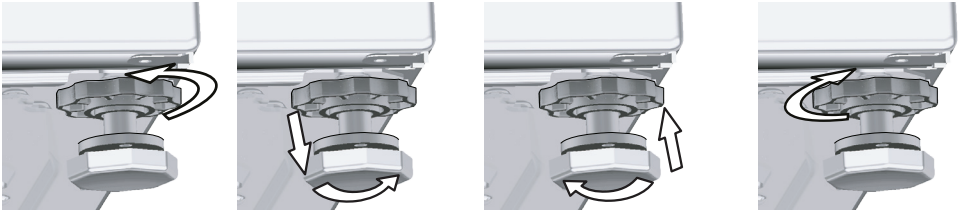

### Electrical Connection

#### **Grounding Instructions**

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances and the latest edition of the National Electrical Code, ANSI/NFPA 70.



### WARNING

- Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded.
- Do not modify the plug provided with the appliance – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.
- Be sure that the power cord is always accessible by the user after the appliance is installed.
- Never use an extension cord or adapter to connect the appliance to the electrical power due to the risk of electric shock and/or fire.
- It is the personal responsibility and obligation of the appliance owner to provide a proper and grounded outlet installed by a qualified electrician.
- Never use a damaged power cord since there is a risk of electric shock and/or fire.
- The damaged power cord must be replaced by a qualified electrician as soon as possible.
- Do not use wet hands when plugging/unplugging the power cable.
- Electrical supply voltage must conform to the voltage specifications (208-240V, 60Hz) located on the appliance.
- Only one appliance must be connected to a properly grounded individual branch circuit outlet.
- Be sure to unplug the power cable before attempting maintenance or cleaning of your appliance to minimize the risk of electric shock. Always unplug the cable by grasping the plug, not the cord.
- Do not use wet hands when plugging/unplugging the power cable.

## Installation Instructions

### Power supply and circuit

Important:

- Wall power connection should comply with national regulations.
- The wiring for the electrical outlet circuit must be sufficient to meet the appliance requirements. Use of a Ground Fault Circuit Interrupter (GFCI) is recommended.
- The voltage and maximum total current are specified in the section “Specifications”.
- The appliance must not be directly connected to the wall power in case of absence of junction box.
- Connection via extension cords or multi-plugs should not be made.




### WARNING

- A damaged power cable must be replaced by a qualified electrician.
- The appliance must not be operated unless it is repaired! There is the risk of electric shock!

15 Amp. Fuse or circuit breaker, 208-240 volt, 60 Hz, grounded, alternating current

Properly grounded 4-prong receptacle is to be located so the power supply cord is accessible when the product is in installed position.

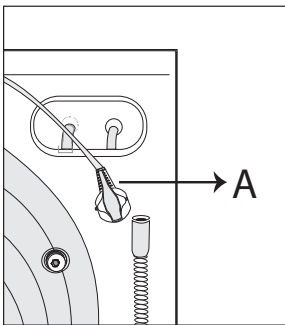

**(A)** After the shipping bolts hole covers are fitted in the holes, the power supply hole cover (supplied in the bag with the owner’ guide) has to be fitted to the hole.

## Installation Instructions

### Water Supply Connection


Your product comes with both cold and hot water connections. Connect the blue marked cold water supply hose to the cold water inlet valve/faucet and the red marked hot water intake hose to the hot water inlet valve/faucet. Screw the connecting bolts by hand and tighten the connection properly using a plier. Over tightening may cause damage on bolted connection.



#### WARNING

- Be sure that the water connection of this product is handled by a qualified service technician or a plumber.

The product has two bolted  $\frac{1}{2}$ " water supply hoses and  $\frac{3}{4}$ " female hose connections that can be connected to  $\frac{3}{4}$ " hot and cold water faucets.

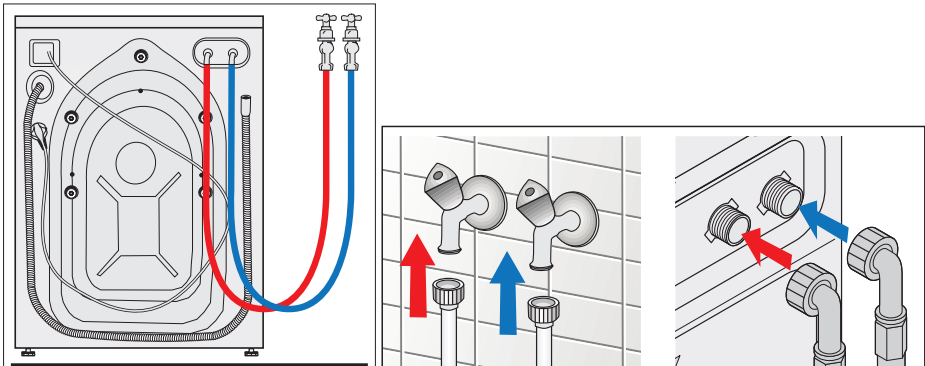

#### WARNING

- Be sure that there are rubber seals located on the hose connections. These seals and adjustable bolts ensure a safe connection without leaking. After the water connection is done, turn on both water faucets slowly and completely to check any water leaks.
- Be sure that water supply hoses are not crushed and they have no kinking, bulges or cuts before the water connection.

## Installation Instructions

The water pressure must be between 15-145 psi (1-10 bar) for the proper operation of this washer. 1 bar corresponds to more than 2.1 gallons (8 liters) per minute flow rate with a fully open faucet. Water inlet hoses and valves should withstand a water pressure of 145 psi (10 bar) at maximum. If the pressure is higher than 145 psi, a pressure-reducing valve must be installed before the water inlet. If the water pressure is lower than 15 psi (1 bar), water fill time may extend or water inlet valve may shut off completely.

- Hot water supply temperature must not exceed 140°F (60°C). (Ideally 120°F (48°C))
- Do not connect the washer to an unpressurized water boiler since water pressure may not be adequate for proper operation.
- Do not remove the filters located on the water supply hoses (on faucet/hose and hose/inlet valve connections).
- Always use genuine “Blomberg” water supply hoses when connecting with this product. Old or worn-out hoses must not be reused. It is not advised to extend inlet or drain hoses, if necessary consult your dealer or technical service about hose extensions.
- Hot and cold water faucets must always be easily accessible to the user.
- At the end of a washing day, turn off water faucets to prevent any leakage or water damage that may occur due to a faulty condition of the appliance.
- Check the appliance and inlet hose connections for water leakage after each use. If there is leakage, turn off the appliance and water faucets and call service.
- Check the water inlet and drain hose connections regularly for any leakage. Hoses should be replaced every 5 years.
- If there is no hot water supply, hot water valve must be connected to a cold water faucet nevertheless. Both water valves should be connected to water supply for proper operation of your washer.

### Drainage




#### WARNING

- Drain hose should not be bent. Be sure that there are no kinks or cuts on it.
- Drain hose outlet must not contact the drained water.

Drain hose may be connected into a sink, into the drain of a sink, to a standpipe and floor drain.

- When connecting into a sink, the drain hose should be placed at the edge of the sink and secured with the hose guide supplied by the manufacturer. Additionally, the guided hose may be tied to the water faucet with a strap for extra security.
- Drain hose may be connected into the drain of a sink . Be sure that the connection is safe and not leaking. An additional clip etc can be used for safe connection.
- Drain hose may also be connected to a minimum 1.26 in (32 mm) diameter stand pipe.
- Be sure to secure the drain hose tightly to the pipe (stand pipe, drain pipe/edge of the sink) with a strap etc.
- The hose should be placed between 16 and 39 in. (40 and 100 cm) from the floor level
- If you have floor drain system, you can place the drain hose in the hole located on the floor.

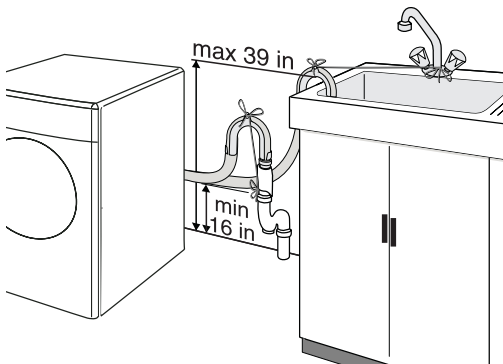



## **Installation Instructions**

### **Installation Checklist**

- Water inlet hose and accessory bags must be removed from the drum.
- Transportation/shipping bolts must be removed.
- Product must be properly leveled by using the adjustable feet.
- Water inlet hose is connected to the water faucet, secured and checked for any leaks by turning on faucet.
- Drain installation is done properly and drain hose is checked and secured to prevent any flooding.
- Product has to be plugged to a properly grounded live wall power outlet.
- Be sure that power outlet, water faucets and drain outlet must be always accessible to the user.

### **Transportation**

Before you transport the product, you should carry out the following:

1. Turn off both water faucets.
2. Before you disconnect the water inlet hoses, decrease the pressure inside hoses by turning on the product choosing any wash program. As soon as the Start/Pause/Cancel led starts blinking, turn off the appliance. You may securely disconnect inlet hoses without any water gush.
3. Disconnect the drain hose and hang it on the back plate by inserting into the holder plastic brackets.
4. Unplug the power cord and hang it on the back plate properly.
5. Remove bolt hole covers and reinstall shipping bolts to their places. You can apply the procedure in chapter "Removing shipping bolts" in reverse to accomplish this.
6. Be sure that rubber bushes are properly located in holes and bolts are screwed back tightly for secure transportation of the appliance.

### Disposal Information

#### Packing Disposal



#### **WARNING**

- Packing materials of the appliance are potentially dangerous for children. Materials such as plastic bags, films or wrappings must be kept away from children or disposed properly to prevent the danger of suffocation.



#### **CAUTION**

- Packing materials are made of biodegradable and recyclable substances. You should consult your local authority or dealer about the environmental-friendly disposal of the packaging of your appliance.

### Appliance Disposal



#### **WARNING**

- Be sure to unplug the power cable, cut off the plug and disable the door lock before you dispose your old appliance. Otherwise there is a risk of injury for children and pets.



#### **CAUTION**

- Old appliances contain many recyclable parts. You should consult your local environmental authority about a proper disposal. A proper disposal enables recycling therefore protects the environment.

## 4 Operating Instructions

### First Use



#### WARNING

- To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS before operating this appliance.

#### Before the first use,

- Be sure that the product is installed properly by a qualified installer or service technician in accordance with all national and local codes and requirements.
- Read all instructions carefully before using the washer.
- Check that shipping bolts are completely removed.
- Be sure that the location of installation has proper electrical supply voltage and plumbing system needed for the operation of the appliance.
- Turn on both water faucets and be sure that there are no leaks on hose-faucet connection points or on hoses themselves.



Use only HE High Efficiency detergent.

- Check that the drum is empty.

## Operating Instructions

- Turn on the product, choose ““Tub Clean”” cycle on the program selector knob and start the washer as empty and without any laundry additives. When the cycle is finished, your product is ready for subsequent uses.



### WARNING

- Be sure that silica gel package, which is located inside the drum, has been removed from the drum before the first use. Granules in this package do not contain poisonous or harmful materials. It is not a detergent and it is not edible. Do not swallow. Do not use for any purpose. Throw into the recycle bin together with this package before the first usage of the product.

## Laundry Tips

### Sorting the laundry


































### CAUTION

- Always follow the fabric care instructions of garment manufacturers. These instructions would give you proper guidance on suitable wash and drying cycles, operating temperatures and bleach usage.

# Operating Instructions

## LAUNDRY WASH SYMBOLS

Machine Wash Symbols											
<b>WASH</b>	Water Temperatures	Maximum	95°C	70°C	60°C	50°C	40°C	30°C			
	Symbol(s)	••••	••••	••••	••••	••	•				
Drying Symbols											
<b>DRYING</b>	Drying Settings										
		At any temperature	At high temperature	At medium temperature	At low temperature	Without heating	Hang to dry	Lay to dry	Hang wet to dry	Lay in shadow to dry	Dry-cleanable
Iron -											
<b>IRON</b>	Dry or Steam		Iron at high temperature	Iron at medium temperature	Iron at low temperature		Do not iron	Iron without steam			
	Maximum temperature		200 °C	150 °C	110 °C						
BLEACH											
	All bleaches are allowed		Bleach (sodium hypochlorite) can be used	Bleach is not allowed	Only bleaches without chlorine are allowed						



### CAUTION

- Wash “machine washable” or “hand washable” labelled products only with an appropriate program. Dry these type of clothes by hanging or laying down. Do not dry them in the machine.

## Operating Instructions

Sort the laundry according to the following fabric types, color groups and wash them separately:

- White and color fast fabrics
- Non-fast, colored fabrics
- Permanent press items(mens shirt, dress pants, poly-cotton blends)
- Delicate fabrics (silk, rayon etc.)
- Woolens (only wash woolens that are labeled “machine washable” or “hand washable”)
- Hand knits (They should be placed inside out in the washer)



### CAUTION

- Do not wash dark colors with light colors and whites. Color items may bleed and white and light colored items may be discolored. Avoid extended contact of damp clothes before or after washing to prevent dye transfer.
- Wash heavily and lightly soiled items separately.
- Lint producers (towels, linen etc) and lint collectors (easy care, permanent press) should be washed separately. Lint producers should be washed inside-out.

## Preparing the laundry

- Items of laundry with metal parts (e.g. underwire bras, belt buckles, metal buttons) will damage the drum. Remove metal parts or place the items in a cloth bag, pillow case, or something similar.
- Remove any non-washable items and accessories from laundry before washing.
- Empty pockets, remove all foreign objects (e.g. coins, pens, paper clips). If possible: Turn pockets inside out and brush.
- Place small items of laundry (e.g. tights) in a cloth bag, pillow case or something similar. This can also help you to avoid searching for lost socks.
- Handle curtains special care. Remove non-stainless curtain runners and lead tape. Place runners that can't be removed in a cloth bag, pillow case or something similar.

## Operating Instructions

- Heavy stains should be pretreated with soapy water appropriately before washing (Do not rub or scratch the stained area). If in doubt, check with a pharmacist or dry-cleaner.
- Use only dyes/discoloring and anti-scaling agents suitable for machine wash. Make sure to follow the instructions on the package.

### Loading the washer

Maximum load capacity depends on the fabric type of laundry, soiling amount of laundry and program cycle you wish to use.



#### **CAUTION**

- Do not exceed the maximum load capacity of the selected program cycle. Washing results are adversely affected by an overloaded drum. Overloading may also cause wrinkling and abrasion on clothes.

Make sure power button is off before loading the machine. To load the machine,

- Pull the door handle.
- Place laundry items loosely in the drum.
- Mix small and large items for an even load distribution. Large items should be loaded first. Large items should not be more than half of the total wash load.
- If you put a wash bag or net which is filled with small items in the drum, put an additional wash bag to prevent load unbalance. Both wash bags should have the same amount of items to provide an even load distribution.
- Before washing a single or a few items such as a pillow, a teddy bear, a single or a pair of shirts, sweat shirts etc, put some additional items in the drum for better load distribution and spinning.
- Make sure that there is no clothing obstructing the door or caught between the door and rubber seal.
- Push the loading door firmly and make sure that the door has been closed properly (especially if you load the machine with full load or big items).

## Operating Instructions

- In case the door is not locked, door led remains off. In that case, door should be opened and closed again firmly until the door led lights up.
- If the door is not closed completely, the machine will not start. This is a safety precaution. The front door is locked until end of the selected program and it can not be opened until the door led on the panel is off following the end of the program.
- Unload the washed items just after the program cycle has finished. Delay of unloading may cause wrinkling and unwanted odor on laundry.
- Check to see any small metal items such as pins, coins etc left in rubber seal while unloading the machine. Any residual metal items may cause rusting on the rubber seal.
- If there is any water left in rubber seal, remove with a soft cloth.

## Detergent Use

### About Detergent



#### CAUTION

- Your product is designed to use only HE (high efficiency) detergents. You should always look for the following symbol on the label of detergents:

If you use a non-HE detergent with this product, high sudsing will occur. High sudsing will decrease tumble action effectiveness, washing and rinsing performance worsen. Suds may flow out of detergent dispenser giving damage to your product.



#### CAUTION

- The detergents labeled as “HE compatible” may also lead to high sudsing and inefficient tumble action. Don't use such detergents.





Use only HE High Efficiency detergent.

Always follow the instructions and information given by laundry detergent manufacturers when using these products.



### **WARNING**

- Store laundry detergents and additives in a cool, dry place out of children's reach due to danger of chemical poisoning and skin irritation.

### **Detergent Quantity**

The amount of washing detergent to use depends on the amount of laundry, the degree of soiling and water hardness.

For small amounts of laundry or only slight soiling use accordingly less detergent.

Too much detergent causes an excessive amount of foaming, bad washing and rinsing results and a strain on water resources.

Too little washing detergent causes laundry to turn grey and calcification of the machine. Recommended amount of powder detergent is max. 1/3 cup (80 ml). Recommended amount of liquid detergent is max. 1/4 cup (60 ml).

#### **Light soiling**

No visible stains or soiling

#### **Normal soiling**

A few visible light stains or soiling

#### **Heavy soiling**

Highly visible stains or soiling

### Detergent Dispenser

Detergent dispenser of your product has three separate compartments for main wash detergent, fabric softener and liquid bleach. Each of these laundry additives are automatically dispensed at appropriate time during wash program.



#### CAUTION


- Do not put laundry additives directly in the wash drum. Always use the detergent dispenser.
- After adding laundry additives do not close the drawer too quickly. This may cause early dispensing of the additives thus poor wash results and fabric damage.
- Do not open the drawer during wash program (except for addition of liquid main wash detergent at the beginning of main wash water intake).

Dispenser compartments are as follows:

-left compartment numbered as “II” (main wash compartment)

-middle compartment marked as “☼” (liquid fabric softener compartment)

-right compartment numbered as “I” (liquid chlorine bleach compartment)

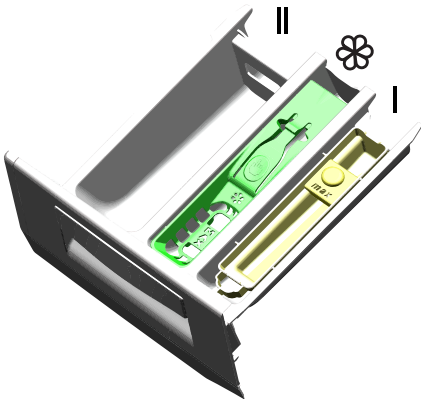

### **(II) Main Wash Detergent Compartment**

Add HE (High efficiency) powder detergent to this compartment numbered as “II” before starting the wash program.

Use the detergent manufacturer’s dosing cup and follow the instructions on the package.

If you use a liquid detergent, be sure to use a HE (High efficiency) detergent and add detergent directly to main wash compartment before operating your machine. If you observe liquid detergent stains on washed items, it is recommended for subsequent wash cycles that you should add liquid detergent during first water intake.



Use only HE High Efficiency detergent.

Color-safe bleach in powder or liquid form may be added into main wash detergent compartment with main wash detergent. Be sure to use main wash detergent and color-safe bleach in same form (either powder or liquid) when adding into main wash compartment.

### **Liquid Fabric Softener Compartment**

Add the recommended amount of liquid fabric softener to the middle compartment marked as “” and dilute it with warm water to the maximum fill line.



#### **CAUTION**

- Especially concentrated fabric softeners must be diluted with warm water otherwise siphon may be clogged in time.

Do not fill the fabric softener above the maximum fill line as any excess amount will mix into the wash water and you will have to re-fill the compartment. Do not pour the softener directly onto laundry, it may cause stains.


Liquid fabric softener is automatically dispensed during the final rinse of wash program.

## Operating Instructions

### **Using liquid detergents**

#### **If the product contains a liquid detergent cup:**

- Make sure that you have placed the liquid detergent cup in compartment no. “2”.
- If the liquid detergent has lost its fluidity, dilute it with water before putting in the detergent cup.

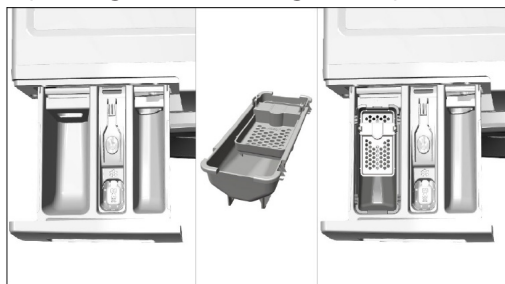

#### **If the product does not contain a liquid detergent cup:**

- Do not use liquid detergent for the prewash in a program with prewash.
- Liquid detergent stains your clothes when used with Delayed Start function. If you are going to use the Delayed Start function, do not use liquid detergent.

### **(I) Liquid Chlorine Bleach Compartment**

Add liquid chlorine bleach to the right compartment numbered as “1”. Measure 1/3 cup (80 ml) of bleach and pour it into the special container located in the right compartment of the dispenser. This container ensures dispensing and dilution of bleach during the first rinse of wash cycle. There is a maximum fill line on the container. Do not exceed the maximum fill line to prevent early dispensing. Early dispensing may damage your clothes.

## Operating Instructions



### CAUTION

- Be sure that bleach container is present in the right compartment of dispenser before you add liquid bleaching agent. You may remove bleach container if you would not use bleach. However do not put any other laundry additives to the empty compartment.
- Be sure to choose extra rinse option if you are using bleach in wash program. Bleach must be rinsed from laundry properly otherwise it may cause skin irritation.

Bleach is automatically dispensed and diluted during the first rinse of wash program.



### WARNING


- Bleach may only be used in Regular/Cotton and Permanent Press cycles. Don't use bleach with delicates, hand washables or wools, it will lead to clothes damage.
- The liquid bleach cup insert **must** be removed if not using liquid bleach to avoid water leaking from the dispenser.

## Water Consumption

Your clothes washer automatically adjusts the water consumption according to load amount. This feature ensures high wash performance results with efficient water and energy consumption.

## 5 Selecting a Program and Operating Your Washer-Dryer

### Control panel

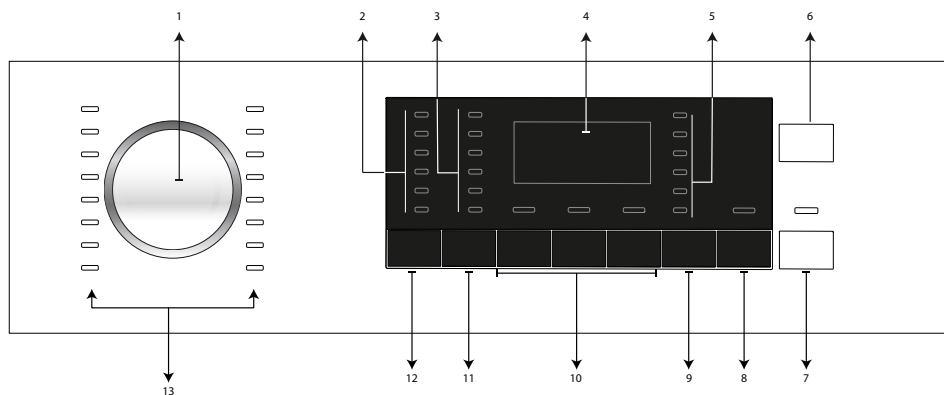

- 1 - Program selection knob
- 2 - Temperature selection lights
- 3 - Spin speed selection lights
- 4 - Display
- 5 - Drying Program Lights
- 6 - On / Off button
- 7 - Start / Pause button
- 8 - End Time Adjustment button
- 9 - Drying Level Adjustment button
- 10 - Auxiliary Function buttons
- 11 - Spin Speed Adjustment button
- 12 - Temperature Adjustment button
- 13 - Program Selection lights

## Selecting a Program and Operating Your Washer-Dryer

### Display symbols



- a- Washing indicator
- b - Rinsing indicator
- c - Spinning indicator
- d- Drying indicator
- e- End indicator
- f- No Water indicator
- g - Duration Information display
- h- Loading Door Lock indicator
- i- Child Lock indicator

### Preparing the machine

1. Check if the hoses are connected tightly.
2. Plug in your machine.
3. Turn the tap on completely.
4. Place the laundry in the machine.
5. Add detergent and fabric softener.

## Selecting a Program and Operating Your Washer-Dryer

### Program and consumption table

(for washing)

Program		Load Capacity	Water Consumption (lit)	Energy Consumption (kWh)	Min Spin Speed	Max Spin Speed	Heavy Soil	Soak	Extra Rinse	Drying	Selectable Temperature Range	
Normal / Regular Cotton	Extra Hot	1/2 Load	30	0,65	EXTRA HIGH	EXTRA HIGH	•	•	•	•	TAP COLD	EXTRA HOT
Perm Press	HOT	1/2 Load	70	1,00	NO SPIN	HIGH	•	•	•	•	TAP COLD	HOT
Hand Wash / Wool	WARMER	1/5 Load	50	0,55	NO SPIN	HIGH			•		TAP COLD	WARMER
Quick Wash 25'	WARM	1/2 Load	30	0.2	NO SPIN	HIGH				•	TAP COLD	WARM
Heavy Duty	EXTRA HOT	Full Load	60	1,00	NO SPIN	EXTRA HIGH	*		•	•	TAP COLD	EXTRA HOT
Delicates & Dark	WARMER	1/4 Load	55	0,35	NO SPIN	HIGH		•			TAP COLD	WARMER
Tub Sanitize	EXTRA HOT	-	75	2,20	LOW	LOW					EXTRA HOT	EXTRA HOT
Jogging Wear	WARMER	1/2 Load	65	0,65	NO SPIN	HIGH			•		TAP COLD	WARMER
Down Wear	HOT	1/4 Load	72	0.65	NO SPIN	HIGH		•	•		TAP COLD	HOT

• : Selectable.

\* : Automatically selected, no cancelling.



## Selecting a Program and Operating Your Washer-Dryer



### CAUTION

- The auxiliary functions in the table may vary according to the model of your machine.
- Water and power consumption may vary subject to the changes in water pressure, water hardness and temperature, ambient temperature, type and amount of laundry, selection of auxiliary functions and spin speed, and changes in mains voltage.
- You can see the washing time of the program you have selected on the display of the machine. It is normal that small differences may occur between the time shown on the display and the real washing time.
- “Selection patterns for auxiliary functions can be changed by the manufacturer. New selection patterns can be added or removed.”
- “The spin speed of your machine may vary according to the program; this spin speed cannot exceed the max. spin speed of your machine.”

## Selecting a Program and Operating Your Washer-Dryer

### Selecting the washing program

1. Determine the program suitable for the type, quantity and soiling level of the laundry in accordance with the "Program and consumption table".
2. Select the desired program with the **Program Selection** knob.



#### CAUTION

- Programs are limited with the highest spin speed appropriate for that particular type of fabric.
- When selecting a program, always consider the type of fabric, colour, soiling level and permissible water temperature.
- Always select the lowest appropriate temperature. Higher temperature means higher electricity consumption.

### Washing programs

Depending on the type of fabric, use the following main programs.



#### CAUTION

- You can set you machine to switch to drying step at the end of washing cycle by pressing the Drying button after you have selected the washing program for your laundry. Each time you press the button, info line shows at which step the drying process will take place and the relevant symbol will turn on. If you want, by continuing to press the button, you can perform drying for the maximum period of time allowed by the machine for drying.
- Symbols in the display are schematic and may not match the product exactly.
- When you will perform washing and drying by using the Drying function of your machine, load maximum 5 kg of laundry into the machine. If you load excessively, your laundry will not dry and machine will operate for a long time and consume more energy.

## Selecting a Program and Operating Your Washer-Dryer

### • Normal / Regular Cotton

You can wash your durable white and colorfast items with this cycle. Washes with vigorous tumbling movements. It is recommended for your cotton or linen items (such as bed sheets, pillowcases, jeans, towels, bathrobes, garments, T-shirts, sweat-shirts, etc.). You can select wash temperature according to care label of items. Heavy soil should be chosen for items that need extra hygiene such as baby clothes, kitchen towels and garments.



#### CAUTION

- You can dry your laundry after the washing cycle without any interruption (automatic or timed drying can be performed after washing). For this, you must also select the Drying function before starting the washing program.
- According to the drying selections which you will add to the washing programs, you can see when the program will end on the display of the machine.
- If you don't want drying to take place after the program you have selected, press and hold the Drying auxiliary function button until the Drying light is turned off.

## Program and consumption table

### • Perm Press

You can wash your easy care items on this cycle. Washes with gentler tumbling movements and in shorter washing cycles. It is recommended for your cotton, synthetic or blended items (such as shirts, pants, wrinkle-free items, etc.). You can select wash temperature according to care label of items.



### CAUTION

- You can dry your laundry after the washing cycle without any interruption (automatic or timed drying can be performed after washing). For this, you must also select the Drying function before starting the washing program.
- According to the drying selections which you will add to the washing programs, you can see when the program will end on the display of the machine.
- If you don't want drying to take place after the program you have selected, press and hold the Drying auxiliary function button until the Drying light is turned off.

### • Hand Wash / Wool

You can wash your woollen/delicate clothes that bear “hand wash only” labels for which hand wash is recommended on this program. It washes the laundry with very tender washing movements without damaging your clothes.



APPAREL CARE

“The wool wash cycle of this machine has been approved by The Woolmark Company for the washing of machine washable wool products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. M1527.”

“In UK, Eire, Hong Kong and India the Woolmark trade mark is a Certification trade mark.”



### CAUTION

- Drying function cannot be selected for the woollen wash program.

## Program and consumption table

### • Quick Wash 25'

Use to wash your lightly soiled and unstained, small amount of cotton laundry in 25 minutes.



#### CAUTION

- You can dry your laundry after the washing cycle without any interruption (automatic or timed drying can be performed after washing). For this, you must also select the Drying function before starting the washing program.
- According to the drying selections which you will add to the washing programs, you can see when the program will end on the display of the machine.
- If you don't want drying to take place after the program you have selected, press and hold the Drying auxiliary function button until the Drying light is turned off.

### • Heavy Duty

Use to wash your heavily soiled, durable cotton and linen laundry. Heavy Soil option is automatically selected for a perfect cleansing. Heavy Soil option prolongs heating step and adds extra rinsing.



#### CAUTION

- You can dry your laundry after the washing cycle without any interruption (automatic or timed drying can be performed after washing). For this, you must also select the Drying function before starting the washing program.
- According to the drying selections which you will add to the washing programs, you can see when the program will end on the display of the machine.
- If you don't want drying to take place after the program you have selected, press and hold the Drying auxiliary function button until the Drying light is turned off.

## Program and consumption table

### • **Delicates&Dark**

Use this program to protect the colour of your dark-coloured and delicate garments. It has more sensitive tumbling movements and does not do intermediate spinning compared to the permanent program. It may be used for coloured cotton, synthetic or blended clothes for which sensitive washing is recommended.

### • **Rinse**

Use when you want to rinse or starch separately.

### • **Spin & Drain**

Use to drain the water in the machine.

### • **Tub Sanitize**

Use regularly (once in every 1-2 months) to clean the drum and provide the required maintenance. Run the program without any laundry in the machine. To obtain better results, put powder limescale remover for washing machines into detergent compartment nr. "2". When the program is over, leave the loading door ajar so that the inside of the machine dries.



### **CAUTION**

- This is not a washing program. It is a maintenance program.
- Do not run the program when there is something in the machine. If you try to do so, the machine detects that there is a load inside and aborts the program

### • **Jogging Wear**


This program is used to wash half capacity of normally or lightly soiled daily cotton, synthetics or blended clothes. e.g.: daily clothes and sportswear that have been used only once.

### • **Down Wear**

Use this program to wash your coats, vest, jackets etc. containing feathers with a "machine-washable" label on them. Thanks to special spinning profiles, it is ensured that the water reaches the air gaps amongst the feathers.

## Selecting a Program and Operating Your Washer-Dryer

### Temperature selection

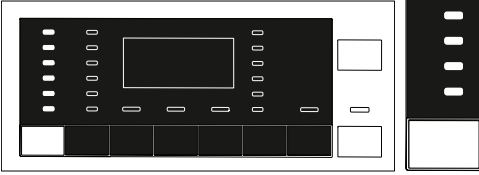

Whenever a new program is selected, the recommended temperature for the program appears on the temperature indicator. It is possible that the recommended temperature value is not the maximum temperature that can be selected for the current program.

Press the **Temperature Adjustment** button to change the temperature.



#### CAUTION


- Temperature Adjustment button works only backwards. For example, when you want to select 60 °C when the display shows 40 °C you need to press the button for several times until you reach 60 °C by going backwards from 40 °C.
- If you scroll to Cold Wash option and press Temperature Adjustment button again, the recommended maximum temperature for the selected program is displayed. Press the Temperature Adjustment button again to decrease the temperature.

Finally, Cold light indicating the cold wash option appears on the display.

You can also change the temperature after the washing has started. You can select the desired temperature after washing starts but you must do this before heating step starts.

## Selecting a Program and Operating Your Washer-Dryer

### Spin speed selection

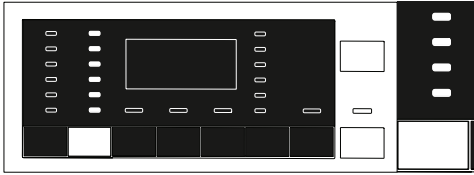

Whenever a new program is selected, the spin speed recommended for the selected program is displayed on the **Spin Speed** indicator.



#### CAUTION


 
- It is possible that the recommended spin speed value is not the maximum spin speed that can be selected for the current program.

Press the **Spin Speed Adjustment** button to change the spin speed. Spin speed decreases gradually.

Then, depending on the model of the product, "Rinse Hold" and "No Spin" options appear on the display.




#### CAUTION

- Spin Speed Adjustment button works only backwards. For example, when you want to select 1000 rpm when the display shows 800 rpm, you need to press the button for several times until you reach 1000 rpm by going backwards from 800 rpm.
- Rinse Hold option is indicated with “” symbol and No Spin option is indicated with “” symbol.



## Selecting a Program and Operating Your Washer-Dryer

### If you want to spin your laundry after the Rinse Hold function:

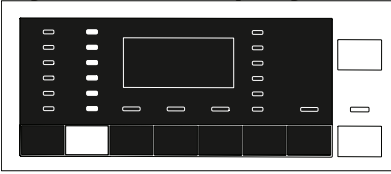

- Adjust the **Spin Speed**.
- Press **Start / Pause / Cancel** button. The program resumes. Machine drains the water and spins the laundry.

If you want to drain the water at the end of the program without spinning, use **No Spin** function.



#### CAUTION

- In programs that do not allow spin speed adjustment, when Spin Speed adjustment button is pressed, spin speed light does not change and the buzzer is heard.

You can also change the Spin Speed after the washing starts. You can select spin speed by pressing spin speed adjustment button after washing has started but before the spinning step.

### Auxiliary function selection for drying

When a new program is selected, press Auxiliary Function Selection button to adjust the drying option that is suitable for the selected washing program.



#### CAUTION

- In programs that do not allow drying adjustment, when Drying auxiliary function button is pressed drying light does not change and the buzzer is heard.
- Only for drying programs, press Auxiliary Function Selection button to adjust the suitable drying option.

## Selecting a Program and Operating Your Washer-Dryer

### Program and consumption table (for drying)

Program		Load Capacity	Water Consumption(lt)	Energy Consumption(kWh)	Min Spin Speed	Max Spin Speed	Heavy Soil	Soak	Extra Rinse	Drying	More Dry	Normal Dry	Damp Dry	Time dry	Selectable Temperature Range	
Cotton Dry	-	1/2 Load	50	3,25	EXTRA HIGH	EXTRA HIGH				*	•	•	•	•	-	-
Perm Press Dry	-	1/3 Load	45	2,10	NO SPIN	NO SPIN				*		•	•	•	-	-
Baby Sanitize Wash&Dry	Hot	1/4 Load	145	3,80	EXTRA HIGH	EXTRA HIGH			*	*	•	•	•	•	WARM	EXTRA HOT
Wash&Dry	Hot	1/2 Load	95	5,00	EXTRA HIGH	EXTRA HIGH				*	•	•	•	•	TAP COLD	HOT
Wash&Wear	Warm	1/16 Load	35	0,60	HIGH	HIGH			•	*				•	TAP COLD	WARM
Wash&Wear	Warm	1/8 Load	45	1,10	HIGH	HIGH			•	*				•	TAP COLD	WARM

• : Selectable

\* : Automatically selected, not cancellable.

## Selecting a Program and Operating Your Washer-Dryer

### Drying programs



#### **WARNING**

- Machine cleans the lint coming off the laundry automatically during the drying cycle. Machine uses water during drying. For this reason, water tap of the machine should be open also in the drying programs.
- When a new program is selected, press Auxiliary Function Selection button to adjust the drying option that is suitable for the selected washing program.



#### **CAUTION**

- Drying programs contain spinning step. Your machine performs this process in order to shorten the drying time. When drying is selected, spin speed setting is in Maximum spin speed range.
- In programs that do not allow drying adjustment, when Drying auxiliary function button is pressed drying light does not change and the buzzer is heard.
- Only for drying programs, press Auxiliary Function Selection button to adjust the suitable drying option.
- While there is a water cut, both washing and drying could not be performed.

#### • **Perm Press Dry**

Use to dry damp synthetic laundry equivalent to 3 kg dry weight. This program performs drying only.



#### **CAUTION**

- For the dry weights of the laundry, see Section 4, Step 4.5

## Selecting a Program and Operating Your Washer-Dryer

### • Cotton Dry

Use to dry damp cotton laundry equivalent to 5 kg dry weight. This program performs drying only.



#### CAUTION

- In order to dry the laundry which contains only towels and bathrobes, load 4 kg laundry maximum.
- For the dry weights of the laundry, see Section 4, Step 4.5

## Washing and drying programs



#### WARNING

- Machine cleans the lint coming off the laundry automatically during the drying cycle. Machine uses water during drying. For this reason, water tap of the machine should be open also in the drying programs.


### • Wash & Dry

Use to wash cotton laundry up to 5 kg and dry it right after the washing cycle without making any other selection.



#### CAUTION

- When this program is selected, external Drying auxiliary function cannot be selected.

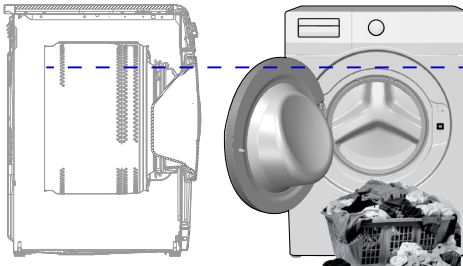

In 5 kg Wash & 5 kg Dry program, it is recommended to load laundry until the level indicated in the above figure for ideal drying conditions (you will see the level arrow when you open the loading door).

## Selecting a Program and Operating Your Washer-Dryer

### • Wash & Wear

Use to wash and dry 0.5 kg laundry (2 shirts) in 40 minutes or 1 kg laundry (5 shirts) in 60 minutes.



#### CAUTION

- Wash&Wear program is intended to quickly wash and dry the daily clothes which were worn for a short period of time and are not soiled. This program is suitable for the laundry which contains thin-texture and can dry quickly. (shirts, t-shirts)
- Other drying options or programs should be used for the thick texture laundry which take longer to dry.

### • Baby Sanitize Wash&Dry

Use to wash and then immediately dry your laundry up to 2 kg which requires an anti-allergic and hygienic washing (baby clothes, bed sheets, bedding, underpants, etc. cotton items).




#### CAUTION

- BabyProtect+ program is tested and approved by “The British Allergy Foundation” (Allergy UK) in United Kingdom.

## Selecting a Program and Operating Your Washer-Dryer

### Auxiliary function selection

Select the desired auxiliary functions before starting the program. Whenever a program is selected, lights of the auxiliary functions that can be selected together with that program illuminate.

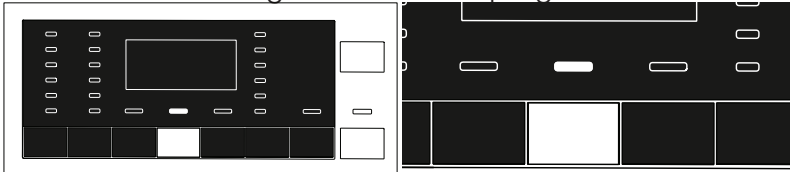

#### CAUTION

- Light of the auxiliary function that cannot be selected with the selected program does not illuminate. When you press the buttons of these auxiliary functions, buzzer is heard and selection is prohibited.

If the wash cycle has reached a point where you cannot select the auxiliary function, the function cannot be selected.



#### CAUTION

- Some functions cannot be selected together. If a second auxiliary function conflicting with the first one is selected before starting the machine, the function selected first will be cancelled and the second auxiliary function selection will remain active. For example, if you want to select Quick Wash after you have selected the Prewash, Prewash will be cancelled and Quick Wash will remain active.
- An auxiliary function that is not compatible with the program cannot be selected. (See "Program and consumption table")
- Some programs have auxiliary functions that must be operated with the selected program. Those functions cannot be cancelled. Auxiliary function light is already selected.

## Selecting a Program and Operating Your Washer-Dryer



### CAUTION

- If the selected dampness level (Iron Dry, Wardrobe Dry, Extra Wardrobe Dry) cannot be reached at the end of the drying cycle, your machine will extend the program duration automatically. Program will last longer.
- If Timed-Drying is selected, program is finished at the end of the drying period even if the laundry does not get dry.
- If the selected dampness level (Iron Dry, Wardrobe Dry, Extra Wardrobe Dry) is reached during drying cycle, or extra dryness is detected in the timed-drying options, program will take a shorter time. Time decrease will be shown on the display.

### • Heavy Soil

This function increases washing times for heavily soiled items for better wash results.

### • Soak

This function is used for heavily soiled items when you want to pretreat them before washing. Laundry is soaked in a relatively high amount of warm water. You can use full load and HE “High efficiency” detergent for soaking. Use 1/3-1/2 of the recommended detergent dosage for the load amount to be soaked.

### • Extra Rinse

When this function is selected, you can increase the number of current rinsing steps. Thus, sensitive skins’ risk of being affected by the remaining detergent on the clothes will be decreased.



### CAUTION

- Pressing for the first time will add single rinse, a second press will add double rinse. The third press will cancel it.

### • Drying

This function enables drying of the laundry after washing. Check with which programs this auxiliary function can be selected, from the program table.

## Selecting a Program and Operating Your Washer-Dryer

### Drying steps

#### **Damp Dry**

Drying is performed until the drying level reaches Iron Dry step.

#### **Normal Dry**

Drying is performed until the drying level reaches Wardrobe Dry step.

#### **More Dry**

Drying is performed until the drying level reaches Extra Wardrobe Dry step.



#### **CAUTION**

- Dryness level may change according to the mixture, material types, amount and dampness level of the laundry.
- Items which contain accessories such as lace, tulle, stones, beads, spacer, wire, etc. and high silk-content items should not be dried in the machine.

### **Time based drying-minutes (Time dry)**

In order to reach the desired drying level at low temperature, you select any of 30, 90 and 150 minutes of drying periods.



#### **CAUTION**

- When drying small amount of laundry (up to maximum 2 pieces), timed-drying steps in the Cottons or Synthetics drying programs should be selected.
- If the laundry is not at the desired dryness level at the end of the drying program, timed-drying can be selected to finish the process.
- When this function is selected, machine performs drying for the adjusted time irrespective of the drying level.



## Selecting a Program and Operating Your Washer-Dryer

### Time display


Remaining time for the completion of the program while it is running is displayed as "01:30" in hours and minutes format.



#### **CAUTION**

- Program time may differ from the values in section "Program and consumption table" depending on the water pressure, water hardness and temperature, ambient temperature, amount and the type of laundry, auxiliary functions selected and the changes at the mains voltage.

### End Time

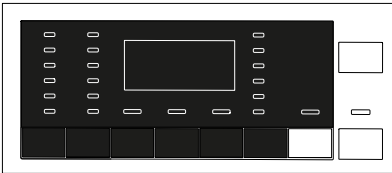

With the **End Time** function, the startup of the program can be delayed up to 24 hours. After pressing **End Time** button, the program's estimated ending time is displayed. If the **End Time** is adjusted, **End Time** light illuminates.

In order for the End Time function is activated and the program is completed at the end of the specified time, you must press **Start / Pause** button after adjusting the time. **Start / Pause** button stops flashing and remains illuminated continuously.

## Selecting a Program and Operating Your Washer-Dryer

If you want to cancel End Time function, press **End Time** button until the End Time light turns off or press **On / Off** button to turn off and on the machine.

1. Open the loading door, place the laundry and put detergent, etc.
2. Select the washing program, temperature, spin speed and, if required, the auxiliary functions.
3. Set the end time of your choice by pressing the **End Time** button. **End Time** light is illuminated.
4. Press **Start / Pause** button. Time countdown starts. “.” symbol in the middle of the end time on the display starts flashing.



### CAUTION

- Do not use liquid detergents when you activate End Time function! There is the risk of staining of the clothes.
- Door keeps locked during the End Time countdown period. In order to unlock the door, machine should be switched to the pause mode by pressing the program start/pause button. At the end of the countdown, End Time indicator turns off, washing cycle starts and the time of the selected program appears on the display.
- When the End Time selection is completed, the time appearing on the display consists of end time plus the duration of the selected program.

## 6 Preparation

1. Turn on both hot and cold water faucets fully. Check and be sure the water connection is tight.
2. Place the laundry in the drum.
3. Add laundry additives (e.g. detergent, fabric softener,bleach).

### Starting the program



1. Close the door
2. Press Start / Pause button to start the program.
3. The light of Start / Pause button which was flashing starts to illuminate steadily now, indicating that the program has started.
4. Loading door is locked. "Locking the Door" appears on the display when the door is being locked.




#### CAUTION

- Before pressing the Start / Pause button please ensure that the front door has been closed properly. Otherwise Start / Pause button should be pressed again to start the program
- If no program is started or no key is pressed within 10 minutes during the program selection process, the product will turn off automatically. The display and all indicators will turn off.
- If you press the On / Off button, the program information set as default will be displayed.

## Preparation

### Loading door locking system

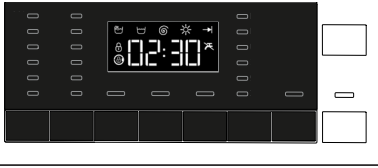

There is a locking system on the loading door of the machine that prevents opening of the loading door in cases when the water level is unsuitable for door opening.

“Loading door locked” light in the panel turns on when the loading door is locked.

### Adding or taking out laundry

**This is only possible under the following conditions:**

- During time delay,



#### **CAUTION**

- You may not add or remove laundry during the time delay (until the program starts).
- At the beginning of a washing cycle,




#### **CAUTION**

- Washer allows adding more laundry during a future step only if the water level is low enough to open the loading door or if the temperature in the washer is low

1. Press the Start / Pause button to switch the product to pause mode. The program follow-up light of the relevant step during which the machine was switched into the pause mode will flash.
2. Wait until the Loading Door can be opened.
3. Open the Loading Door and add or take out the laundry.
4. Close the Loading Door.

## Preparation

5. Make changes in auxiliary functions, temperature and speed settings if necessary.
6. Press the Start / Pause button to then restart the product.

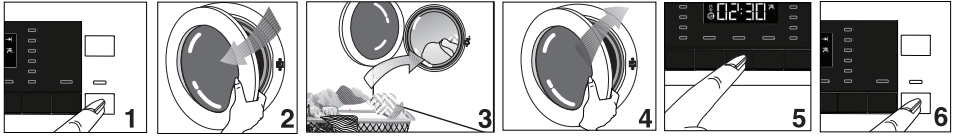

## Changing the selections after program has started

### Adding laundry after the program has started:



If the water level in the machine is suitable when you press **Start / Pause** button, “Loading door locked” light on the panel is turned off.  
If the water level in the machine is not suitable when you press **Start / Pause** button, the panel will indicate that the loading door is locked.

### Switching the machine to pause mode:



Press the **Start / Pause** button to switch the machine to pause mode.

## Preparation

### Changing the program selection after program has started:

Changing the program is not allowed when a program is already running.

If you turn the **Program Selection** knob while the program is running, buzzer is heard and change is prohibited.

You can select the new program after switching the current program to pause mode.



#### CAUTION

- The newly selected program starts from beginning.

### Changing the auxiliary function, spin speed and temperature

Depending on the step the program has reached, you can cancel or select auxiliary functions. See, “Auxiliary function selection”.

Also, you can change the spin speed, temperature and drying settings. See, “Spin speed selection” and “Temperature selection”.



#### CAUTION

- The loading door will not open if the water temperature in the machine is high or the water level is above the loading door baseline.

### Child Lock

Use Child Lock function to prevent children from tampering with the machine. Thus you can avoid any changes in a running program.




#### CAUTION

- You can switch the machine on and off with On / Off button when the Child Lock is active. When you switch on the machine again, program will resume from where it has stopped.
- Machine will give an audio alarm when the buttons are pressed if the child lock is active.


## Preparation

### To activate the child lock:

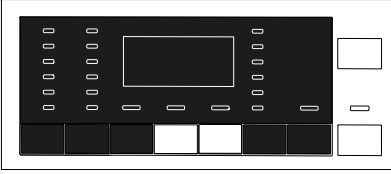

**Press and hold 2nd and 3rd auxiliary function buttons for 3 seconds.** After the countdown as “Child Lock 3-2-1” on the display is over, “Child Lock Enabled” appears on the display. You can release **2nd and 3rd Auxiliary Function** buttons when this warning is displayed.


### To deactivate the child lock:

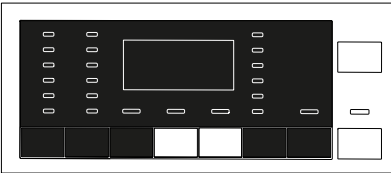

**Press and hold 2nd and 3rd auxiliary function buttons for 3 seconds.** After the countdown as “Child Lock 3-2-1” on the display is over, “Child Lock Enabled” is turned off on the display.

## Preparation

### Cancelling the program

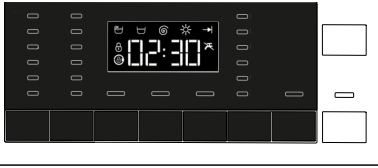

The program is cancelled when the machine is turned off and on again. Press and hold **On / Off** button for 3 seconds. After the countdown as “3-2-1” on the display is over, the machine turns off.



#### **CAUTION**

- If you press On / Off button when the Child Lock is active, the program will not be cancelled. You should cancel the child lock first. Countdown as "3-2-1" appears on the display.
- If you want to open the loading door after you have cancelled the program but it is not possible to open the loading door since the water level in the machine is above the loading door baseline, then turn the Program Selection knob to Pump+Spin program and drain the water in the machine.

### Re-spinning the laundry

The control system for an unbalanced load can pause the spinning in cases when the distribution of the laundry in the drum is not balanced.

#### **If you want to re-spin the clothes:**

1. Rearrange the previously placed clothes in the drum.
2. Select the spin program.
3. Adjust the spin speed.



## Preparation

### End of program

When the program is over the End of Program indicator illuminates and a buzzer is heard.



If you do not press any button for 2 minutes, the machine will switch to standby mode. Display and all indicators are turned off.

If you press any button or turn the Program Selection knob when the machine is in standby mode, program steps that are completed will appear on the display.

### Energy saving mode

After you switch on your machine with On-Off button, if no program is started or no other procedure is performed at the selection step or no action is taken within approx. 2 minutes after the selected program ends, your machine will switch to energy saving mode automatically. Also, if your product has a display that shows program time, this display will be completely turned off. If you turn the Program Selection knob or touch any button, lights and display will switch back to previous condition. The selections which you make when exiting from the energy efficiency may change. Please check the correctness of your selections before starting the program. If necessary, please make your settings again. This is not an error.



#### **CAUTION**

- This is a feature of this product, and not an error.

## 7 User maintenance instructions




### WARNING

- Be sure to unplug the power cable before attempting maintenance or cleaning of your appliance to minimize the risk of electric shock.

### Cleaning detergent dispenser

Remove any powder/liquid residue buildup in the dispenser drawer. To do this;

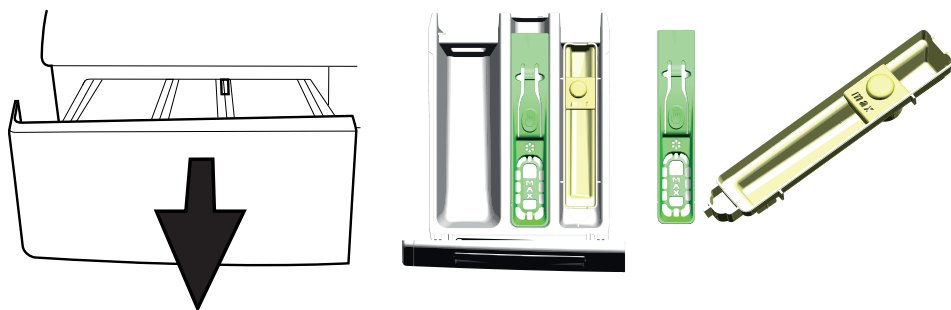

1. Press the dotted point on the siphon of the softener compartment and pull towards yourself until it is removed from the dispenser.



### CAUTION

- If more than a normal amount of water and softener/bleach mixture starts to gather in the dispenser compartments, dispenser must be cleaned.
2. Wash the dispenser drawer, liquid chlorine bleach container and siphon of softener under running warm water in a sink etc. Wear protective gloves or use an appropriate brush or sponge to avoid touching the detergent residues in the drawer when cleaning.
  3. Replace the drawer into its housing after cleaning. Check if the siphon and container are in their original locations.

## User maintenance instructions

### Cleaning the door seal

Be sure to check the rubber door seal after unloading your washer. Pull the seal back to search for any foreign objects. Residual metal objects such as pins and coins may form rust stains on rubber seal, and cause the seal to leak.

Wipe the stained areas with soapy water using a damp cloth. Then wipe with a dry cloth properly. Do not use an abrasive scrubbing agent when cleaning rubber seal.



### Cleaning the drum

Check the wash drum for any foreign objects after unloading your washer. Residual metal objects such as pins and coins may form rust stains on drum surface and your clothes. Do not use abrasive materials while cleaning the inner surface of the drum. Use soapy water with a damp cloth to wipe the inner surface, then dry it and leave the door open to let inside dry properly.

"Tub Clean" cycle with extra rinse option should be used for monthly cleaning of drum. To carry out this procedure select "Tub Clean" Program.

### Cleaning the outer cabinet and control panel

When necessary:

- Wipe the exterior panels of your machine with soapy water or mild detergent. Dry it with a soft cloth.
- Use only a soft and damp cloth to clean the control panel.

 


#### **CAUTION**

- Never use a sponge or scrubbing material. These will damage the painted and plastic parts.

### Cleaning the water inlet strainers

There is a strainer at the end of each water inlet valve at the back side of the machine and also at the end of each water inlet hose where they are connected to the faucets. These strainers prevent the foreign substances and dirt in the water to enter into the machine. Strainers should be cleaned from time to time.



- Close the water faucets.
  - Remove the nuts of the water inlet hoses to clean the surfaces of the strainers on the water inlet valves with an appropriate brush.
  - If the strainers are very dirty, you can pull them out by means of pliers and clean them.
  - Take out the strainers on the flat ends of the water inlet hoses together with the rubber seals and clean thoroughly under running water.
- Replace the rubber seals and strainers carefully and tighten the hose nuts by hand.

## User maintenance instructions

### Cleaning the drain pump filter

Filter system in your machine prevents solid items such as buttons, coins and fabric fibers clogging the pump impeller during discharging of the washing water. Thus, a good water discharge is achieved and the pump life is extended.

- If your machine fails to drain the water, the pump filter may be clogged. You may have to clean it occasionally to prevent any clogging. Water must be drained completely to clean the pump filter.

**In addition, water may have to be drained off completely in the following cases:**

- before transporting the appliance (e.g. when moving )
- when there is a danger of frost

**In order to clean the dirty filter and discharge the water:**


1. Disconnect or unplug the machine from the power supply.



### **WARNING**

- There may be water at 158F (70°C) in the drum. Therefore, the filter must be cleaned only after the inside water is cooled down to avoid hazard of scalding.

2. Open the filter cover.

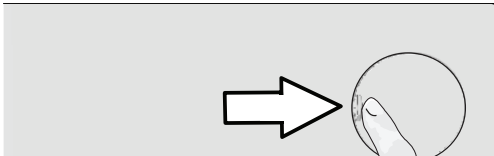


## User maintenance instructions

3. Follow the below procedures in order to drain water.

### If the product does not have an emergency water drain hose, in order to drain the water:

- a. In order to collect the water to flow out of the filter, place a large vessel in front of the filter.
- b. Turn and loosen the pump filter until water starts to flow (counterclockwise). Fill the flowing water into the container you have placed in front of the filter. Always keep a piece of cloth handy to absorb any spilled water.
- c. When the water inside the product is finished, take out the filter completely by turning it.

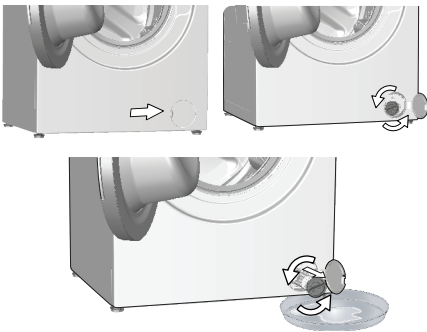

4. Clean any residues inside the filter as well as fibers, if any, around the pump impeller region.
5. Replace the filter.
6. If the filter cap is composed of two pieces, close the filter cap by pressing on the tab. If it is one piece, seat the tabs in the lower part into place first, and then press the upper part to close.

### **Descaling the washer-dryer**

Hard water can cause scale build-up inside the drum and other parts of your machine in time. Scaling may lead to some serious problems such as clogging in hoses, heater or pump failure eventually.

To prevent scaling, wash drum should be cleaned frequently. Do not use abrasive materials such as metal wool while cleaning the drum.

Take the manufacturer's instructions into account if you are using a descaling agent. Descaling agents may contain materials that are hazardous for washer components. Use descaling agents compatible for use in clothes washers.

When using a powder descaling agent, add 1 cup to the main wash compartment of the dispenser and run a regular hot cycle (with extra rinse) without any clothes and detergents.

## 8 Troubleshooting

Problem	Reason	Solution
A program cannot be started or selected.	The product may have switched to self protection mode due to a supply problem (line voltage, water pressure, etc.).	* Press and hold the On / Off button for 3 seconds to reset the product to factory settings. (See "Canceling the program")
There is water inside the product.	Some water might have remained in the product due to the quality control processes in the production.	* This is not a failure; water is not harmful to the product.
Machine does not fill with water or wash after the program was selected and the "Start/Pause/Cancel" button was pressed.	Faucets may be turned off.	* Open the water faucets fully.
	Water inlet hose may be folded.	* Check the water inlet hose and straighten if necessary.
	Water inlet strainers might be clogged.	* Clean the water inlet strainers.
	Is there power at the outlet?	* Call an electrician and have the power outlet / circuit breaker / fuse checked.
	Machine might be unplugged.	* Plug the power cord to a live electrical outlet.
	Drain hose may be folded.	* Check the drain hose and straighten if necessary.
	Machine may be in handwash, wools or soak cycle.	* Wait for a short time and tumbling will start.
	Drain pump filter or drain itself may be clogged.	* Clean the drain pump filter (See "User maintenance instructions" ). If the house drain pipes are clogged, call a plumber for assistance.
Machine does not drain water / machine drains water slowly.	Door may not be closed properly.	* Close the loading door.
	Drain hose may be folded.	* Check the drain hose and straighten if necessary.
	Drain pump filter or drain itself may be clogged.	* Clean the drain pump filter (See "User maintenance instructions" ). If the house drain pipes are clogged, call a plumber for assistance.



## Troubleshooting

<b>Problem</b>	<b>Reason</b>	<b>Solution</b>
<b>Product vibrates or makes noise.</b>	Product might be standing unbalanced.	* Stabilize the product by adjusting the feet.
	A hard substance might have entered into the pump filter.	* Clean the pump filter.
	Transportation safety bolts are not removed.	* Remove the transportation safety bolts.
	Laundry quantity in the product might be too little.	* Add more laundry to the product.
	Excessive laundry might be loaded in the product.	* Take out some of the laundry from the product or distribute the load by hand to balance it evenly in the product.
	Product might be leaning on a rigid item.	* Make sure that the product is not leaning on anything.
<b>There is water leaking from the bottom of the machine.</b>	Inlet hose connections may be leaking.	* Be sure the strainers and rubber seals of the water inlet hoses are solid and securely fitted.
	End of the drain hose may be loosely inserted into the waste pipe or sink.	* Tightly attach the drain hose to the waste pipe or sink (See "Installation Instructions, Drainage").
	House drain may be clogged.	* If the house drain pipes are clogged, call a plumber for assistance.
	Filter cap of the drain pump may not be properly fitted.	* Make sure that the pump filter cap is tightly closed.
	Hose connections inside the machine may be leaking.	* Internal hose connections (e.g. dispenser hoses, drain system) should be checked by a service technician.
<b>Product stopped shortly after the program started.</b>	The machine might have stopped temporarily due to low voltage.	* Product will resume running when the voltage is restored to a normal level.

## Troubleshooting

Problem	Reason	Solution
Product directly discharges the water it takes in.	Draining hose might not be at an adequate height.	* Connect the water draining hose as described in the operation manual.
No water can be seen in the drum during washing.	Water is inside the invisible part of the product.	* This is not a failure.
Loading door cannot be opened.	The cover lock is activated due to the water level inside the product.	* Drain the water by running the Pump or Spin program.
	Washer might be heating up the water or it may be at the spinning cycle.	* Wait until the process is over.
	Due to electrical safety mechanism, the door can only be opened a few minutes after the program has stopped.	* Wait until the process is over.
	Child lock is engaged. Door lock will be deactivated a couple of minutes after the program has come to an end.	* Wait for a couple of minutes for deactivation of the door lock.
	If the door can not be opened after minimum ten minutes the program has stopped , machine should be switched off pressing on/off button.	* If the situation remains, call the qualified service technician.

## Troubleshooting

Problem	Reason	Solution
<p><b>Washing takes longer than specified in the manual. (*)</b></p>	<p>Water pressure is low.</p>	<p>* Product waits until taking in an adequate amount of water to prevent poor washing quality due to the decreased amount of water. Therefore, the washing time extends.</p>
	<p>Supply voltage might be low.</p>	<p>* Washing time is prolonged to avoid poor washing results when the supply voltage is low.</p>
	<p>Input temperature of the water might be low.</p>	<p>* Required time to heat up the water extends in cold seasons. Also, washing time can be lengthened to avoid poor washing results.</p>
	<p>Number of rinse cycles and/or amount of rinse water might have increased.</p>	<p>* Product increases the amount of rinse water when good rinsing is needed and adds an extra rinsing step if necessary.</p>
	<p>Excessive foam might have occurred and the automatic foam absorption system might have been activated due to too much detergent.</p>	<p>* Use the recommended amount of detergent.</p>
	<p>There may be an imbalance of load in the drum.</p>	<p>* The automatic spin correction system might have been activated due to the unbalanced distribution of the laundry in the drum.</p>

## Troubleshooting

Problem	Reason	Solution
Program time does not countdown. (On models with display) (*)	Timer may stop during water intake.	* Timer indicator will not countdown until the product takes in an adequate amount of water. The product will wait until there is a sufficient amount of water to avoid poor washing results due to lack of water. Timer indicator will resume countdown after this.
	Timer may stop during the heating step.	* Timer indicator will not countdown until the product reaches the selected temperature.
	Timer may stop during spinning step.	* The automatic unbalanced load detection system might be activated due to the unbalanced distribution of laundry in the product.
Product does not switch to spinning step. (*)	There might be an unbalanced load in the product.	* The automatic unbalanced load detection system might be activated due to the unbalanced distribution of laundry in the product.
	The product will not spin if water is not drained completely.	* Check the filter and the draining hose.
	Excessive foam might have occurred and automatic foam absorption system might have been activated due to too much detergent.	* Use recommended amount of detergent.
	“No spin” setting may be adjusted.	* See “Spin Speed Selection”.
	Drain pump filter or drain itself may be clogged.	* Clean the drain pump filter (See “User maintenance instructions” ). If the house drain pipes are clogged, call a plumber for assistance.

## Troubleshooting

Problem	Reason	Solution
<b>Washing performance is poor: Laundry turns Grey. (**)</b>	Insufficient amount of detergent has been used over a long period of time.	* Use the recommended amount of detergent appropriate for water hardness and type of laundry.
	Washing was made at low temperatures for a long time.	* Select the proper temperature for the type of laundry to be washed.
	Insufficient amount of detergent is used with hard water.	* Using insufficient amount of detergent with hard water causes the soil to stick on the cloth and this turns the cloth grey over time. It is difficult to eliminate greying once it happens. Use the recommended amount of detergent appropriate for water hardness and the type of laundry.
	Excessive amount of detergent was used.	* Use the recommended amount of detergent appropriate for water hardness and type of laundry.
<b>Washing performance is poor: Stains persist or the laundry is not whitened. (**)</b>	Insufficient amount of detergent is used.	* Use the recommended amount of detergent appropriate for water hardness and the type of laundry.
	Excessive laundry was loaded in.	* Do not load the product to excess. Load with amounts recommended in the "Program and consumption table".
	Wrong program and temperature were selected.	* Select the proper program and temperature for the laundry to be washed.
	Wrong type of detergent is used.	* Use detergent appropriate for the product.
	Excessive amount of detergent was used.	* Put the detergent in the correct compartment. Do not mix the bleaching agent and the detergent.

## Troubleshooting

Problem	Reason	Solution
<b>Washing performance is poor: Stains could not be removed. Laundry could not be whitened.</b>	Wrong program cycle and temperature might have been selected.	* Select the proper program cycle and temperature for the laundry to be washed (See “Laundry Tips” & “Program Cycle Selection”).
	Using insufficient amount of detergent.	* Use the recommended amount of HE detergent appropriate for water hardness and soil level of laundry.
	Using wrong type of detergent.	* Use liquid detergent for cold wash cycle for good wash results. Use proper detergents recommended for wools, handwashable and delicate items.
	Mixing different sorts of items.	* Sort the laundry according to care labels and user manual (See “Laundry Tips”).
	Mixing different types of laundry additives.	* Put the detergent in the correct compartment of dispenser (See “Detergent Dispenser”).
		* Do not mix detergent with bleaching agent or fabric softener.
Excessive laundry may be loaded into washer.	* Do not load the washer in excess.	
<b>Detergent residue left on the laundry.</b>	Excessive laundry might have been loaded in.	* Do not load the washer in excess.
	Wrong program cycle and temperature might have been selected.	* Select the proper program cycle and temperature for the laundry to be washed (See “Laundry Tips” & “Program Cycle Selection”).
	Using powder or granular detergents in cold water washing may leave residue on wash load.	* Use a liquid detergent when washing in cold water. Use proper detergents recommended for wools, handwashable and delicate items.

## Troubleshooting

Problem	Reason	Solution
<b>Washing performance is poor: Oily stains appear on laundry.</b>	Oily accumulations of prior wash cycles on the drum may have stuck to the laundry.	* Washer must be operated empty at "Tub Sanitize" cycle with detergent.
	The detergent may have been placed into the wrong compartment; the detergent may be mixed with the softener.	* Softener should not come into contact with detergent when being added.
<b>Washing performance is poor: Clothes smell unpleasant. (**)</b>	Odours and bacteria layers are formed on the drum as a result of continuous washing at lower temperatures and/or in short programs.	* Leave the detergent drawer as well as the loading door of the product ajar after each washing. Thus, a humid environment favorable for bacteria cannot develop in the machine.
<b>Color of the clothes is faded. (**)</b>	Excessive laundry was loaded in.	* Do not load the product to excess.
	Detergent in use is damp.	* Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.
	Exposure of laundry to undiluted liquid chlorine bleach.	* Do not pour undiluted liquid bleach onto laundry. Always pour it into bleach compartment of the dispenser prior to beginning of the wash cycle .
		* Do not overfill the bleach compartment. Fill up to max line at the most.
A higher temperature is selected.	* Select the proper program and temperature according to the type and soiling degree of the laundry.	

## Troubleshooting

Problem	Reason	Solution
Rinsing performance is poor.	Intermediate spins may be skipped.	* There may be an imbalance of laundry in the machine. The laundry in the drum may be tangled up too much. Laundry should be rearranged and re-spun. No spinning is performed when the laundry is not evenly distributed in the drum to prevent any damage to the appliance and to its environment.
	The amount and storage conditions of the detergent used might not be appropriate.	* Store detergents in a cool and dry place. Do not keep them under high temperatures.
	Not using HE detergent	* Use HE detergent.
	Using excessive amount of detergent	* Reduce the amount of detergent.
	Drain hose may be folded.	* Check the drain hose and straighten if necessary.
	Drain pump filter or drain itself may be clogged.	* Clean the drain pump filter (See “User maintenance instructions”). If the house drain pipes are clogged, call a plumber for assistance.
Laundry became stiff after washing. (**)	Insufficient amount of detergent is used.	* Using an insufficient amount of detergent for the water hardness can cause the laundry to become stiff over time. Use appropriate amount of detergent according to the water hardness.
	Detergent is put in the wrong compartment.	* If detergent is put in the prewash compartment when the prewash cycle is not selected, the product can take this detergent during the rinsing or softener step. Put the detergent in the correct compartment.
	Detergent might be mixed with the softener.	* Do not mix the softener with detergent. Wash and clean the dispenser with hot water.



## Troubleshooting

Problem	Reason	Solution
Laundry does not smell like the softener. (**)	Detergent is put in the wrong compartment.	* If detergent is put in the prewash compartment when the prewash cycle is not selected, the product can take this detergent during the rinsing or softener step. Wash and clean the dispenser with hot water. Put the detergent in the correct compartment.
	Detergent might be mixed with the softener.	* Do not mix the softener with detergent. Wash and clean the dispenser with hot water.
	Softener might have been released early.	* You may have added too much softener beyond max fill line.
		* The detergent dispenser might be problematic. Water may be siphoned (pulling the softener into the washer early) during the fill or rinse cycles.
Detergent residue in the detergent drawer. (**)	Detergent is put in a wet drawer.	* Dry the detergent drawer before putting in detergent.
	Detergent has gotten damp.	* Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.
	Water pressure is low.	* Check the water pressure.
	The detergent in the main wash compartment got wet while taking in the prewash water. Holes of the detergent compartment are blocked.	* Check the holes and clean if they are clogged.
	There is a problem with the detergent drawer valves.	* Call the Authorized Service Agent.
	Detergent might be mixed with the softener.	* Do not mix the softener with detergent. Wash and clean the dispenser with hot water.
	Regular drum cleaning is not performed.	* Clean the drum regularly. For this procedure, please see "Cleaning the loading door and the drum".

## Troubleshooting

Problem	Reason	Solution
Too much foam forms inside the product. (**)	Not using HE detergent	* Use HE detergent.
	Excessive amount of detergent is used.	* Use only a sufficient amount of detergent.
	Detergent was stored under improper conditions.	* Store detergent in a closed and dry location. Do not store in excessively hot places.
	Some meshed laundry such as tulle may cause too much foam because of their texture.	* Use smaller amounts of detergent for this type of item.
	Detergent is put in the wrong compartment.	* Put the detergent in the correct compartment.
Foam is overflowing from the detergent drawer / Machine is completely full of suds.	Softener is being taken early by the product.	* There may be problem in the valves or detergent dispenser. Call the Authorized Service Agent.
	Not using HE detergent / Using excessive amount of detergent	* Push "Start/Pause/Cancel" button. Mix 2 cups of water with 1-2 tablespoon of fabric softener and pour it into detergent dispenser. Push "Start/Pause/Cancel" button again. Use proper amount of HE detergent next time you operate the washer. * Use detergent suitable for the programs and maximum loads indicated in the "Program and consumption table". When you use additional chemicals (stain removers, bleaches, etc.), reduce the amount of detergent.

## Troubleshooting

Problem	Reason	Solution
Load is still too soapy / Machine is full of suds at the end of program.	Not using HE detergent / Using excessive amount of detergent	* Do not unload the machine. Operate a quick wash cycle (e.g. Delicates, Wools) without any detergent. Add 1-2 tablespoon of fabric softener into main wash compartment of detergent dispenser during water intake. Use proper amount of HE detergent next time you operate the machine.
Laundry remains wet at the end of the program. (*)	Excessive foam might have occurred and automatic foam absorption system might have been activated due to too much detergent.	* Use the recommended amount of detergent.
	Unbalance detection due to small amount of laundry inside the drum and/or uneven load distribution.	* Add more laundry (e.g. a few additional towels) to the drum and start a "Spin" or "Spin&Drain" cycle.
	Poor spinning results due to not using HE detergent / using excessive amount of detergent	* Use proper amount of HE detergent.
Washer fills with water when a process is cancelled.	There may be hot water inside washer.	* For safety reasons, water should be cycled in and out a couple times.
Time delay function does not work.	Door may not be closed properly.	* Close the loading door.
The door will not lock/door led remains OFF.	Door is not properly closed/ Door hinge is not aligned with lock switch.	* Check for excessive laundry avoiding the door to be closed. Push and/or shut the loading door firmly until it is properly closed.

## Troubleshooting

<b>Problem</b>	<b>Reason</b>	<b>Solution</b>
<b>Clothes get tangled up too much in the drum when washing.</b>	Excessive laundry might have been loaded in.	* Do not load the machine in excess.
	Washing many items of the same type or size of clothes together.	* Load the wash drum with items of different sizes.
<b>Load is wrinkled.</b>	Delay in unloading the machine.	* Unload the machine as soon as the wash cycle ends.
	Wrong program cycle might have been selected.	* Select the proper program cycle for the laundry to be washed (See “Laundry Tips” & “Program Cycle Selection”).
	Excessive laundry might have been loaded in.	* Do not load the machine in excess.
<b>Machine does work. Nothing is displayed on the screen.</b>	The plug might not be plugged in the wall power outlet.	* Check the plug.
	Fuse may have blown.	* Check the fuse / circuit breaker.
	Power may be cut off.	* Check the supply power.

## Troubleshooting

Problem	Reason	Solution
Drying lasts too long.	Excessive laundry loaded.	* Do not load the machine in excess.
	Laundry is not spun enough.	* Spin at a higher spin speed in washing step in the Dryer-Washing Machine.
	Tap is turned off.	* <i>Turn on the taps.</i>
Laundry is still damp after drying.	An appropriate program according to laundry type might is not selected.	* Check care labels on clothes and select an appropriate program or use timed programs in addition.
	Excessive laundry loaded.	* Do not load the machine in excess.
	Laundry is not spun enough.	* Spin at a higher spin speed in washing step in the Dryer-Washing Machine.
Machine does not start or program cannot be started.	Power cable is not connected.	* Make sure the power cable is connected.
	Program is not set or Start / Pause / Cancel button is not pressed.	* Make sure the program is set and it is not in Stand-by mode.
	Child lock enabled.	* Disable Child lock.
Laundry is shrunken, pale, matted or damaged.	An appropriate program according to laundry type is not selected.	* Check care labels on clothes and select an appropriate program or use timed programs in addition. You must not dry clothes that are not suitable for drying.
Machine does not dry.	Laundry is not dried or drying step is not enabled.	* Check if drying function is selected after the selected washing program.

## Troubleshooting

Problem	Reason	Solution
Loading door cannot be opened.	Your machine's door is not opened for safety reasons.	* If door locked indicator is still active on display after drying, machine keeps the loading door locked until it cools for your safety.

(\*) The product does not switch to the spinning step when the laundry is not evenly distributed in the drum to prevent any damage to the product and to its surroundings. Laundry should be rearranged and re-spun.

(\*\*) Regular drum cleaning is not performed. Clean the drum regularly. See "Cleaning the loading door and the drum"



### CAUTION

- If you cannot eliminate the problem despite following the instructions in this section, consult your dealer or the Authorized Service Agent. Never try to repair a nonfunctional product yourself.

# 9 WARRANTY STATEMENT FOR THE BLOMBERG CLOTHES WASHER-DRYER

The warranties provided by Blomberg in these statements only apply to Blomberg washer-dryer sold to the original purchaser or homeowner in the US and Canada. The warranty is not transferable. To obtain warranty service, please contact our nearest distributor as listed by state. You will need your product model number, serial number, retailer name and address, where purchased and purchase date / installation date. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

1 year \* limited warranty from date of first installation Blomberg will repair or replace at no cost to the consumer any defective parts of the machine if used under normal household conditions (warranty is void if the product is used commercially e.g., bed + breakfast, nursing home etc.). Service must also be performed by an authorized Blomberg service agency. (Cosmetic defects must be reported within 10 business days from installation)

2 year \* ++ limited warranty from date of first installation (Parts only) Blomberg will repair or replace any parts at no cost to the consumer if material defects or workmanship have caused the damage or failure of these components. Again the appliance must have been used under normal household conditions and not commercially as stated above (Labor charges are the responsibility of the consumer)

5 year \* ++ limited warranty from date of first installation (parts only 2-5 years) Blomberg will repair or replace any circuit boards or machine drum (excluding any plastic attachments) at no cost to the consumer if material defects or workmanship have caused the damage or failure of these components. The product must have been used under normal household conditions and not commercially (Labor charges are the responsibility of the consumer)

Lifetime limited warranty from date of first installation \* ++ (parts only) Blomberg will repair or replace to the original owner the stainless steel drum if rust through occurs under normal household use and normal water conditions (no excessive chlorine). Blomberg may, at its option, also replace the whole product with the same and/or equivalent model with equal or better functionality if the original model is no longer available. (Labor, removal and installation charges are the responsibility of the consumer.)

Disclaimers of warranties and exclusions:

Warranty does not cover service costs by an authorized service agent to correct installation, electrical and plumbing problems or educational instruction on the use of the product. The warranty also does not cover defects or damage caused by an act of god (such as storms, floods, fires, mudslides, etc.), damage cause by use of the product for purposes other than those for which it was designed, misuse, abuse, accident, alteration, improper installation, maintenance, travel fees, service calls outside normal service hours, unauthorized service work or work.

This product is fully tested and went through official quality assurance inspections before leaving the original manufacturing site. Warranty terms for this Blomberg household appliance is not valid if the product is altered, tampered, modified, additional parts assembled, fixed and re-packed by an authorized distributor, servicer, a third party retailer, reseller or by any other unauthorized person(s)''

TO THE EXTENT PERMITTED BY LAW, THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. BLOMBERG UNDERTAKES NO RESPONSIBILITY FOR THE QUALITY OF THIS PRODUCT EXCEPT AS OTHERWISE PROVIDED IN THIS WARRANTY STATEMENT. BLOMBERG ASSUMES NO RESPONSIBILITY THAT THE PRODUCT WILL BE FIT FOR ANY PARTICULAR PURPOSE FOR WHICH YOU MAY BE BUYING THIS PRODUCT, EXCEPT AS OTHERWISE PROVIDED IN THIS WARRANTY STATEMENT.

Blomberg does not assume any responsibility for incidental or consequential damages. Such damages include, but are not limited to, loss of profits, loss of savings or revenue, loss of use of the product or any associated equipment, cost of capital, cost of any substitute equipment, facilities or services, downtime, the claims of third parties, and injury to property. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you. \* installation date shall refer to either purchase date or 5 business days after delivery of the product to the home, whichever is later.

++Parts replaced will assume the identity of the original parts + their original warranty.

No Other Warranties. This Warranty Statement is the complete and exclusive warranty from the manufacturer. No employee of Blomberg or any other party is authorized to make any warranty in addition to those made in this Warranty Statement.

## **10 HOW TO GET SERVICE**

---

Please contact the Distributor for your state as listed on the Distributor Contact List, or call our Toll Free Number at 1 800 459 9848 for direction to an Authorized Blomberg Service Agent.









**Blomberg®**

**seit 1883**

[www.blomberginternational.com](http://www.blomberginternational.com)

[info@blomberginternational.com](mailto:info@blomberginternational.com)