

Set up your refrigerator

- Remove tape and glue residue and clean surfaces with soap and water before turning on the refrigerator.
- If you are using your refrigerator in a kitchen, we recommend you set your temperature at 37°F (3°C). After 24 hours, you can adjust the control as desired, allowing the temperature to stabilize.

Press either **+** or **-** to adjust to desired temperature setting inside the refrigerator. **°F/°C** allows you to switch between Fahrenheit (°F) and Celsius (°C).

Care and cleaning

- Immediately wipe up any spills and clean your refrigerator at least twice per year.
- Keep fresh air and clean water flowing by changing your filters every 6 months.
- Prime the water supply system for your PureAdvantage® Water Filter. See **Priming the water supply system** in the **AUTOMATIC WATER DISPENSER** section in the User Manual.

Your Filters:

ELXPAAF2 PureAdvantage® AF-2™ Air Filter

EPPWFU01 PureAdvantage® PWF-1™ Water & Ice Refrigerator Filter

ELPAPKRF PureAdvantage® Produce Keeper™ Refill

FAQs

- **How do I use the water dispenser?**
Your water dispenser is mounted on the left-hand side of your interior refrigerator wall. Push the water nozzle to fully extend it, place your cup against the paddle, then press to dispense water. Push the nozzle back into place when finished.
- **Why does my refrigerator seem to run continuously?**
Your variable speed compressor is designed to run 100% of the time except during the defrost cycle. At times it will run faster, such as after a defrost cycle.
- **The temperature is warmer or colder than preferred. What can I do?**
Adjust the temperature by 1 or 2 degrees and allow 24 hours for the temperature to stabilize. Check to ensure food items are not blocking the multi-port air exhaust ducts as this will impact performance.

Welcome to an effortless appliance protection experience.

Have peace of mind knowing we are here to always keep your appliance in peak performance.

- Register your product for a more effortless experience by scanning the QR code.
- Extend your manufacturer's limited warranty with an appliance protection plan to ensure you are always protected from surprises, including up to \$250 of food-loss coverage and a worry-free guarantee we'll replace what we can't repair.
- Ever in need of service or repair? Our trusted Electrolux-trained technicians are experts on your appliance and can provide reliable service and repair work.



Call us at (866) 386-5286 to enroll.

See more FAQs and your User Manual online