

# FULGOR

MILANO

## French Door Bottom Mount Refrigerator



**FM4FBM30SS**

**Congratulations on the purchase of your new Refrigerator !**

Before installing please, read your Use & Care Guide carefully and pay special attention to the Safety & Warning information outlined in the following pages.

# Table of Contents

## Warning

Warnings-----	2
---------------	---

## Safety and Warning Information

Basic safety symbol-----	5
Appliance connection -----	5
Safety and warning information-----	5

## Product Introduction

Product features-----	9
Product components-----	10
Installation dimension-----	11

## Installation

Transportation-----	12
Where to install your unit-----	12
Adjustable plastic feet-----	12

## Operation

Before use -----	13
Starting -----	13
Control panel -----	14
Freezer temperature controls-----	15
Fridge temperature controls-----	15
Refrigerator chamber -----	17
Freezing chamber -----	18
Food storage tips -----	19
Energy-saving-----	19

## Maintenance

Defrosting-----	20
Cleaning -----	20
General information -----	20
Normal phenomena -----	21
Troubleshooting -----	22

## Warning

The refrigerant isobutene(R600a) is contained within the refrigerant circuit of the appliance,a natural gas with a high level of environmental compatibility,with which is nevertheless flammable.

During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

The refrigerant (R600a) is flammable.



Symbol ISO 7010 W021 Warning;  
Risk of fire/flammable materials!

1. WARNING: The appliance must be positioned so that the plug is accessible.
2. WARNING: If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person to avoid any hazards.
3. WARNING: Keep ventilation openings, in the appliance enclosure of built-in structure, clear of obstruction.
4. WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
5. WARNING: Do not damage the refrigerant circuit.
6. WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are recommended by the manufacturer.
7. WARNING: This unit uses R600a as the refrigerant and cyclopentane as the foaming agent,both of these materials are easily burnt, when discarding the unit it should be kept away from sources of extreme heat.

## Warning

8. WARNING: Danger of electrical shock, the unit is used yellow-green grounding wire of this appliance must be grounded before operation.
9. WARNING: When the refrigerator is discarded after use please follow all local laws and regulations.
10. WARNING: The refrigerant and insulation blowing gas are flammable. When disposing of the appliance. The refrigerant and insulation are both flammable. Disposing of the refrigerant can only be done at authorized waste disposal centers. Do not expose the refrigerant or insulation to extreme heat or an open flame.
11. WARNING: When positioning the appliance, ensure the power cord is not pinched or damaged before plugging your unit in.
12. WARNING: The unit should be on its own circuit, and should not be run off of an extension cord, power bar, or outlet expander.
13. WARNING: To avoid your unit running more than is required, please follow these simple steps.
  - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
  - Clean your unit regularly, especially around the gaskets, drainage system and crispers.
  - Store all food in suitable containers in the fridge or freezer, so that it can not accumulate moisture and spoil faster.

## Warning

14. **WARNING:** Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- Take off the doors
- Leave the shelves in place so that children may not easily climb inside.

● Before performing any type of installation or cleaning, disconnect the refrigerator from the power source and reset the temperature controls to the desired setting(s). When you are finished, reconnect the refrigerator to the electrical source and reset the temperature controls to the desired setting.

● If the LED light is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid hazards.

– **WARNING** Connect to potable water supply only.

The water supply system must be installed and connected by a professional technician. Connect the refrigerator with the cold water pipe :

the maximum inlet water pressure is 690kPa;

the minimum inlet water pressure is 140kPa.

**WARNING:** Connect to potable water supply only.

● The new hose-sets supplied with the appliance are to be used. Any old hose-sets should not be re-used.



This symbol on the product or in its packing indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased the product.

# Safety and Warning Information

## Basic safety symbol

This guide contains many important safety messages. Always read and obey all safety messages.



This is the safety alert symbol. It alerts you to warnings that will inform you of any potential hazards that could hurt or kill you. These messages will also help protect your unit from damage. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:



**DANGER**

You could be killed or seriously injured if you don't follow the instructions.



**WARNING**

You may be killed or seriously injured if you don't follow the instructions.



**CAUTION**

Indicates an imminently hazardous situation which if not avoided, may result in minor or moderate injury or product damage only.

## Appliance connection



**CAUTION**

The appliance must be applied with a single-phase alternating current of 110~120V/60Hz. If the voltage fluctuates exceeding the upper limit, A.C. automatic voltage regulator of more than 350W should be applied to the refrigerator for safety use.

## Safety and warning information

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following.

Read all instructions before using this appliance.

# Safety and Warning Information

## Safety and warning information



### WARNING

Do not damage the refrigerant circuit.

Refrigerant will cause serious injury when coming into contact with the skin or eyes. If this happens please immediately seek out medical treatment.

Keep your unit in a well ventilated area, make sure if the unit is built-in that there is adequate air flow around the unit.

Do not use any tools or electrical appliances inside the unit, unless directed by the manufacturer.

Do not use any mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose the unit to extreme heat or any open flame.



### CAUTION

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or been given instruction concerning the safe use of this unit and the features it contains.

Children should be supervised to ensure that they do not play with the appliance.



### DANGER

Do not use or store inflammable materials ether, benzene, alcohol, medicine, liquid propane gas, spray or cosmetics near or in the fridge. It may cause explosion or cause a fire.

Do not put any glassware that is not design for use in a fridge or freezer inside. The glass may crack or break which can lead to injury.

Make sure to use a grounded power outlet.

Consult a qualified electrician or service person if the ground-ing instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.


The incorrect grounding may cause breakdown and/or electric shock. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

This appliance is intended to be used in household and similar applications such as


- staff kitchen areas in shops, offices and other working environments;
- farmhouses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

# Safety and Warning Information

## Safety and warning information

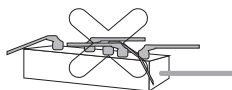

- A dedicated outlet should be used.  
Using several devices at one outlet may cause fire.

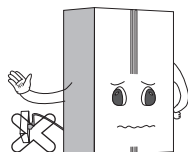


- Install the appliance in a dry, well-ventilated room.
- The appliance should be placed close to the wall outlet, it is easy to cut off the power supply at the time of the accident. Do not allow the power plug to face upward or to be squeezed at the back of the fridge.
- Water may be flown into or the plug may be damaged, which can cause fire or injury.




- Do not allow the power cord bent or pressed by the heavy object to be damaged. If the power cord is damaged, it must be replaced by the service agent or a similarly qualified person remove to avoid hazards.




- Unplug the power cord when cleaning, handling the interior lamp of the fridge.  
Failure to do so may result in an electric shock or other injury.  
If the LED lamp is damaged, it must be replaced by the manufacturer or an authorized servicer.

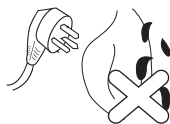

- Remove water or dust from the power plug with a dry clean cloth, do not use wet hands to touch it and insert it with the ends of the pins securely connected.

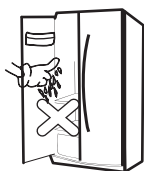

- Do not touch food or containers in the freezer with wet hands. It may cause frostbite.

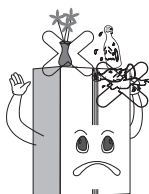


- Do not place the heavy object or the dangerous objects such as: cup, flower vase, cosmetics, medicine or any containers with water in the fridge.  
It may be dropped and cause injury, fire or electric shock when opening or closing the door.

- Do not spray water at the outside or the inside of the refrigerator or clean it with benzene or thinner.


Do not clean the unit with any acidic cleaners, abrasive brushes, sharp tools, and/or any cleaner that contains benzene.

# Safety and Warning Information

## Safety and warning information

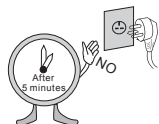

- Wait for 5 minutes or longer before reconnecting the power cord. Failure to do so may cause the freezer to fail.

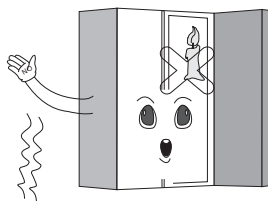


- Do not use the fridge for non-domestic purposes (storing medicine or testing material, blood, using on a ship, etc.) It may cause an unexpected risk such as fire, electric shock, deterioration of stored material or chemical reaction.

- Do not use a drier to dry the inside of the unit, nor light a candle to remove odour. It may cause an explosion or fire.

- Do not cling to the door or the trays of the door. It may make the fridge fall down and cause serious injuries or even death. Especially, do not allow the children to do the above.



- If you believe there is refrigerant leaking, do not touch the unit or the power outlet, ventilate the room and if possible turn your unit off using the circuit breaker. Call the manufacturer immediately.

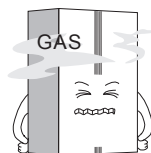

- Do not cover or obstruct the exhaust area on the back of your unit, failure to do so may cause electrically shock or injury.

It may cause electric shock or injury.


- Do not put ice in a thin crystal cup or ceramic ware. It may break cup or ceramic ware to cause injury.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid any hazards.

- Do not install the fridge in a wet or high humidity environment. Failure to do so will cause premature deterioration, cause the unit to run more frequently and can cause an electrical shock.

- Do not allow anyone except a qualified service person to disassemble, repair, or alter the fridge. Unless directed by the manufacturer.

It may cause injury, electric shock or fire.

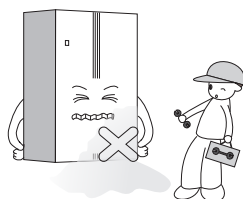

# Product Introduction

## Product features

- This unit contains super freeze, energy-savings, noise reduction, optimal refrigeration are preset options for your unit.
- Precise temperature control  
Microcomputer control systems are able to separately control both the fridge and freezer more accurately.
- Automatic defrosting  
This unit is equipped with a program that controls the frequency and duration of defrosting your freezer. This will make sure that you never need to manually defrost the freezer.
- LED display and temperature controls  
The control board respectively displays the fridge and freezer temperatures. To change the setting in either section simply press the up or down arrow depending on the change you would like made.
- Door-open alarm system  
If you leave any of your doors open for longer than 1-minute the alarm system will remind you to close the door.
- Tempered glass, safe and reliable  
Tempered glass, is safe and reliable, easy to clean and durable.
- Easy clean and removable door seal  
The door seal(s) are easy to remove and clean, allowing the product to operate efficiently for longer.
- Automatic ice maker  
The refrigerator has the function of automatic ice making, and users can take ice cube from freezer drawer.

# Product Introduction

## Product components

The layout of items below are subject to change without notice, and may not look or come setup as seen in the picture below.

The appearance and specifications of the actual product may differ depending on the model.







1	(6) Refrigerator Door Bins	5	(2)Vegetable Crispers with Glass Cover
2	(3)Frigerator Shelves	6	(1)Freezer Drawer
3	(1)Refrigerator LED Light	7	(1)Plastic Drawer Inside the Drawer
4	(1)Display Board	8	(1)Ice maker

# Product Introduction

## Installation dimension

Select a good location to place your appliance where it is flat and easy to use. Avoid placing the unit near heat sources, direct sunlight or moisture.

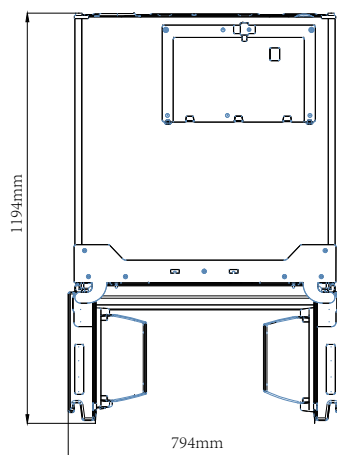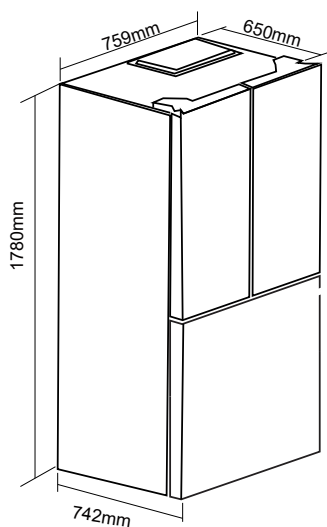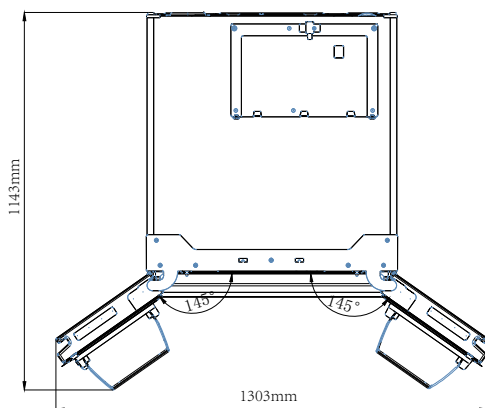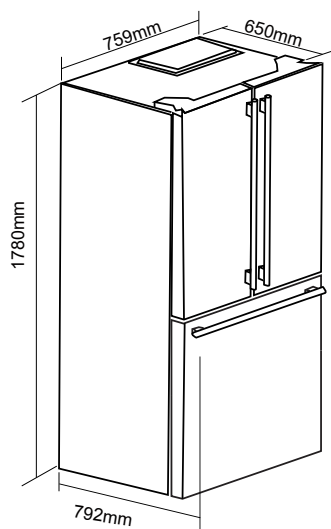

The above figures are a guideline for installation purposes. The actual dimensions of the unit may vary slightly.

To ensure that your unit works at peak efficiency please maintain sufficient space around your unit as outlined on the next page.


# Installation

## Transportation




- Do not carry the refrigerator horizontally or by laying it down.
- Do not carry the refrigerator by holding the door or handle; the refrigerator shall be carried by lifting the bottom.
- This unit should never be moved alone, two people are required to safely lift or move your unit.

## Where to install your unit

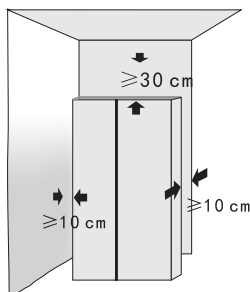

- The refrigerator must be placed on hard, flat ground; if cushioning is needed, stable, hard, nonflammable cushion blocks shall be used. **DO NOT USE THE FOAM PACKAGING AS CUSHIONING BLOCKS!**
- The unit shall be kept away from damp locations where water is present. Water or dirt should be removed from any surface of the unit as soon as possible using a soft cloth. This will help prevent rust and will help your unit run at peak efficiency.
- Place the refrigerator in a well-ventilated place, reserve a certain space around and behind the refrigerator, and do not cover or block the air grille on the rear cover plate of compressor at the back of refrigerator; Keep the refrigerator away from heat source or direct sunlight.

## Adjustable plastic feet

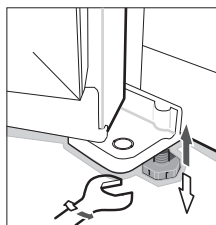

- When the refrigerator stays in the packing box, plastic feet are in tightened state. After carrying it out from the packing box for placement, please make sure to adjust two front plastic feet until the height is suitable; just adjust two plastic feet with a wrench or directly by hand.
- Plastic feet and rear rollers must touch the ground to prevent the refrigerator from movement, vibration or noise. When moving the refrigerator, adjust plastic feet counterclockwise to keep them off the ground, and then push the refrigerator gently to move it.

# Operation

## Before use

- Remove all of the packaging, including the foam backing at the bottom of the unit and the tape that fixes the shelves and door bins inside.
- Place the refrigerator to a proper position, and adjust the feet to level. It is recommended to wipe out your unit with a warm soapy cloth and dry it thoroughly before use.
- Remove the film: There is a layer of transparent film on the panel of our product, which can protect products from being scratched in the process of production and transportation, and you can choose to reserve or leave the film on, or remove the film as needed.
- Place the refrigerator and adjust to level, clean it, let the refrigerator stand for above 4-6 hours, and then power the unit on. This helps make sure that the oil from the compressor has settled properly, and will help your unit run normally.

## Water supply connection

- **WARNING: Connect to potable water supply only.**
- **The water supply system must be installed and connected by a professional technician.**  
Connect the refrigerator with the cold water pipe:  
Min. pressure: 140Kpa( 1.4bar )  
Max. pressure:690Kpa( 6.9bar)
- When using the function of ice maker, please make sure that the tap water pipe is connected normally and the water valve is opened. Enough space shall be reserved for the faucet connecting water source.
- After the refrigerator operates stably, the ice maker will make ice. Upon power-on for the first time, cold water is available after 5 hours since the refrigerator operates normally, and ice cubes or crushed ice is available after 12 hours.

## Starting

- Connect the power cord, and turn on the power switch.
- Upon startup for the first time, the screen will display respective set temperature values (the temperature of the fridge section is set to 38°F or 3°C, the temperature of the freezer is set to 2°F or -19°C).

# Operation



The default temperature is displayed in Fahrenheit when the unit is first powered on.

Press and hold the "MODE" button 5 seconds, to switch between °C and °F. Other buttons use the same method to switch between two modes.

## **Set temperature range: Celsius degree mode**

1. Fridge temperature range: 0~6 °C (Default value 3 °C)
2. Freezer temperature range: -23~-15 °C (Default value -19 °C)

## **Set temperature range: Fahrenheit degree mode**

1. Fridge temperature range: 32~43°F (Default value 38°F)
2. Freezer temperature range: -10~5°F (Default value -2°F)

### **• CONTROL PANEL – CHILD LOCK**

The CONTROL PANEL LOCK is designed to prevent any changes to the settings to the refrigerator.

To enable the CHILD LOCK, press the LOCK button, the CHILD LOCK icon will turn on.

The control panel will be locked until unlocked at the control panel or there is a loss of power.

To disable the CHILD LOCK, press and hold the lock button for approximately 3 seconds until the LOCK icon turns off and the control panel is working in normal operation mode.

### **• CONTROL PANEL – STANDBY**


The CONTROL PANEL will go dark after approximately 20 seconds if no input has been made.

To reactivate the display, simply press any of the buttons on the control panel.

## **➤ Setting the Temperature Control**

- Your unit has one control for regulating the temperature. The temperature control is located on the outside of the refrigerator compartment door.
- The first time you turn the unit on, the unit will start at the factory-set default temperature, which is 38°F or 3° C in the refrigerator compartment and -2°F or -19° C in the freezer compartment.
- The first time you turn the unit on, adjust the temperature in the refrigerator compartment to 34°F and run for at least 4 hours before placing food inside. This will ensure that the freezer compartment is thoroughly chilled and the refrigerator compartment is stabilized before food is placed inside. Then adjust the temperature setting to your desired setting.
- To adjust the temperature in each zone, press the appropriate zone button, and the selected zone will flash on and off. The temperature will change according to the pre-set temperatures as shown below. You will hear a bell chime with each press of the control panel buttons.

# Operation

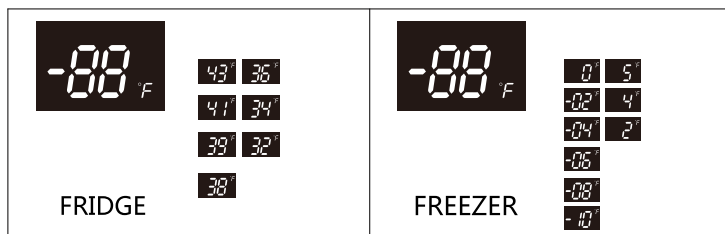

## **PRE-PROGRAMMED FUNCTIONS:**

- **FAST FREEZE MODE**



This mode will set the freezer temperature to -10°F or -23°C for a quick drop in temperature when storing large amounts of warm or room-temperature foods in the freezer. The unit will remain in FAST FREEZE mode for 24 hours or until the temperature reaches -10°F or -23°C and will then return to the original setting, or until the function is turned off at the control panel. FAST COOL and FAST

FREEZE can be run simultaneously.

To enable the FAST FREEZE mode, press the feature button until the FAST FREEZE icon is illuminated. The icon will remain illuminated when activated.

To disable the FAST FREEZE mode, press the function button until the FAST FREEZE icon is turned off.

- **FAST COOL MODE**



This mode will set the refrigerator temperature to 32°F or 0°C for quick drop in temperature when storing large amounts of warm or room temperature foods in the refrigerator. The unit will remain in FAST COOL mode for 2 hours and 30 minutes or until the temperature reaches 32°F or 0°C and will then return to the original setting, or until the function is turned off at the control panel. Both FAST COOL and FAST

FREEZE can be run together at the same time.

To enable the FAST COOL mode, press the feature button until the FAST COOL icon is illuminated. The icon will remain illuminated when activated.

To disable the FAST COOL mode, press the function button until the FAST COOL icon is turned off.

- **VACATION MODE**



Use this mode when leaving for long periods of time, where you will remove the large majority of the refrigerator contents but leave contents in the freezer.

Vacation mode will automatically set the refrigerator section to 43°F or 6°C and the freezer section to 5°F or -15°C. The unit will remain in VACATION MODE until the feature is deactivated at the control panel.

To enable VACATION mode, press the feature button until the VACATION icon is illuminated. The icon will remain illuminated when activated.

To disable VACATION mode, press the function button until the VACATION icon is turned off.

# Operation

**NOTE:**

- IF THE UNIT IS UNPLUGGED, HAS LOST POWER, OR IT IS TURNED OFF. YOU MUST WAIT 3 TO 5 MINUTES BEFORE RESTARTING THE UNIT. IF YOU ATTEMPT TO RESTART BEFORE THIS TIME DELAY, THE REFRIGERATOR-FREEZER WILL NOT START.


**NOTE:**

WE DO NOT RECOMMEND INSTALLING THE REFRIGERATOR WHERE THE TEMPERATURE WILL DROP BELOW 32°F (0°C) OR RISE ABOVE 110°F (43°C). THE COMPRESSOR WILL NOT BE ABLE TO MAINTAIN PROPER TEMPERATURES INSIDE THE REFRIGERATOR.

FOR INSTALLATIONS WHERE THE TEMPERATURES WILL DROP BELOW 32°F or 0°C, SET THE FREEZER TEMPERATURE CONTROL TO THE "COLDEST" SETTING. THIS WILL IMPROVE THE FUNCTIONING THE REFRIGERATOR UNDER THESE CONDITIONS.

# Operation

## Refrigerator chamber

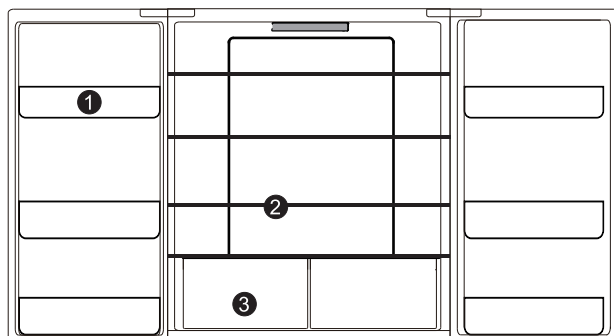


**The fridge compartment should mainly be used to store food that will be consumed in a short time.**

- The refrigerator chamber is suitable for storing fruits, vegetables, drinks and other food that will be eaten soon. It is suggested that you put your food away in containers as to not gain unwanted odours, stains, or damage the unit liner.

Suggested sections of refrigerator chamber for various foods and variety name:

- ① Top door bins: dairy products, etc.
- ② Glass shelves: bread, meat, etc.
- ③ Crisper: fruits, vegetables, etc.

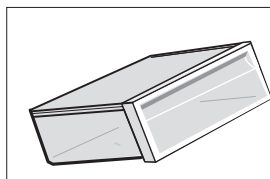


### ■ Fruit and vegetable box

The fridge section has a drawer that is suitable to store your fruits and vegetables. It can help retain the moisture of your fruits and vegetables, keeping them fresher for longer and helps to keep the humidity within the drawer and away from the rest of the fridge section.

### ■ Bottle Shelf


**Disassembly:** Hold both sides of the bottle shelf with both hands. Push it from the side without the guide and push it inward as seen in the diagram. Push until the edge of the shelf is separated from the groove of the liner.

**Installation:** Hold both sides of the bottle shelf with both hands. Install the buckle of the guide side at first. Then push the other side inward slightly, the guide will then click into place and the shelf will be installed. Please make sure the shelf is installed properly before use.

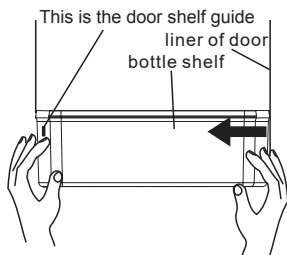

# Operation

## Freezing chamber

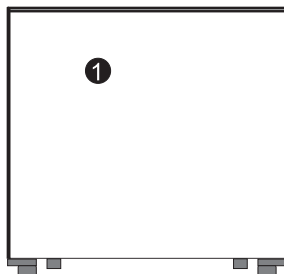


- The freezer compartment is used for long term storage of food as well as making ice.

**It can preserve food for a long time.**

The freezing chamber is suitable for retaining the freshness of food for a long time. When storing meat, it is suggested to cut the meat into pieces which are easy to take out, and mark the freezing date.

① Drawer: packaged frozen foods, etc.;

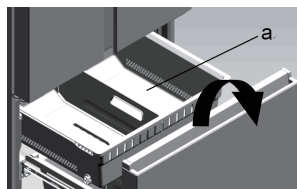

- **Drawer of freezing chamber**

The upper drawer on the left is used for the ice out of the ice maker. The other upper drawer is great for smaller items. The lower drawer is best for the larger items and food that will be stored for a while.



### CAUTION

Food especially oily food when stored in refrigerator , please avoid the direct contact with the liner.

If the inner liner becomes stained with oil or other food stains, it should be cleaned immediately to avoid long term damage to the liner which may lead to the liner cracking or corrosion.

# Operation

## Food storage tips



### CAUTION

#### Instructions for storing foods

- Do not put bottled or canned food into the freezer, this is to prevent the containers from breaking.
- Before putting any hot or warm food into the fridge, allow them to cool to room temperature first, otherwise this may increase the amount of time the unit will run or possibly crack the inner liner.
- Mark the freezing date on the packaging bag according to different storage lives of foods.
- Divide your items into smaller pieces or package them separately, this will make sure they are frozen all the way through and will reduce frost burn.
- The packaging materials shall be odourless , airtight, watertight and pollution-free.
- Do not overload the freezer compartment as this will directly affect the cooling capacity of the fridge section.
- Melted foods can not be frozen again, unless they are made into dishes; otherwise, their service quality will be affected.
- Glass bottles or glass containers shall not be placed into the freezing chamber or at the air outlet of refrigerating chamber duct; otherwise, they may explode.
- Food can not block the air outlet; otherwise, abnormal air circulation will be caused.

## Energy-saving

- Make sure to keep the refrigerator away from heat source and direct sunlight.
- Before storing hot foods, cool them to room temperature and then put into refrigerator.
- Close the door timely, reduce the opening frequency, and shorten the opening time.
- When unfreezing frozen foods, you can put them into the refrigerating chamber, which will assist in refrigeration of the fridge section.
- Make sure that the temperature sensor is not covered or blocked by foods, and keep proper distance with foods.

# Maintenance

## Defrosting

**This unit has automatic defrosting, so there is no need to manually defrost your freezer.**

## Cleaning

### Precautions for internal and external cleaning of the refrigerator

- Before cleaning, always turn off the unit, and disconnect the power cord.
- During cleaning, make sure that no water will enter the switch, control panel, door lamp and top control box.
- Remove dirt from the outside of refrigerator with mild cleaner, then wipe with clean soft cloth, and let the refrigerator dry naturally.
- When cleaning door door gasket, always use clean water, wipe with dry cloth and let it dry naturally. Wet soft cloth with warm water or neutral cleaner to wipe the refrigerator body except the door sealing strip.
- It is forbidden to spray the refrigerator directly with water, which will affect electrical insulation properties, etc.
- It is forbidden to clean the refrigerator with metal tools, rough or stiff brushes, coarse abrasive cleaners, strong alkaline detergents, or flammable or toxic cleaning fluids.

**After you can cleaned your unit and allowed it to dry, plug your unit back in and reset each cabinet to your desired temperature.**

## General information

### On vacation

- When you are going to be away for several weeks and would like to keep food in your unit please select vacation mode. This will allow you to safely store your food, while having the unit run only when absolutely necessary.

### At power failure

- Generally, power failures are short-term and will not drastically affect your refrigerator. However, if power failure lasts longer than 2 hours you should reduce the frequency that you open the doors. This will help prevent food spoilage.
- If you know power failure is coming, you can turn on the “Super Freezer” function in advance to keep the temperature of refrigerator to the lowest value.

### Shutdown

- Generally, it is not suggested to stop refrigerator or turn off the power switch; otherwise, the life of refrigerator may be affected.

# Maintenance

## Normal phenomena

### ■ **Button failure**

Please check to see if the control board has been locked. When it is under this mode none of the buttons will accept input.

### ■ **Long time to start**

When the ambient temperature is too high or too low, it will take a long time for the unit to run.

### ■ **Middle beams feel hot**

The middle beam is hot after the unit has been running. This is a normal function of the fridge to help dissipate any condensation between the fridge and freezer.

### ■ **Dew drops**

When external air flows into the cool inner surface of the fridge, dew drops can form inside the refrigerator. If the humidity of the installed location is high, dew drops can form on the outer side of the fridge. This is a natural phenomenon that occurs during the humid weather, wipe the water drops with a dry cloth.

### **Noise**

- When you operate the fridge for the first time, the fridge will operate at high speed to cool the cabinets fast and the sound can seem loud. When the internal temperature gets closer to reaching your desired temperature, the noise will subside. When the operation of the compressor is starting or ending; various parts expanding/contracting or various control devices operating or temperature change within the fridge, you will hear click, cracking, or gurgling, these are normal sounds.

### ■ **Compressor hot**

When working, the temperature of the compressor outer is more than 80℃, please do not touch the compressor, it may cause serious injury.

### ■ **Compressor long time running**

When the ambient temperature too high or too much fresh foods into the fridge, it will take a long time to cool down until the appliance run at the setting temperature.

# Maintenance

## Troubleshooting

Before calling for service, review this list. It may save you both time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

Fault	Possible cause	Remedial action
No display on the display panel	The mains plug of the appliance is not in the socket properly. The fuse for the domestic supply is switched off.	Check whether the power is on; the fuse must be switched on.
Alarm sound	Door is slightly open or not close more than 1 minute.	Close the door completely.
The compressor do not work	It's under defrosting mode. Power is not connected well.	It's normal for defrosting; Check whether the power is connected well.
Compressor runs too long	The fridge has recently been disconnected for a period of time; Put too much fresh or hot food; Doors are opened too frequently or too long.	It takes some hours for the fridge to cool down completely; Hot food will cause the fridge to run longer until the desired temperature is reached; Warm air entering the fridge cause it to run longer. Open the door less often.
Vibrating noise	Floor is uneven or weak; Items placed on the top of the fridge are vibrating; Fridge is touching wall or cabinets.	Be sure floor is level and solid and can adequately support fridge; Remove items; Move fridge so that does not touch the wall or cabinets;

# WARRANTY

**For all the details regarding warranty, please go visit:**

**[www.fulgor-milano.us](http://www.fulgor-milano.us) To obtain service under this**

**warranty you must:**

1. Contact Fulgor-Milano Authorized Service

**For all of North America:**

Website: <http://www.thevettagroup.com/servicerequest.a5w> In Eastern Canada (Ontario->East)

Email: [service@distinctive-online.com](mailto:service@distinctive-online.com)

Phone: 1-800-361-0799

**In Western Canada (Manitoba<-West)**

Emails: [service@pacificspecialtybrands.com](mailto:service@pacificspecialtybrands.com)

Phone: 1-877-430-5253 x106

**In the USA**

Email:

[fulgor@appliances-support.com](mailto:fulgor@appliances-support.com)

Phone: 1-855-4-fulgor

(1-855-438-5467)

2. Provide a copy of your original sales receipt along with model number and serial number information for the product.

3. Provide Fulgor Milano reasonable opportunity to investigate the claim before the Product or any component of the Product has been modified and removed.

WARRANTY

# FULGOR

## MILANO

**[www.fulgormilano.us](http://www.fulgormilano.us)**

**[info@fulgormilano.us](mailto:info@fulgormilano.us)**