



BEVERAGE CENTER & WINE CHILLER

SAFETY INFORMATION 3

USING THE APPLIANCE

Controls and Features: Beverage Center

 Temperature Control 6

 Adjustable Shelves 6

 Reversible Shelves 7

 Loading 7

Controls and Features: Wine Chiller

 Temperature Control 8

 Suggested storing and serving temperatures for wine 8

 Loading 9

 Extension Drawers 9

CARE AND CLEANING 10

INSTALLATION INSTRUCTIONS 11

TROUBLESHOOTING TIPS 14

LIMITED WARRANTY 17

CONSUMER SUPPORT 18

OWNER'S MANUAL & INSTALLATION INSTRUCTIONS

PWS06D****
PVS06B****

**ENGLISH/FRANÇAIS/
ESPAÑOL**

Write the model and serial numbers here:

Model # _____

Serial # _____

Find these numbers on a label inside the beverage center and wine chiller.

THANK YOU FOR MAKING GE APPLIANCES A PART OF YOUR HOME.

Whether you grew up with GE Appliances, or this is your first, we're happy to have you in the family.

We take pride in the craftsmanship, innovation and design that goes into every GE Appliances product, and we think you will too. Among other things, registration of your appliance ensures that we can deliver important product information and warranty details when you need them.

Register your GE appliance now online. Helpful websites and phone numbers are available in the Consumer Support section of this Owner's Manual. You may also mail in the pre-printed registration card included in the packing material.



GE APPLIANCES

IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USING

ATTENTION CONSUMER!

This appliance is designed for storing and cooling beverages. Do not store perishable foods in this unit.

⚠ WARNING To reduce the risk of fire, explosion, electric shock, or injury when using your appliance, follow these basic safety precautions:

- Use this appliance only for its intended purpose as described in this Owner's Manual.
- This appliance must be properly installed and located in accordance with the Installation Instructions before it is used.
- Unplug the appliance before making repairs or cleaning.
NOTE: Power to the appliance cannot be disconnected by any setting on the control panel.
NOTE: Repairs must be performed by a qualified Service Professional.
- Replace all parts and panels before operating.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Do not use an extension cord.
- To prevent suffocation and entrapment hazards to children, remove door from this appliance before disposing of it or discontinuing its use.
- To avoid serious injury or death, children should not stand on, or play in or with the appliance.
- Children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance only if they are supervised or have been given instructions on safe use and understand the hazards involved.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels, bed & breakfast and other residential environments; catering and similar non-retail applications.
- Do not apply harsh cleaners to the appliance. Certain cleaners will damage plastic which may cause parts such as the door or door handles to detach unexpectedly. See the Care and Cleaning section for detailed instructions.

⚠ CAUTION To reduce the risk of injury when using your appliance, follow these basic safety precautions.

- Do not clean glass shelves or covers with warm water when they are cold. Glass shelves and covers may break if exposed to sudden temperature changes or impact, such as bumping or dropping. Tempered glass is designed to shatter into many small pieces if it breaks.
- Keep fingers out of the "pinch point" areas; clearances between the doors and between the doors and cabinet are necessarily small. Be careful closing doors when children are in the area.
- This unit is designed for storing and cooling beverages. Do not store perishable foods in this unit.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USING

INSTALLATION

WARNING **EXPLOSION HAZARD**

Keep flammable materials and vapors away from appliance. Failure to do so can result in fire, explosion, or death.

WARNING **FIRE OR EXPLOSION HAZARD Flammable Refrigerant**

This appliance contains isobutane refrigerant, also known as R600a, a natural gas with high environmental compatibility. However, it is also combustible. Adhere to the warnings below to reduce the risk of injury or property damage.

1. When handling, installing and operating the appliance, care should be taken to avoid damage to the refrigerant tubing.
2. Service shall only be performed by authorized service personnel. Use only manufacturer-authorized service parts.
3. Dispose of appliance in accordance with the Federal and Local Regulations. The flammable refrigerant and insulation material used in this product require special disposal procedures. Contact your local authorities for the environmentally safe disposal of your appliance.
4. Keep ventilation openings in the appliance enclosures or in the built-in structure clear of obstruction.
5. To remove frost, scrape with a plastic or wood spatula or scraper. Do not use an ice pick or a metal or sharp-edged instrument as it may puncture the appliance liner and then the flammable refrigerant tubing behind it.
6. Do not use electrical appliances inside the storage compartment of the appliance.
7. Do not use any electrical device to defrost your appliance.

CONNECTING ELECTRICITY

WARNING **Electrical Shock Hazard.**

Plug into a grounded 3-prong outlet.
Do not remove the ground prong.
Do not use an adapter.

Do not use an extension cord with this appliance.
Failure to follow these instructions can result in death, fire, or electrical shock.

Do not, under any circumstances, cut or remove the third (ground) prong from the power cord. For personal safety, this appliance must be properly grounded.

The power cord of this appliance is equipped with a 3-prong (grounding) plug which mates with a standard 3-prong (grounding) wall outlet to minimize the possibility of electric shock hazard from this appliance.

Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded.

If you have only a standard 2-prong wall outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

NOTE: GFI (ground fault interrupter) is not recommended.

The appliance should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate.

This provides the best performance and also prevents overloading house wiring circuits which could cause a fire hazard from overheated wires.

Never unplug your appliance by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet.

Immediately discontinue use of a damaged supply cord. If the supply cord is damaged, it must be replaced by a qualified service professional with an authorized service part from the manufacturer.

When moving the appliance away from the wall, be careful not to roll over or damage the power cord.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USING

PROPER DISPOSAL OF THE BEVERAGE CENTER OR WINE CHILLER

⚠️ WARNING SUFFOCATION AND ENTRAPMENT HAZARD

Failure to follow these disposal instructions can result in death or serious injury

IMPORTANT: Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances or freezers are still dangerous even if they will sit for “just a few days.” If you are getting rid of your old appliance, please follow the instructions below to help prevent accidents.

Before You Throw Away Your Old Appliance

- Take off the door.
- Leave the shelves in place so that children may not easily climb inside.


Refrigerant and Foam Disposal:

Dispose of appliance in accordance with Federal and Local Regulations. Flammable refrigerant and insulation material used require special disposal procedures. Contact your local authorities for the environmentally safe disposal of your appliance.

READ AND SAVE THESE INSTRUCTIONS

Controls and Features - Beverage Center

Temperature Control

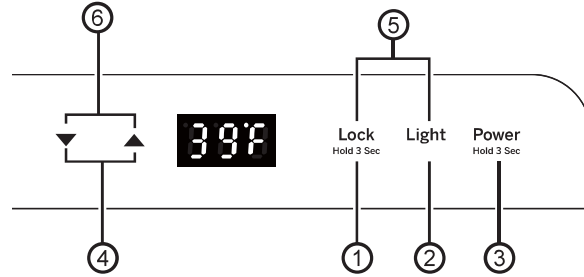

The operating temperature of the beverage center is from 38°F (3°C) to 61°F (16°C).

This product is designed for storing and cooling beverages and/or wines. It is not intended for storage of perishable foods.

As with any refrigeration-type product, there is a slight temperature variance at different locations within the cabinet.

Do not install the beverage center where the temperature will go below 55°F (13°C) or above 90°F (32°C).

1. Locking/Unlocking Control Panel: To change any settings, control panel needs to be unlocked. If control panel is locked, display will flash **Loc** for 4 seconds when a key is pressed, and the key press is ignored.

Press and hold **Lock** for 3 seconds to lock/unlock control panel.

2. Interior Light: To switch the interior light on/off, simply press **Light**. The display will flash ON or OFF in this process.

When light setting is ON, interior light is always on.

When light setting is OFF, interior light turns on when door is opened, and turns off when door is closed.

Door Alarm: If door is left open for more than 2 minutes, door alarm will sound until door is closed.

Door alarm can be turned off by pressing and holding **Light** for 10 seconds.

3. Power: Press and hold the **Power** key for 3 seconds to power on or off the beverage center.

4. UP and DOWN to Change Temperature Setting: Press the DOWN key or the UP key once to enter temperature setting change mode. The display will start to flash the current temperature setting.

Press the DOWN key or UP key again to decrease or increase the desired temperature in increments of one degree.

If no key is pressed in 3 seconds, the display will stop flashing, and your change will be automatically accepted.

When temperature setting is changed, allow 24 hours for the unit to stabilize.

5. Sabbath Mode: Press and hold **Lock** and **Light** simultaneously for 5 seconds to enter or exit Sabbath mode. Display will show **SAb** when in Sabbath mode.

6. Fahrenheit and Celsius: Press and hold the DOWN key and the UP key simultaneously for 3 seconds to switch between Fahrenheit and Celsius temperature display.


Adjustable Shelves

The beverage center features removable and adjustable shelves.

The top three shelves are adjustable. Shelves can be placed on different height levels for versatile storage configuration or storing larger items.

To remove a shelf, open the door completely to avoid potential damage to the shelf. Lift slightly and pull the shelf forward. The shelf may fit tightly in the track.

To replace a shelf, open the door completely to avoid potential damage to the shelf. Slide the shelf into the tracks along the sides of the cabinet until it stops.

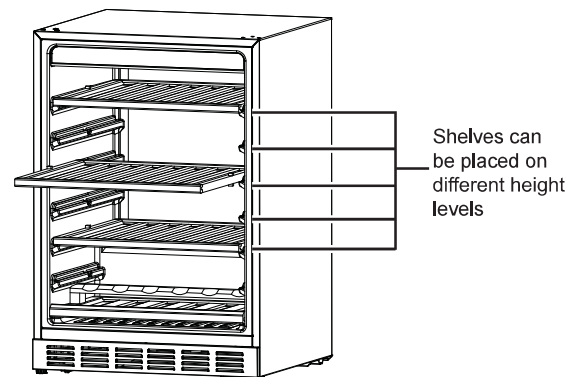

Controls and Features - Beverage Center


Reversible Shelves

The beverage center features reversible shelves, with wood rack on one side and tempered glass on the other side.

Loading Wine Bottles on the Top Three Shelves

Place shelves with wood rack side on top for loading wine bottles.


The top three shelves hold two bottles deep, with bottle necks alternating front to back.

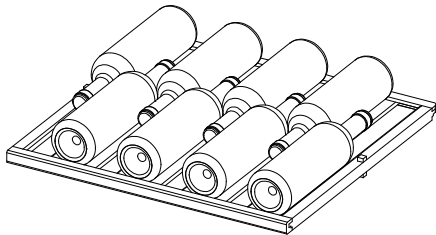


Top Three Shelves

Loading Wine Bottles on the Bottom Shelf


The bottom shelf features a wine bottle support rack. The support rack enables wine bottles being displayed at an angle. The support rack holds 6 bottles.

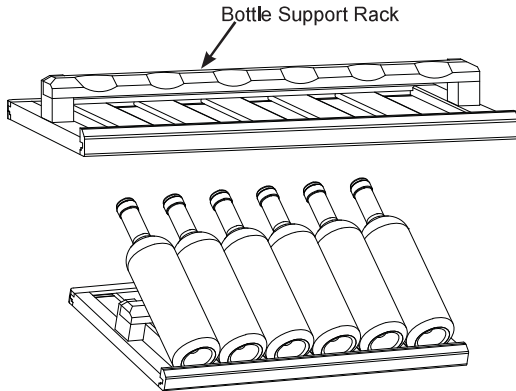

 The support rack is removable. To remove the support rack, hold both left side and right side of the support rack and pull it up. Store the support rack for future use.



Once support rack is removed, the bottom shelf becomes a reversible shelf as the top three shelves.

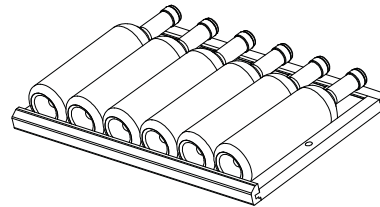


The bottom shelf holds six bottles. Tall bottles should not be loaded in the bottom drawer as they may prevent the door from closing.


Loading Beverage Cans

Place shelves with tempered glass side on top for loading beverage cans.

NOTE: Remove the wine bottle support rack from the bottom shelf before reversing the shelf.

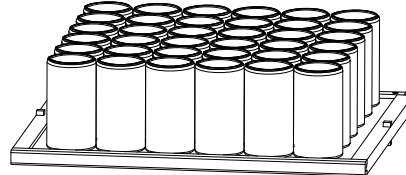

Controls and Features - Wine Chiller

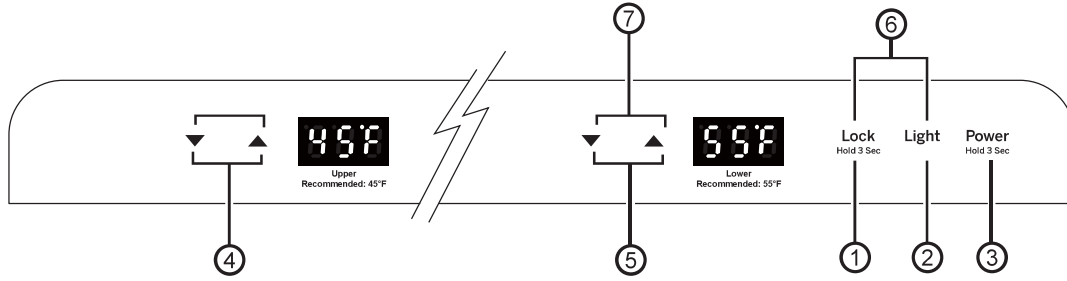

Temperature Control

The wine chiller has two zones.

The operating temperature of the upper zone is from 43°F (6°C) to 55°F (13°C).

The operating temperature of the lower zone is from 55°F (13°C) to 62°F (17°C).

Recommended setting is 45°F (7°C) for the upper zone and 55°F (13°C) for the lower zone. This recommendation allows for easy storage of white wines in the upper zone and red wines in the lower zone.

This product is designed for storing and cooling wine. It is not intended for storage of perishable foods.

As with any refrigeration-type product, there is a slight temperature variance at different locations within each zone.

Do not install the wine chiller where the temperature will go below 55°F (13°C) or above 90°F (32°C).

1. Locking/Unlocking Control Panel: To change any settings, control panel needs to be unlocked. If control panel is locked, display will flash **Loc** for 4 seconds when a key is pressed, and the key press is ignored.

Press and hold **Lock** for 3 seconds to lock/unlock control panel.

2. Interior Light: To switch the interior light on/off, simply press **Light**. The display will flash ON or OFF in this process.

When light setting is ON, interior light is always on.

When light setting is OFF, interior light turns on when door is opened, and turns off when door is closed.

Door Alarm: If door is left open for more than 2 minutes, door alarm will sound until door is closed.

Door alarm can be turned off by pressing and holding **Light** for 10 seconds.

3. Power: Press and hold the **Power** key for 3 seconds to power on or off the beverage center.

4. UP and DOWN to Change Upper Zone Temperature Setting:

Press the DOWN key or the UP key once to enter temperature setting change mode. The upper zone display will start to flash the current temperature setting.

Press the DOWN key or UP key again to decrease or increase the desired temperature in increments of one degree.

5. UP and DOWN to Change Lower Zone Temperature Setting:

Press the DOWN key or the UP key, in the lower display area, once to enter temperature setting change mode. The lower zone display will start to flash the current temperature setting.

Press the DOWN key or UP key again to decrease or increase the desired temperature in increments of one degree.

If no key is pressed in 3 seconds, the display will stop flashing, and your change will be automatically accepted.

When temperature setting is changed, allow 24 hours for the unit to stabilize.


6. Sabbath Mode: Press and hold **Lock** and **Light** simultaneously for 5 seconds to enter or exit Sabbath mode. Display will show **SAb** when in Sabbath mode.

7. Fahrenheit and Celsius: Press and hold the DOWN key and the UP key simultaneously for 3 seconds to switch between Fahrenheit and Celsius temperature display.


Controls and Features - Wine Chiller

Loading Wine Bottles

All three extension drawers in the upper zone and the top extension drawer in the lower zone each hold eight bottles, two deep with the necks alternating front to back.

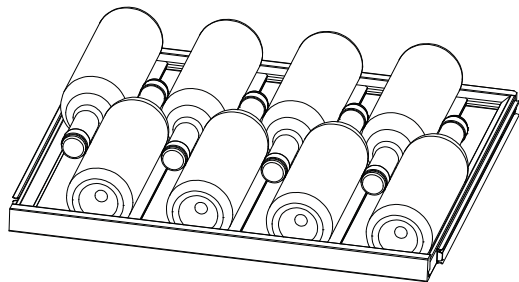

The bottom two extension drawers in the lower zone hold six bottles each. Tall bottles should not be loaded in the bottom drawer as they may prevent the door from closing.

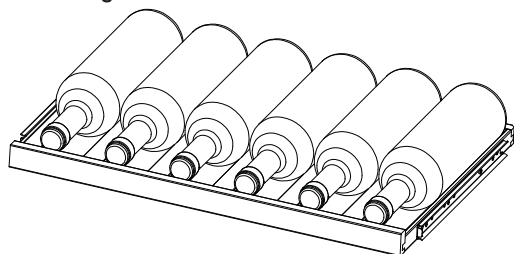

Extension Drawers

All of the extension drawers pull out so bottles can be conveniently loaded or removed.


Any of the extension drawers can be removed to store larger bottles.

To remove:

1. Pull the extension drawer out to the STOP position.
2. Push the tab on right drawer guide down while pushing the tab on left guide up, and pull the drawer out.

To replace:

1. Insert the sides of the drawer back into the guides.
2. Push until the tabs lock into place.

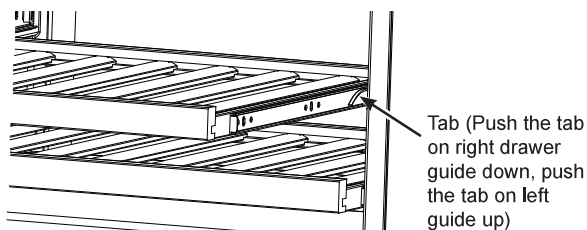

NOTE: Make sure the tabs on the extension drawer guides are fully engaged before loading any bottles. Pull the drawers out all the way to the STOP position and push back in several times to make sure locking tabs are properly engaged.

Care and Cleaning

Cleaning the Outside

⚠ WARNING  **Electrical Shock Hazard.**

Unplug the beverage center or wine chiller before cleaning.

Directions for Cleaning Outside Surfaces, Door Handles, and Trim

DO USE	DO NOT USE
Soft, clean cloth or sponge	Abrasive cloths, scrubbing sponges, scouring or steel wool pads
Mild detergent mixed with warm water Approved stainless steel cleaners; Visit the GE Appliances parts store for approved stainless steel cleaners: GEAppliancesparts.com or call 877.959.8688 Cleaners with oxalic acid such as Bar Keepers Friend Soft Cleanser™ can be used to remove surface rust, tarnish and small blemishes on stainless steel surfaces only.	Abrasive powders or sprays Window Sprays or Ammonia Citrus or plant oil-based cleaners Acidic or vinegar-based cleaners Oven cleaners Cleaners containing acetone (propanone) Any cleaner with WARNING about plastic contact

NOTE: DO NOT allow stainless steel cleaner to come in contact with any plastic parts such as trim pieces, handle hardware and liners. If unintentional contact of cleaners with plastic parts does occur, clean plastic part with a sponge and mild detergent mixed with warm water.

Cleaning the Inside

⚠ WARNING  **Electrical Shock Hazard.**

Unplug the beverage center or wine chiller before cleaning.

The vinyl door gasket may be cleaned with mild soap and water or a baking soda solution. Rinse well.

After cleaning the door gasket, apply a thin layer of paraffin wax or petroleum jelly to the door gasket at the hinge side. This helps keep the gasket from sticking and bending out of shape.

Use a slightly damp cloth or sponge when cleaning around lights or controls.

Use warm water and baking soda solution—about a tablespoon (15 ml) of baking soda to a quart (1 liter) of water. This both cleans and neutralizes odors. Thoroughly rinse and wipe dry.

Other parts of the beverage center or wine chiller unit—including the extension drawers and glass shelves—can be cleaned the same way.

Do not use detergents, scouring powders, spray cleaners or other harsh chemicals to clean the interior.

⚠ CAUTION

Do not clean glass shelves with warm water when they are cold. Glass shelves may break if exposed to sudden temperature changes or impact, such as bumping or dropping. Tempered glass is designed to shatter into many small pieces if it breaks.

Automatic Defrosting

⚠ WARNING **Risk of Fire or Explosion. Flammable Refrigerant Used.**

This product defrosts automatically.

Do not use an ice pick or a metal or sharp-edged instrument to accelerate the defrosting process as it may puncture the appliance liner and then the flammable refrigerant tubing behind it.

Do not use any electrical device to defrost your appliance.

NOTE: The drain pan above the compressor may be full following defrost. Check to make sure no water spills when moving the unit.

In the Event of a Power Failure

If the power fails, open the door as infrequently as possible to maintain the temperature.

Installation Instructions

Beverage Center and Wine Chiller

Questions? Call 800.GE.CARES (800.432.2737) or Visit our Website at: GEAppliances.com

BEFORE YOU BEGIN

Read these instructions completely and carefully.

- **IMPORTANT** — Save these instructions for local inspector's use.
- **IMPORTANT** — Observe all governing codes and ordinances.
- **Note to Installer** — Be sure to leave these instructions with the Consumer.
- **Note to Consumer** — Keep these instructions for future reference.
- **⚠ WARNING** This appliance must be properly grounded. See "Grounding the Beverage Center and Wine Chiller."
- If you received a damaged beverage center or wine chiller, you should immediately contact your dealer or builder.
- **Skill Level** — Installation requires basic mechanical skills. Proper installation is the responsibility of the installer. Product failure due to improper installation is not covered under the GE Appliance Warranty.

DOOR SWING

The door swing on this product is not reversible.

TOOLS REQUIRED


- #2 Phillips screwdriver
- 10mm Hex nut driver

PRODUCT CLEARANCES

The beverage center and wine chiller is factory set for a 125° door swing.

When installed in a corner:

- Allow 4" min. clearance on the hinge side for the 90° door swing and to allow racks to slide out.
- Allow 16" minimum clearance on the hinge side for a full 125° door swing.

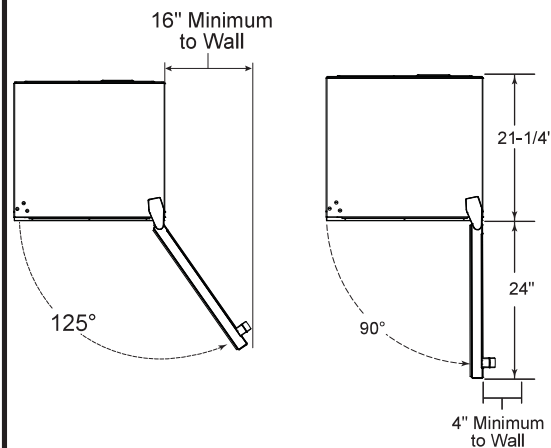


Choose the location:

- These products may be closed in on the top and three sides as long as the front is unobstructed for air circulation and proper access to the door.
- Do not install the appliance where the temperature will go below 55°F (19°C) because it will not run often enough to maintain proper temperatures.
- Do not install the appliance where the temperature will go above 90°F (35°C) because it will not perform properly.
- Do not install the appliance in a location exposed to water (rain, etc.) or direct sunlight.
- These products are not designed to be stacked one over the other.

Installation Instructions

INSTALLATION SPACE

The beverage center and wine chiller can be a free-standing model or it can be built in using the cut-out dimensions below.

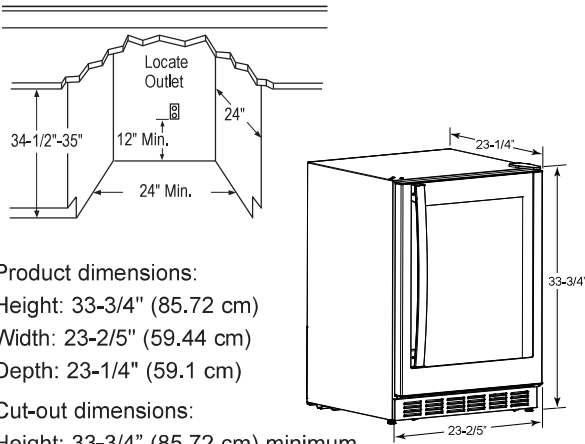

Product dimensions:
 Height: 33-3/4" (85.72 cm)
 Width: 23-2/5" (59.44 cm)
 Depth: 23-1/4" (59.1 cm)

Cut-out dimensions:
 Height: 33-3/4" (85.72 cm) minimum
 Width: 24" (61 cm) minimum
 Depth: 24" (61 cm) minimum

The cutout depth should be 24"

The cutout dimensions shown allow for a full door swing and access to the pull-out racks when installed as a built-in in standard 24" deep cabinets.

- The door should protrude 1-1/2" beyond the surrounding cabinets.
- If installing between frameless cabinets, a 1/2" wide filler strip or side panel may be needed on hinge side. The filler strip will act as a spacer between the case and adjacent cabinet door swing. The width of the opening must include the filler panels. **NOTE:** The door should protrude 1-1/2" beyond the surrounding cabinets.
- The beverage center and wine chiller can be installed freestanding.

Additional Specifications

- A 120 volt 60Hz., 15 or 20 amp power supply is required. An individual properly grounded branch circuit or circuit breaker is recommended. Install a properly grounded 3-prong electrical receptacle recessed into the back wall as shown. Electrical must be located on rear wall as shown.

NOTE: GFI (ground fault interrupter) is not recommended.

GROUNDING THE BEVERAGE CENTER AND WINE CHILLER

⚠ WARNING Electrical Shock

Hazard. For personal safety, this appliance must be properly grounded.

The power cord of this appliance is equipped with a three-prong (grounding) plug which mates with a standard three-prong (grounding) wall receptacle to minimize the possibility of electric shock hazard from this appliance.


Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded.

Where a standard 2-prong wall outlet is encountered, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

DO NOT, UNDER ANY CIRCUMSTANCES, CUT OR REMOVE THE THIRD (GROUND) PRONG FROM THE POWER CORD.

DO NOT USE AN ADAPTER PLUG TO CONNECT THE APPLIANCE TO A 2-PRONG OUTLET.

DO NOT USE AN EXTENSION CORD WITH THIS APPLIANCE.

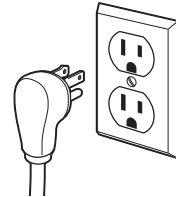


1 REMOVE PACKAGING

- Remove all packing material, tape and protective plastic coverings.

⚠ WARNING Small objects are a choke hazard for children. Remove and discard any parts not used.

2 REMOVE RUBBER PAD AND SHIPPING BRACKET


- Remove Toekick by removing 3 screws.

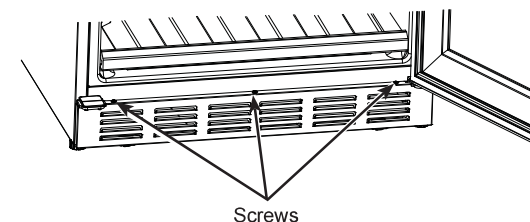


Installation Instructions

2 REMOVE RUBBER PAD AND SHIPPING BRACKET (Cont.)

- Remove 2 screws, shipping bracket, rubber pad and discard.

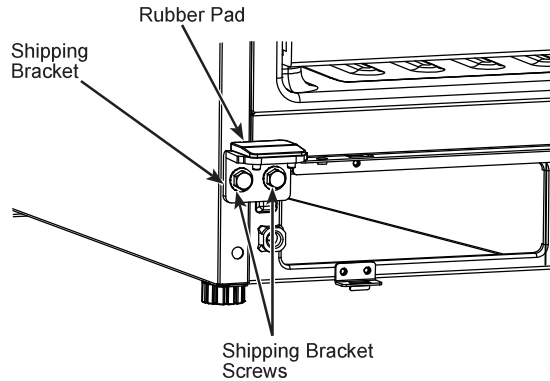

- Re-install Toekick with 3 screws.

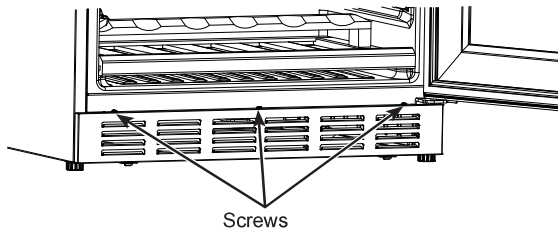


4 SLIDE PRODUCT INTO THE CUTOUT

- Carefully slide the unit into the opening. Be careful not to entangle power cord.
- Make certain that the door protrudes 1-1/2" beyond the surrounding cabinets.

5 LEVEL

Adjustable legs at the front corners of the beverage center and wine chiller should be set so the beverage center / wine chiller is firmly positioned on the floor, with a 1/8" tilt to the back to help the door closure.

To adjust the leveling legs, turn the legs counterclockwise to raise the beverage center / wine chiller, clockwise to lower it.

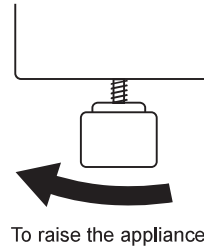

3 CONNECT POWER

- Connect power cord plug to a properly grounded receptacle.
- Make sure power is on by opening the door to see if interior light turns on.

6 SET TEMPERATURE CONTROLS

- The temperature controls are preset. Refer to the Temperature Control section for more information. Allow 24 hours for temperature to stabilize.

Normal operating sounds

Newer appliances sound different from older appliances. Modern appliances have more features and use newer technology.

HUMMM... WHOOSH...

- The new high efficiency compressor may run faster and longer than your old appliance and you may hear a high-pitched hum or pulsating sound while it is operating.
- Sometimes the appliance runs for an extended period, especially when the doors are opened frequently.
- You may hear a whooshing sound when the doors close. This is due to pressure equalizing within the appliance.



- You may hear the fans spinning at high speeds. This happens when the appliance is first plugged in, when the doors are opened frequently or when large amounts of beverages are added to the appliance. The fans help maintain desired temperatures.
- If door is open for over 3 minutes, you may hear the fans come on in order to cool the appliance.

CLICKS, POPS, CRACKS and CHIRPS

- You may hear cracking or popping sounds when the appliance is first plugged in. This happens as the appliance cools to the correct temperature.
- Expansion and contraction of cooling coils during and after defrost can cause a cracking or popping sound.

WATER SOUNDS

- The flow of refrigerant through the appliance cooling coils may make a gurgling noise like boiling water.
- Closing the door may cause a gurgling sound due to pressure equalization.

Troubleshooting tips ... Before you call for service

TROUBLESHOOTING TIPS

Problem	Possible Causes	What To Do
Appliance does not operate	Appliance may be in defrost cycle.	This is normal. Compressor does not operate for about 30 minutes when in defrost cycle.
	Appliance is unplugged.	Push the plug completely into the outlet.
	Appliance is powered off.	Power appliance back on. See "Power" in Temperature Control section.
	The circuit breaker is tripped/ the fuse is blown.	Replace fuse or reset the breaker.
	GFI outlet is tripped.	Reset outlet. GFI outlet is not recommended.
Vibration or rattling (slight vibration is normal)	Appliance is on an uneven surface.	Adjust the leveling legs as shown in the Installation Instructions.
Motor operates for long periods or cycles on and off frequently	Normal when appliance is first plugged in.	Wait 24 hours for the appliance to completely cool down.
	Often occurs when large amounts of wine or beverages are placed in the appliance.	This is normal.
	Door left open.	Always make sure that the door is closed after opening. Check to see if a bottle is holding door open.
	Hot weather or frequent door openings.	This is normal.
	Temperature control set at the coldest setting.	Allow 24 hours for temperature to change.
Compartment too warm	Normal when appliance is first plugged in.	Wait 24 hours for the appliance to completely cool down.
	Often occurs when large amounts of wine or beverages are placed in the appliance.	This is normal.
	Temperature control not set cold enough.	See Temperature Control section.
	Warm weather or frequent door openings.	See Temperature Control section.
	Door left open.	Always make sure that the door is closed after opening. Check to see if a bottle is holding door open.
Appliance has odor	Interior needs cleaning.	See Care and cleaning.
		Keep open box of baking soda in appliance; replace every 3 months.
Door not closing properly	Door gasket is sticking or folding over.	Apply petroleum jelly or paraffin wax to the face of the gasket.
	The door is hitting an internal component inside the appliance.	Adjust internal components to prevent interference.

Troubleshooting tips ... Before you call for service

Problem	Possible Causes	What To Do
Moisture forms on outside of appliance	Not unusual during periods of high humidity.	If bothersome, wipe surface dry; otherwise, moisture will evaporate in time.
	Door left open.	Always make sure that the door is closed after opening. Check to see if a bottle is holding door open.
Frost or moisture collects inside	Too frequent or too long door openings.	Appliance will dissipate moisture in time. If bothersome, wipe surface dry.
	In humid weather, air carries moisture into appliance when door is opened.	Appliance will dissipate moisture in time. If bothersome, wipe surface dry.
	Temperature control set at coldest setting.	See Temperature Control section.
Interior light does not operate	Appliance is unplugged.	Push the plug completely into the outlet.
	The circuit breaker is tripped / the fuse is blown.	Replace fuse or reset the breaker.
	GFI outlet is tripped.	Reset outlet.GFI outlet is not recommended.
Hot air from bottom of appliance	Normal air flow cooling motor.	In the refrigeration process, it is normal for heat to be expelled in the area under the appliance. Some floor coverings are sensitive and will discolor at these safe and normal temperatures.
Appliance never shuts off	Too frequent or too long door openings.	This is normal. The appliance will cycle off after it reaches desired temperature.
	Extreme environment temperatures	Normal operation in extreme temperatures.

GE Appliances Limited Warranty

LIMITED WARRANTY

GEAppliances.com

For US Customers, all warranty service is provided by our Factory Service Centers, or an authorized Customer Care® technician. To schedule service online, visit us at geappliances.com/service, or call GE Appliances at 800.GE.CARES (800.432.2737). Please have your serial number and your model number available when calling for service. **In Canada**, call 800.561.3344.

GE and PROFILE Series Models:

For the period of	GE Appliances will replace
One year From the date of the original purchase	Any part of the beverage center or wine chiller which fails due to a defect in materials or workmanship. During this limited one-year warranty , GE Appliances will provide, free of charge , all labor and in-home service to replace the defective part.

PROFILE Series Models Only:

For the period of	GE Appliances will replace
Five years From the date of the original purchase	Any part of the sealed refrigerating system (the compressor, condenser, evaporator and all connecting tubing) which fails due to a defect in materials or workmanship. During this limited five-year sealed refrigerating system warranty , GE Appliances will also provide, free of charge, all labor and related service to replace the defective part in the sealed refrigerating system.

What GE Appliances will not cover:

- Service trips to your home to teach you how to use the product.
- Improper installation, delivery or maintenance.
- Failure of the product if it is abused, misused, or used for other than the intended purpose or used commercially.
- Loss of wine due to spoilage.
- Replacement of house fuses or resetting of circuit breakers.
- Damage caused after delivery.
- Replacement of the light bulbs, if included, or water filter cartridge, if included.
- Damage to the product caused by accident, fire, floods or acts of God.
- Incidental or consequential damage caused by possible defects with this appliance.
- Product not accessible to provide required service.
- Damage to finish, such as surface rust, tarnish, or small blemishes not reported within 48 hours of delivery.

EXCLUSION OF IMPLIED WARRANTIES

Your sole and exclusive remedy is product repair as provided in this Limited Warranty. Any implied warranties, including the implied warranties of merchantability or fitness for a particular purpose, are limited to one year or the shortest period allowed by law.

For US Customers: This limited warranty is extended to the original purchaser and any succeeding owner for products purchased for home use within the USA. If the product is located in an area where service by a GE Appliances Authorized Servicer is not available, you may be responsible for a trip charge or you may be required to bring the product to an Authorized GE Appliances Service location for service. In Alaska, the limited warranty excludes the cost of shipping or service calls to your home.

Some states do not allow the exclusion or limitation of incidental or consequential damages. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are, consult your local or state consumer affairs office or your state's Attorney General.

Warrantor: GE Appliances, a Haier company
Louisville, KY 40225

For Customers in Canada: This limited warranty is extended to the original purchaser and any succeeding owner for products purchased in Canada for home use within Canada. In-home warrant service will be provided in areas where it is available and deemed reasonable by Mabe to provide.

Warrantor Canada: MC Commercial, Burlington, Ontario, L7R 5B6

Staple your receipt here. Proof of the original purchase date is needed to obtain service under the warranty.

Consumer Support

GE Appliances Website

Have a question or need assistance with your appliance? Try the GE Appliances Website 24 hours a day, any day of the year! You can also shop for more great GE Appliances products and take advantage of all our on-line support services designed for your convenience. In the US: GEAppliances.com In Canada: GEAppliances.ca

Register Your Appliance

Register your new appliance on-line at your convenience! Timely product registration will allow for enhanced communication and prompt service under the terms of your warranty, should the need arise. You may also mail in the pre-printed registration card included in the packing material.

In the US: GEAppliances.com/register

In the Canada: Prodsupport.mabe.ca/crm/Products/ProductRegistration.aspx

Schedule Service

Expert GE Appliances repair service is only one step away from your door. Get on-line and schedule your service at your convenience any day of the year. In the US: GEAppliances.com/service or call 800.432.2737 during normal business hours.

In Canada: GEAppliances.ca/en/support/service-request or call 800.561.3344

Extended Warranties

Purchase a GE Appliances extended warranty and learn about special discounts that are available while your warranty is still in effect. You can purchase it on-line anytime. GE Appliances Services will still be there after your warranty expires. In the US: GEAppliances.com/extended-warranty or call 800.626.2224 during normal business hours.

In Canada: GEAppliances.ca/en/support/purchase-extended-warranty or call 866.277.9842

Remote Connectivity

For assistance with wireless network connectivity (for models with remote enable), visit our website at GEAppliances.com/ge/connected-appliances or call 800.220.6899 in the US only.

Parts and Accessories

Individuals qualified to service their own appliances can have parts or accessories sent directly to their homes (VISA, MasterCard and Discover cards are accepted). Order on-line today 24 hours every day.

In the US: GEApplianceparts.com or by phone at 877.959.8688 during normal business hours.

Instructions contained in this manual cover procedures to be performed by any user. Other servicing generally should be referred to qualified service personnel. Caution must be exercised, since improper servicing may cause unsafe operation.

Customers in Canada should consult the yellow pages for the nearest Mabe service center, visit our website at GEAppliances.ca/en/products/parts-filters-accessories or call 800.661.1616.

Contact Us

If you are not satisfied with the service you receive from GE Appliances, contact us on our Website with all the details including your phone number, or write to:

In the US: General Manager, Customer Relations | GE Appliances, Appliance Park | Louisville, KY 40225
GEAppliances.com/contact

In Canada: Director, Consumer Relations, Mabe Canada Inc. | Suite 310, 1 Factory Lane | Moncton, N.B. E1C 9M3
GEAppliances.ca/en/contact-us
