

Disassembling the dryer / Démontage du sèche-linge / Desensamble de la secadora

DC68-04513A-00













Disconnect/Débrancher/Desconectar



Unscrew/Dévisser/Desatornillar



Remove/Retirer/Retirar

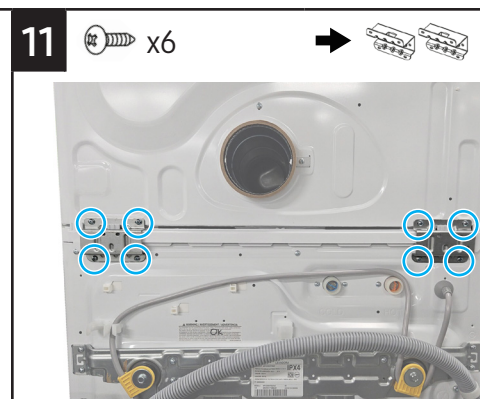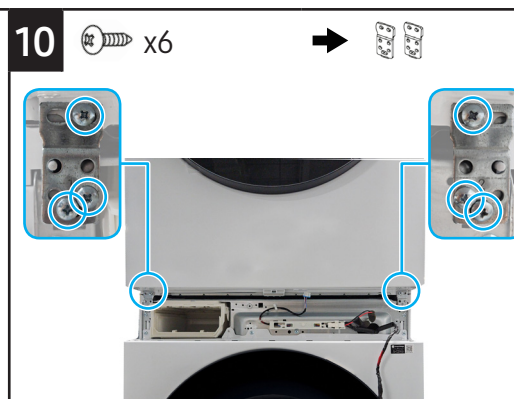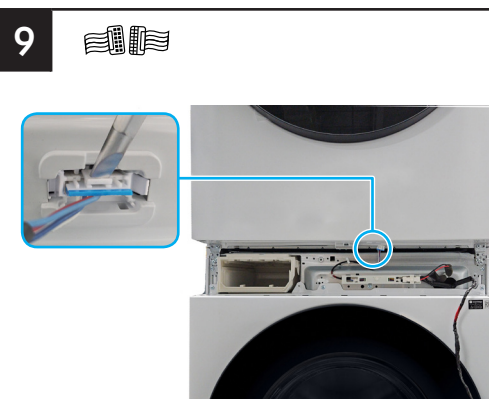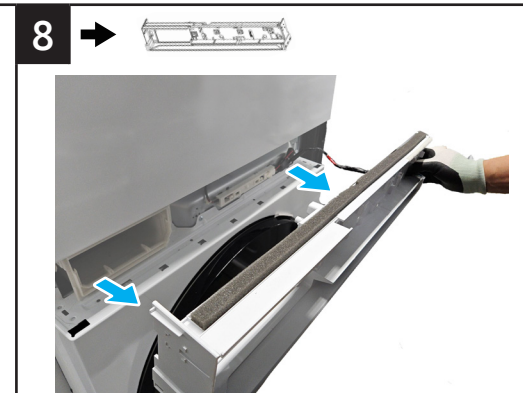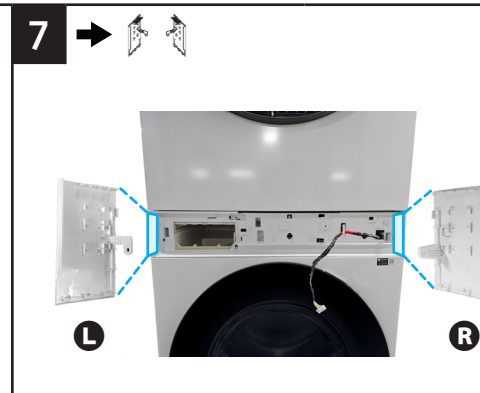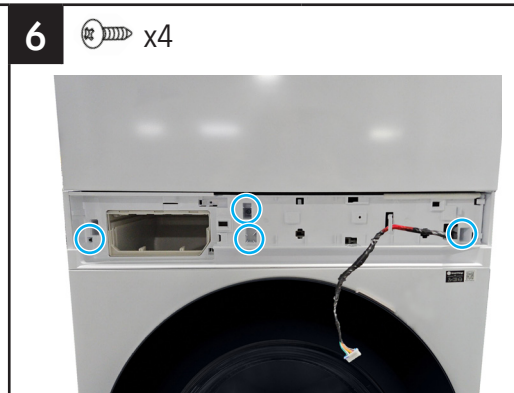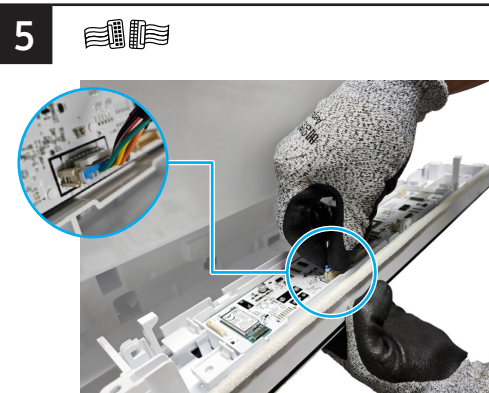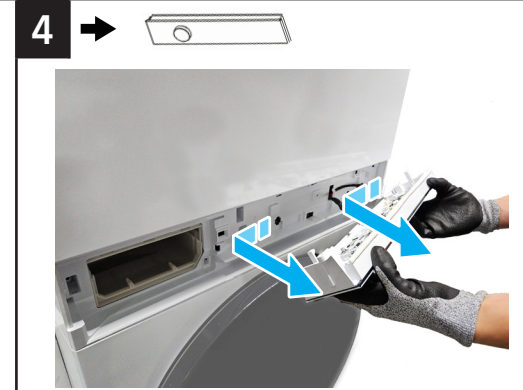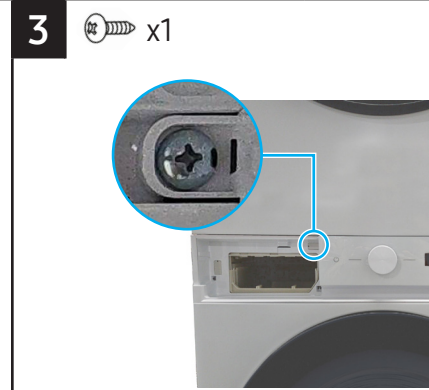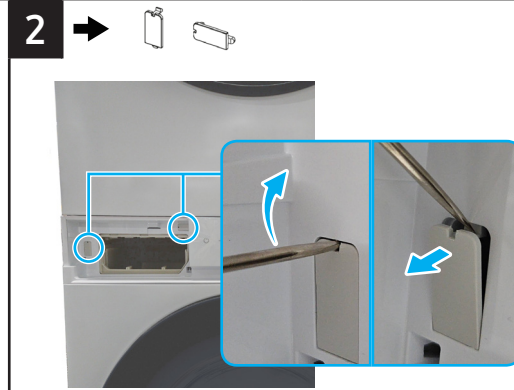

Assemble the dryer in the reverse order of disassembly. / Assemblez le sèche-linge en procédant dans l'ordre inverse du démontage. / Ensamble la secadora en el orden inverso al del desensamble.