


PARTS DIAGRAM & LIST

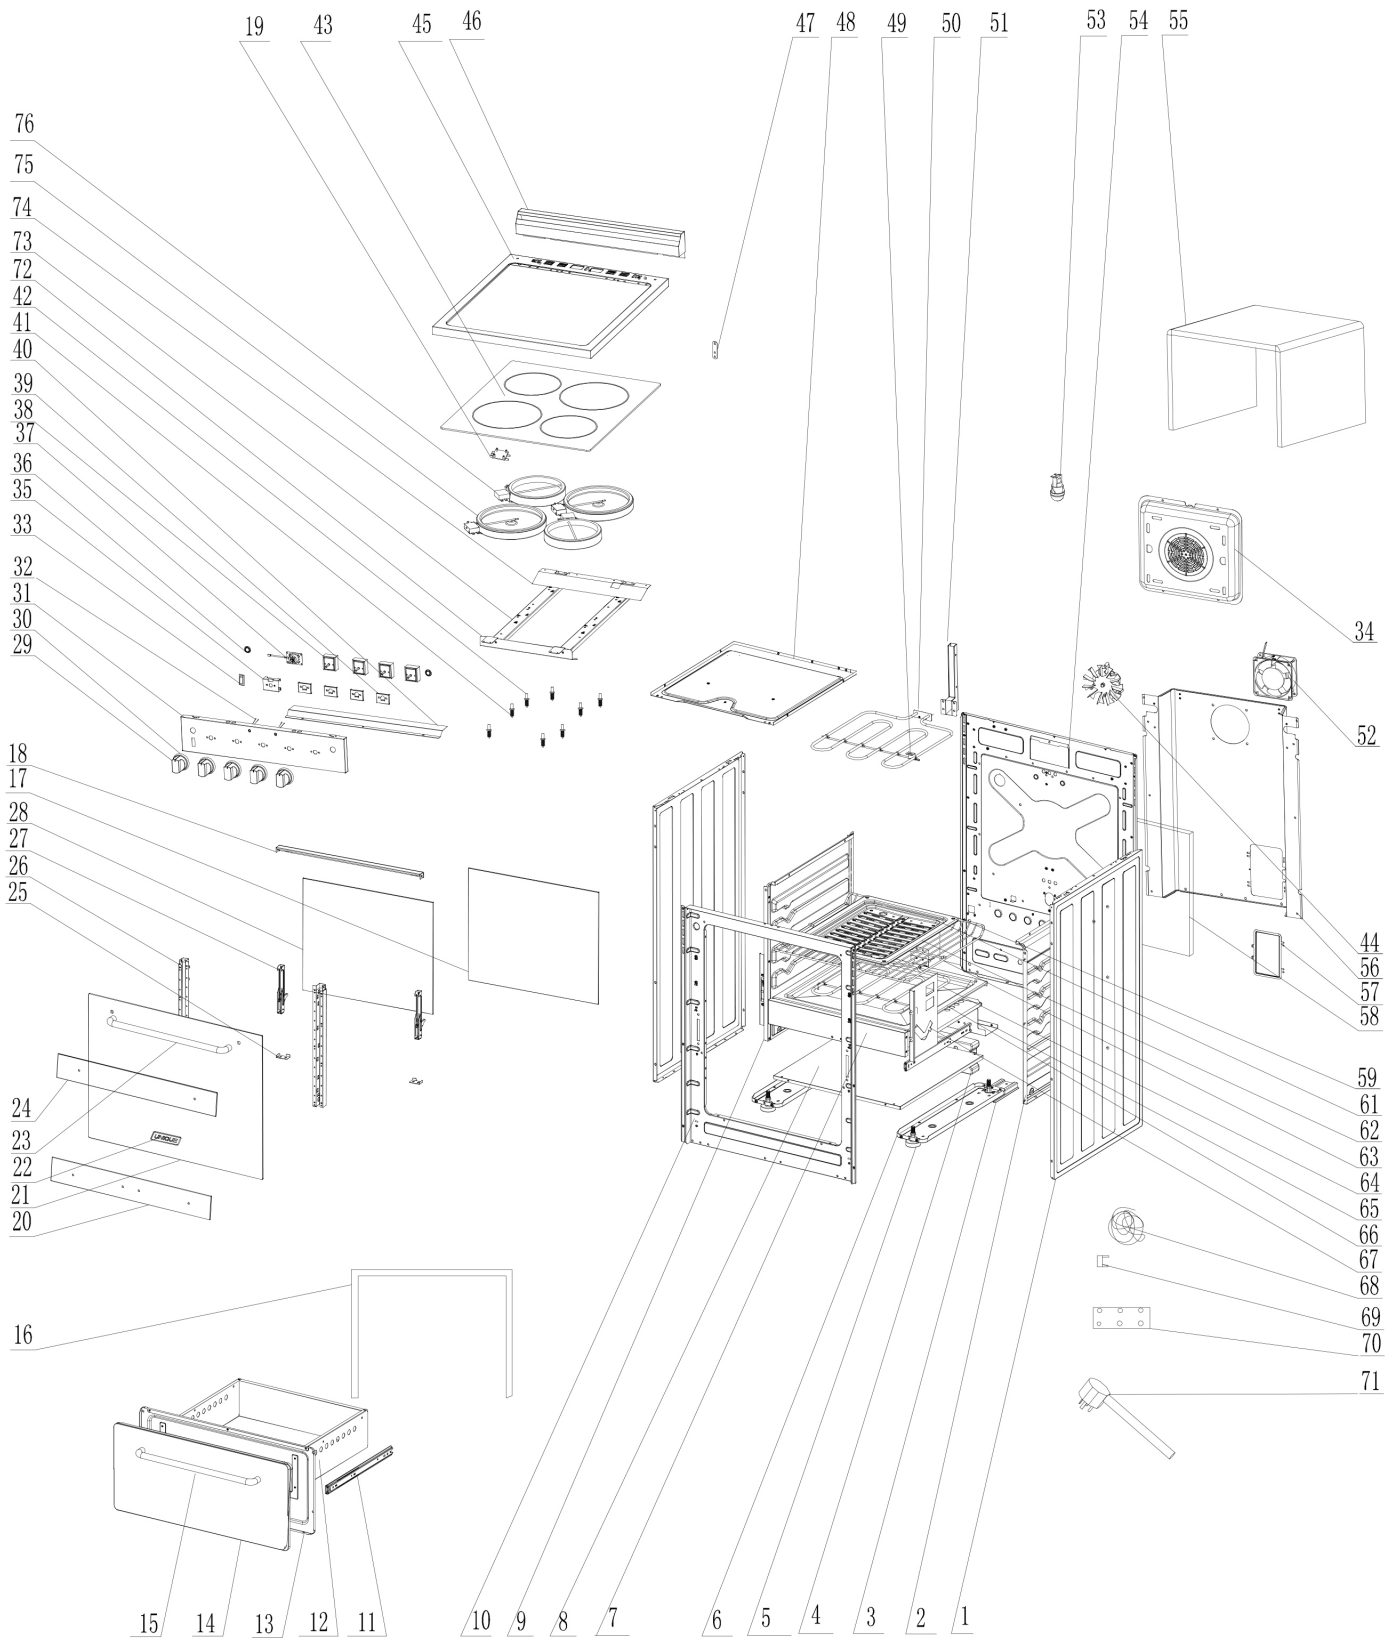

Please visit our website www.uniqueappliances.com to view a PDF version of the schematics which will allow you to zoom in & out

PARTS DIAGRAM & LIST

ITEM #	PART #	DESCRIPTION
1	UGP-G20C01-071002	Side Panel S/S (Left & Right) T=0.5 for UGP-24V; 20V PC1; EC S/S
	UGP-G20C01-071002-01	Side Panel White (Left & Right) T=0.5 for UGP-24V; 20V PC1; EC W
	UGP-G20C01-071002-02	Side Panel Black (Left & Right) T=0.5 for UGP-24V; 20V PC1; EC B
2	UGP-G20A01-070500	Cavity- Right Plate for UGP-24V; 20V PC1; EC S/S;W;B
3	UGP-G20A01-212500	Anti-tip Bracket for UGP-24V; 20V PC1; EC S/S;W;B
4	UGP-G20A01-210200	Weight Block (2.5 kg) for UGP-24V; 20V PC1; EC S/S;W;B
5	UGP-G20C01-071500	Oven Feet for UGP-24V; 20V PC1; EC S/S;W;B
6	UGP-G20A01-071100	Oven Feet Mounting Plate for UGP-24V; 20VPC1; EC S/S;W;B
7	UGP-G24A01-070200	Front Plate- Beam for UGP-24V PC1; EC S/S;W;B
8	UGP-G24C01-072101	Burner Mounting Plate for UGP-24V PC1; EC S/S;W;B
9	UGP-G20A01-070400	Cavity- Left Plate for UGP-24V; 20V PC1; EC S/S;W;B
10	UGP-G24C01-070102	Front Plate for UGP-24V PC1; EC S/S;W;B
11	UGP-G20A01-120700	Sliding Rail Component (set of 2) for UGP-24V; 20V PC1; EC S/S;W;B
12	UGP-G24C03-120500-02	Drawer Body for UGP-24V PC1; EC S/S;W;B
13	UGP-G24C02-120200-04	Drawer- S/S Inside Plate for UGP-24V PC1; EC S/S
14	UGP-G24H08-120100	Drawer- S/S Outside Plate for UGP-24V PC1; EC S/S
	UGP-G24H08-120100-02	Drawer- Black Outside Plate for UGP-24V PC1; EC B
	UGP-G24H08-120100-01	Drawer- White Outside Plate for UGP-24V PC1; EC W
15	UGP-G24B11-101900	Oven/Broiler Door Handle S/S for UGP-24V PC1; EC S/S;W;B
16	UGP-G24C01-071200	Cavity Sealing Strip-2 (long) for UGP-24V PC1; EC S/S;W;B
17	UGP-G24H08-100500	LOWE Inner Glass Door for UGP-24V PC1; EC S/S;W;B
18	UGP-G24B01-101401	Door Top Cover for UGP-24V PC1; EC S/S;W;B
19	UGP-E24H08-031000	Temperature indicator light for UGP-24V; 20V EC
20	N/A	
21	N/A	
22	N/A	
23	UGP-G24B11-101900	Oven/Broiler Door Handle S/S for UGP-24V PC1; EC S/S;W;B
24	N/A	
25	UGP-G20B01-100800	Door- Inside Glass Support (Left) for UGP-24V; 20V PC1: EC S/S;W;B
25	UGP-G20B01-100900	Door- Inside Glass Support (Right) for UGP-24V; 20VPC1; EC S/S;W;B
26	UPG-G20B01-101200	Hinge Support (Left) for UGP-24V; 20V PC1; EC S/S;W;B
26	UGP-G20B01-101300	Hinge Support (Right) for UGP-24V; 20V PC1; EC S/S;W;B
27	UGP-G20B01-110003	Door Hinge for UGP-24V PC1; EC S/S;W;B
28	UGP-G24H08-101100	LOWE Door Inside Window for UGP-24V PC1; EC S/S;W;B
29	UGP-G20A20-030100-09	Knob #20 short stem for UGP-24V; 20V EC S/S
30	UGP-G20A06-030200-10	Knob Ring #6 (Bezel) for UGP-24V; 20V PC1; EC S/S;W;B (set of 5)
31	UGP-E24H08-030300	Control Panel for UGP-24V PC1; EC S/S
32	UGP-E24F08-031002	Oven indicator light (blue) for UGP-24V; 20V EC S/S
33	UGP-E24H08-170200	Oven Option Switch for UGP-24V; 20V EC
34	UGP-G20H08-091700	Temperature Fan Cover for UGP-20V; 24V PC1; EC S/S;W;B
35	UGP-E24F08-190501	Rheostat mount bracket for UGP-24V; 20V EC
36	UGP-G24H08-170200	Fan Switch ASM for UGP-24V; 20V PC1; EC S/S;W;B
37	UGP-E24H08-030900	Oven Rheostat for UGP-24V; 20V EC
not shown on drawing	UGP-E20H08-030901	Main PCB for UGP-24V; 20V EC
	UGP-E20H08-030902	Temperature Probe for UGP-24V; 20V EC
	UGP-E20H08-030903	Oven Rheostat Connectin Wire for UGP-24V; 20V EC
	UGP-E20H08-030904	Oven Option Switch Connecting Wire for UGP-24V; 20V EC
	UGP-E20H08-030905	PCB Power In Harness for UGP-24V; 20V EC
	UGP-E20H08-030906	Oven Control Wire for UGP-24V; 20V EC
	UGP-E20H08-030907	Broiler Control Wire for UGP-24V; 20V EC
	UGP-E20H08-030908	High Temperature Limit Connecting Wire for UGP-24V; 20V EC
38	UGP-E24F01-031600	Top Heating Element Rheostat for UGP-24V; 20V EC
39	UGP-E24H08-120900	Top Heating Element Rheostat mount bracket for UGP-24V; 20V EC
40	UGP-E24F08-214500	Control Panel Deflector for UGP-24V EC
41	UGP-E24F08-026100	Top Heating Element Support Spring for UGP-20V; 24V EC

PARTS DIAGRAM & LIST (continued)

ITEM #	PART #	DESCRIPTION
42	UGP-E24F08-025100	Top Heating Element Support Bolt for UGP-20V; 24V EC
43	UGP-E24H08-030200	Microcrystalline Glass with Edging for UGP-24V EC
44	UGP-G20A01-091501	120 V Temperature Fan for UGP-20V; 24V PC1; EC S/S;W;B
45	UGP-E24F08-020100	N/A
46	UGP-G24H08-011500-Z	Backsplash ASSY for UGP-24V EC
47	UGP-G20C01-022000	Cooktop Back Connection Plate for UGP-24V; 20V PC1; EC S/S;W;B
48	UGP-G24C01-070604	Cavity- Top Plate for UGP-24V EC S/S;W;B
49	UGP-C20A01-091201	Oven/Broiler Heating Element Support for UGP-20V; 24VECS/S;W;B
50	UGP-E24F01-091001	Broiler Heating Element 240V 2100W for UGP-20V; 24V EC S/S;W;B
51	UGP-E24F01-074200	Chimney ASSY for UGP-20V; 24V EC S/S;W;B
	UGP-E24F01-075000	N/A
52	UGP-E24F08-200900	Cooling Fan Motor for UGP-20V; 24V EC S/S;W;B
53	UGP-G20C01-180101	120V / 15W Oven Interior Light for UGP-24V; 20V PC1; EC S/S;W;B
54	UGP-G24C01-070307	Cavity- Back Panel for UGP-24V EC S/S;W;B
55	UGP-G24A01-070800	Cavity Heat Insulation Cotton for UGP-24V PC1; EC S/S;W;B
56	UGP-E24F01-072000	Back Panel for UGP-24V EC S/S;W;B
57	UGP-E24F08-072000	Service Door for UGP-20V; 24V EC S/S;W;B
58	UGP-E24F08-072900	Oven Insulation (back) for UGP-24V EC S/S;W;B
59	UGP-G24E05-070700	Broil Tray for UGP-24V PC1; EC S/S;W;B
61	UGP-G20C01-215100	Broil Grill for UGP-24V; 20V PC1; EC S/S;W;B
62	UGP-G20C01-215000	Broil Tray for UGP-24V; 20V PC1; EC S/S;W;B
63	UGP-G24H08-071900	Roasted Net (Oven Rack) for UGP-24V PC1; EC S/S;W;B
64	UGP-E20F01-091201	Oven Heating Element 240V 2100W for UGP-20V; 24V EC S/S;W;B
65	UGP-E24F01-034500	Wiring Block Bracket for UGP-24V EC S/S;W;B
66	UGP-E24F08-070700	Cavity- Bottom Panel (Oven Floor) for UGP-24V EC S/S;W;B
67	UGP-G20C01-111100	Door Hinge Plate for UGP-24V; 20V PC1; EC S/S;W;B
68	UGP-E24H08-180300	Harness for UGP-24V EC S/S;W;B
69	UGP-C36R05-076200	50C Temperature Limit Switch for UGP-24V; 20V EC S/S;W;B
	UGP-E24F01-076200	240C Temperature Limit Switch for UGP-24V; 20V EC S/S;W;B
70	UGP-E20F01-106400	Oven Junction Box for UGP-24V; 20V EC S/S;W;B
71	UGP-G20A14-160100	Power Cord for UGP-24V; 20V EC S/S;W;B
72	UGP-E24F08-069900	Microcrystalline Glass Support (front) for UGP-24V EC
73	UGP-E24F08-024100	Top Heating Element Support Left for UGP-24V EC
73	UGP-E24F08-024200	Top Heating Element Support Right for UGP-24V EC
74	UGP-E24F08-022000	Microcrystalline Glass Support (rear) for UGP-24V EC
75	UGP-E24F08-022400	Top Heating Element 1800W for UGP-20V; 24V EC
76	UGP-E24F08-022300	Top Heating Element 1200W for UGP-20V; 24V EC
	UGP-G24H08-100400S/S	Oven door ASSY for UGP-24V PC1; EC S/S
	UGP-G24H08-100400B	Oven door ASSY for UGP-24V PC1; EC B
	UGP-G24H08-100400W	Oven door ASSY for UGP-24V PC1; EC W