


# UGP -30CR EC

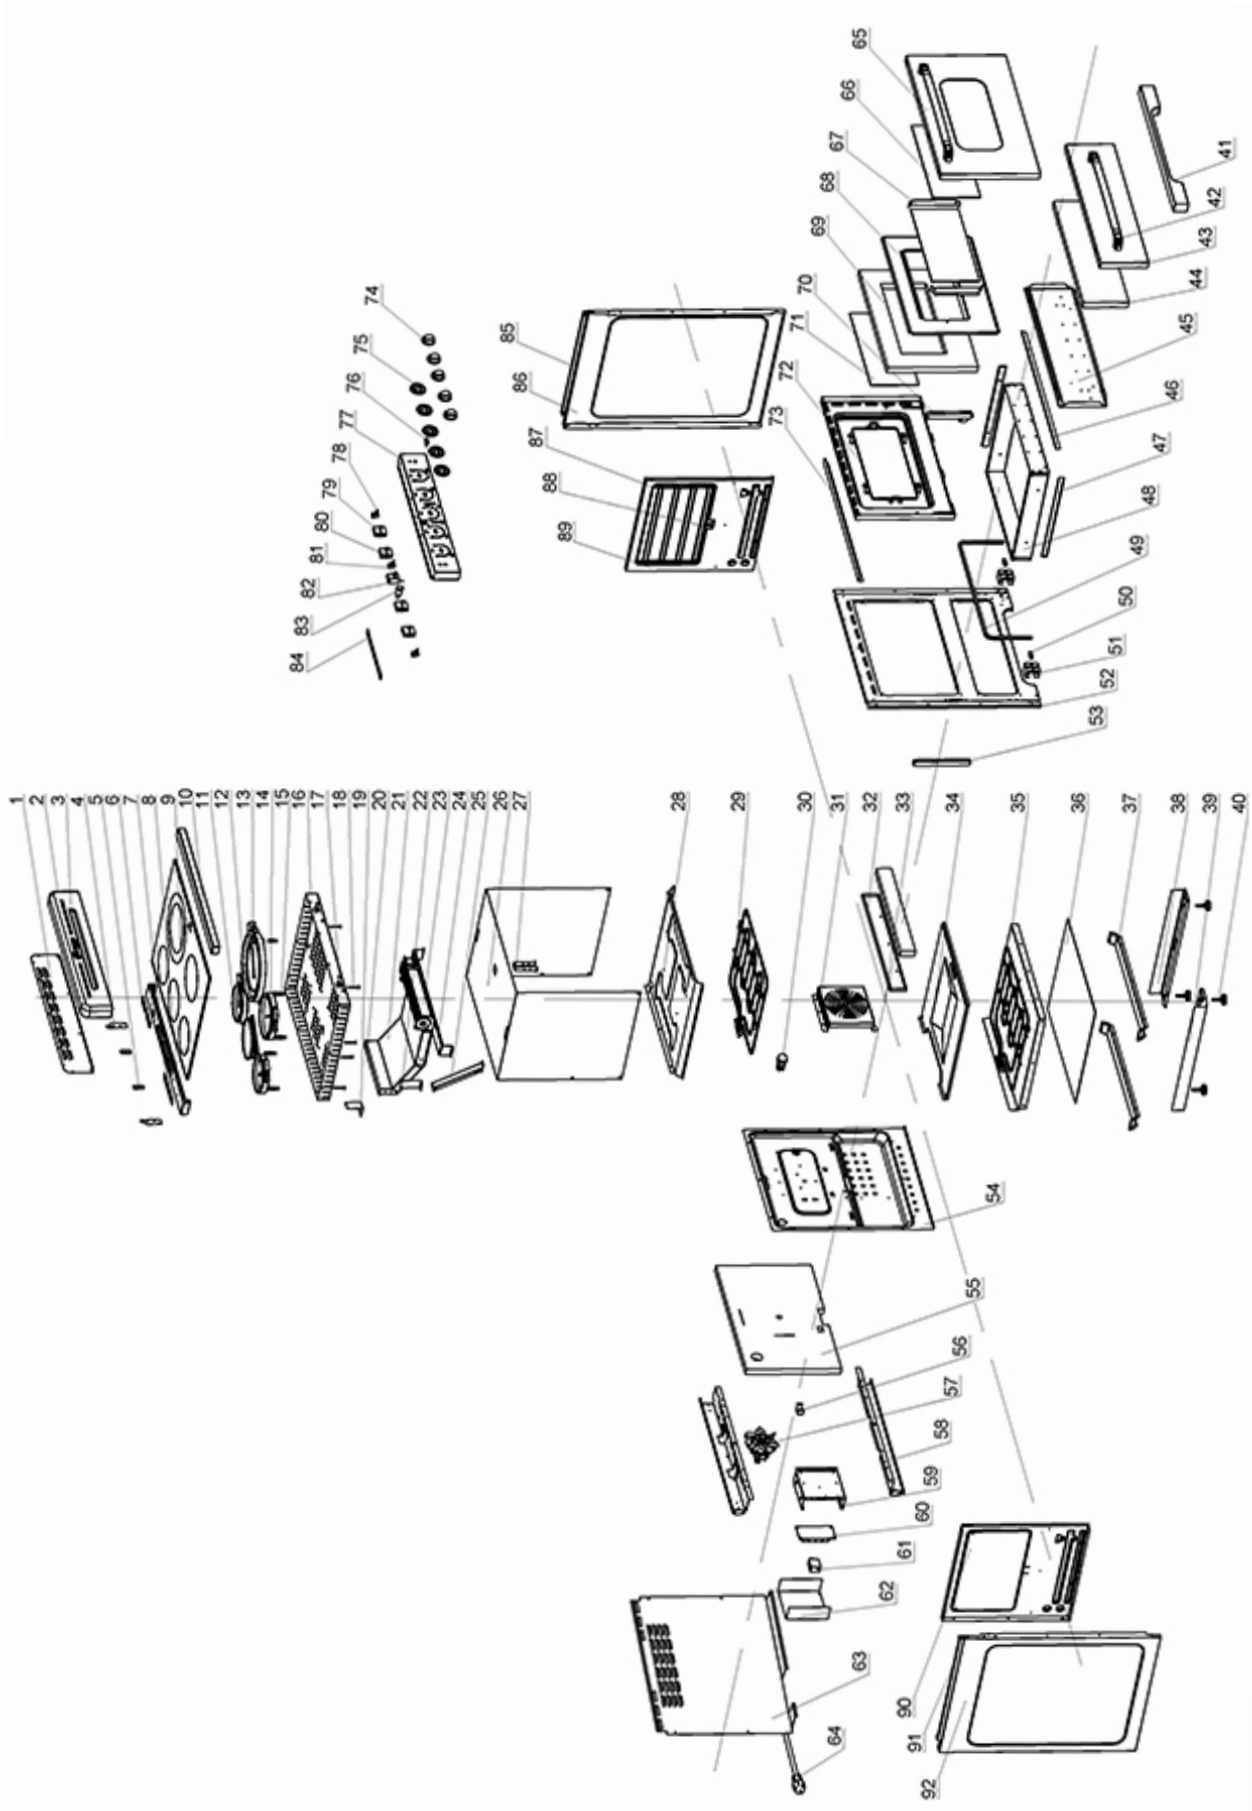

## UGP -30CR EC ELECTRIC RANGE PARTS LIST

ITEM#	DESCRIPTION	PART#
1	Backsplash Back Cover <b>UGP-30CR EC</b>	<b>UGP-CYJ01089</b>
4	Backsplash Bracket <b>UGP-30CR EC</b>	<b>UGP-CY14516</b>
5	Cooktop Bracket <b>UGP-30CR EC</b>	<b>UGP-CYJ01090</b>
6	Backsplash Mount Plate RH <b>UGP-30CR EC</b>	<b>UGP-CYJ01094</b>
7	Backsplash Mount Plate LH <b>UGP-30CR EC</b>	<b>UGP-CYJ01093</b>
8	Cooktop Rear Panel <b>UGP-30CR EC</b>	<b>UGP-PSJ00311</b>
9	Cooktop Glass Panel <b>UGP-30CR EC</b> (including 30" glass ceramics, Glass strip)	<b>UGP-QJG00191</b>
10	Cooktop Front Panel <b>UGP-30CR EC</b>	<b>UGP-PSJ00312</b>
11	1200W Rear Right/Rear Left Ceramic Heating Element ASSY <b>UGP-30CR EC</b>	<b>UGP-QJG00229</b>
12	100W Rear Centre Ceramic Heating Element ASSY <b>UGP-30CR EC</b>	<b>UGP-QJG00232</b>
13	3000W Front Right Ceramic Heating Element ASSY <b>UGP-30CR EC</b>	<b>UGP-QJG00231</b>
14	1800W Front Left Ceramic Heating Element ASSY <b>UGP-30CR EC</b>	<b>UGP-QJG00230</b>
15	Heating Element Support Spring <b>UGP-30CR EC</b>	<b>UGP-THL00003</b>
16	Cooktop Base <b>UGP-30CR EC</b>	<b>UGP-CYJ01100</b>
17	V Shape Buckle <b>UGP-30CR EC</b>	<b>UGP-CYJ01102</b>
18	Heating Element Screw <b>UGP-30CR EC</b>	<b>UGP-LDL00048</b>
19	Heating Element Support Bracket <b>UGP-30CR EC</b>	<b>UGP-CYJ01105</b>
20	Hot Air Vent ASSY <b>UGP-30CR EC</b> (P/N for entire ASSY: QJG00192)	<b>UGP-QJG00192</b>

## UGP -30CR EC ELECTRIC RANGE PARTS LIST

ITEM#	DESCRIPTION	PART#
25	Chimney Assy <b>UGP-30CR EC</b>	<b>UGP-QJG00190</b>
28	Oven Ceiling <b>UGP-30CR EC</b>	<b>UGP-PSJ00322</b>
29	3400W Oven Heating Element <b>UGP-30CR EC</b>	<b>UGP-FRG00018</b>
30	Oven Light for <b>20/24/24/30CR ON1/EC</b>	<b>UGP-DPJ99188</b>
31	Fan Cover Panel <b>UGP-30CR EC</b>	<b>UGP-PSJ00316</b>
32	Oven Heating Element Support Bracket <b>UGP-30CR EC</b>	<b>UGP-CY14231</b>
33	Liner Front Panel Insulated Fiber for <b>UGP-30G/30 CR EC</b>	<b>UGP-DPJ99003</b>
34	Oven Floor <b>UGP-30CR EC</b>	<b>UGP-PSJ00315</b>
35	Lower Heating Element Base <b>UGP-30CR EC</b>	<b>UGP-PSJ00317</b>
36	Drawer Heat Insulation <b>UGP-30CR EC</b>	<b>UGP-CYJ01134</b>
37	Bottom Plate <b>UGP-30CR EC</b>	<b>UGP-CYJ00214</b>
38	Foot Mounting Plate(right) <b>UGP-30CR EC</b>	<b>UGP-CY14238</b>
39	Foot Mounting Plate(left) <b>UGP-30CR EC</b>	<b>UGP-CY14237</b>
40	Adjustable Feet for: <b>UGP-24G/24CR/30CR/30G/20/24/24CR/30CR ON1/OF1/EC</b>	<b>UGP-DWWJ01010</b>
41	Kick Plate Turquoise for: <b>UGP-30CR/ 30CR EC</b>	<b>UGP-PSJ00050-T</b>
	Kick Plate Black for: <b>UGP-30CR/ 30CR EC</b>	<b>UGP-PSJ00050-B</b>
	Kick Plate White for: <b>UGP-30CR/ 30CR EC</b>	<b>UGP-PSJ00050-W</b>
	Kick Plate Light Green for: <b>UGP-30CR/ 30CR EC</b>	<b>UGP-PSJ00050-LG</b>

## UGP -30CR EC ELECTRIC RANGE PARTS LIST

ITEM#	DESCRIPTION	PART#
42	Oven/Drawer Door Handle ASSY Turquoise <b>UGP-30CR EC</b>	<b>UGP-QJG00138</b>
	Oven/Drawer Door Handle ASSY Black <b>UGP-30CR EC</b>	<b>UGP-QJG00137</b>
	Oven/Drawer Door Handle ASSY White <b>UGP-30CR EC</b>	<b>UGP-QJG00136</b>
	Oven/Drawer Door Handle ASSY Light Green <b>UGP-30CR EC</b>	<b>UGP-QJG00139</b>
43	Drawer Outer Panel Turquoise <b>UGP-30CR EC</b>	<b>UGP-PSJ00164-T</b>
	Drawer Outer Panel Black <b>UGP-30CR EC</b>	<b>UGP-PSJ00164-B</b>
	Drawer Outer Panel White <b>UGP-30CR EC</b>	<b>UGP-PSJ00164-W</b>
	Drawer Outer Panel Light Green <b>UGP-30CR EC</b>	<b>UGP-PSJ00164-LG</b>
44	Drawer Door Heat Insulation <b>UGP-30CR EC</b>	<b>UGP-DPJ99007</b>
45	Drawer Door Inner Panel <b>UGP-30CR EC</b>	<b>UGP-PSJ00163</b>
46	Broiler (OF1) / Drawer Door (ON1) Decorative Strip for <b>UGP-30CR/EC</b>	<b>UGP-CYJ00060</b>
47	Drawer Slider ASSY <b>UGP-30CR EC</b>	<b>UGP-WJJ00053</b>
48	Drawer <b>UGP-30CR EC</b>	<b>UGP-PSJ00297</b>
49	Broiler/Drawer Seal (Gasket) for <b>UGP-30G/30CR/EC</b>	<b>UGP-DWWJ01018</b>
50	Kick Plate Support Magnet <b>UGP-24/30CR ON1/OF1/EC</b>	<b>UGP-DWJ9945-4</b>
51	Kick Plate Support Bracket <b>UGP-30CR EC</b>	<b>UGP-CY14266</b>
53	Hinge Base for <b>UGP-24/30CR ON1/OF1/EC</b>	<b>UGP-DWWJ01345-1</b>
55	Back Insulation <b>UGP-30CR EC</b>	<b>UGP-GRM00006</b>
56	Back Temperature Control Mount <b>UGP-30CR EC</b>	<b>UGP-CYJ01122</b>
57	Fan <b>UGP-30CR EC</b>	<b>UGP-ZJD00024</b>

## UGP -30CR EC ELECTRIC RANGE PARTS LIST

ITEM#	DESCRIPTION	PART#
60	PCB UGP-30CR EC	UGP-DLB00024
61	Terminal Post UGP-30CR EC	UGP-JXZ00001
62	PCB Cover UGP-30CR EC	UGP-CYJ01128
63	Back Panel UGP-30CR EC	UGP-CYJ01131
64	Power Cord UGP-30CR EC	UGP-XJX00056
65	Oven Door Outer Panel Turquoise UGP-30CR EC	UGP-PSJ00003-T
	Oven Door Outer Panel Black UGP-30CR EC	UGP-PSJ00003-B
	Oven Door Outer Panel White UGP-30CR EC	UGP-PSJ00003-W
	Oven Door Outer Panel Light Green UGP-30CR EC	UGP-PSJ00003-LG
67	Inner Glass Mount Brackets UGP-30CR EC	UGP-CY14261
68	Inner Glass Mount Plate UGP-30CR EC	UGP-CY14257
69	Oven Door Heat-Insulated Fiber UGP-30G/EC	UGP-DPJ99006
70	Oven Door Hinge UGP-24CR/30CR ON1/OF1/EC	UGP-DWWJ01016-2
71	LOWE Inner Oven Door Glass for UGP-30G OF2/EC	UGP-BOL00002
72	Oven Door Inner Panel for UGP-30CR/EC	UGP-PSJ00056
73	Oven Door Upper Decorative Strip UGP-30CR EC	UGP-WCY00086
74	Knob Black ASSY UGP-30CR EC T;B;LG	QJG00171
	Knob White ASSY UGP-30CR EC W	QJG00172
75	Knob Bezel for UGP-CR/EC all colors	UGP-WSJ040003
76	Indicator Light ASSY UGP-30CR EC	UGP-XQJ10062

## UGP -30CR EC ELECTRIC RANGE PARTS LIST

ITEM#	DESCRIPTION	PART#
77	Control Panel Turquoise <b>UGP-30CR EC</b>	<b>UGP-SYJ00143</b>
	Control Panel Black <b>UGP-30CR EC</b>	<b>UGP-SYJ00152</b>
	Control Panel White <b>UGP-30CR EC</b>	<b>UGP-SYJ00155</b>
	Control Panel Light Green <b>UGP-30CR EC</b>	<b>UGP-SYJ00156</b>
78	Toggle Switch <b>UGP-24/30CR/EC</b>	<b>UGP-KG9923</b>
79	Dual Element Rheostat <b>UGP-30CR EC</b>	<b>UGP-KTW00006</b>
80	Single Element Rheostat <b>UGP-30CR EC</b>	<b>UGP-KTW00005</b>
81	Three Position Toggle Switch <b>UGP-30CR EC</b>	<b>UGP-KGB00001</b>
82	Oven Thermostat <b>UGP-30CR EC</b>	<b>UGP-TTW00002</b>
83	Push Button <b>UGP-30CR EC</b>	<b>UGP-KGT00010</b>
84	Cooktop Mount Bracket <b>UGP-30CR EC</b>	<b>UGP-CY14226</b>
85	Cooktop Support (right) <b>UGP-30CR EC</b>	<b>UGP-PSJ00319</b>
86	Right Side Panel Turquoise <b>UGP-30CR EC</b>	<b>UGP-PSJ00321-T</b>
	Right Side Panel Black <b>UGP-30CR EC</b>	<b>UGP-PSJ00321-B</b>
	Right Side Panel White <b>UGP-30CR EC</b>	<b>UGP-PSJ00321-W</b>
	Right Side Panel Light Green <b>UGP-30CR EC</b>	<b>UGP-PSJ00321-LG</b>
87	Oven Rack Support for <b>UGP-20G/24G/20 &amp; 24/30G/30CR OF1/</b> <b>ON1/EC</b>	<b>UGP-DWWJ01011-1</b>
88	Oven Rack Support Mount <b>UGP-30CR EC</b>	<b>UGP-CY14270</b>
91	Cooktop Support (left) <b>UGP-30CR EC</b>	<b>UGP-PSJ00318</b>
92	Left Side Panel Turquoise <b>UGP-30CR EC</b>	<b>UGP-PSJ00320-T</b>
	Left Side Panel Black <b>UGP-30CR EC</b>	<b>UGP-PSJ00320-B</b>
	Left Side Panel White <b>UGP-30CR EC</b>	<b>UGP-PSJ00320-W</b>
	Left Side Panel Light Green <b>UGP-30CR EC</b>	<b>UGP-PSJ00320-LG</b>

# UGP -30CR EC ELECTRIC RANGE PARTS LIST

## ASSEMBLIES

<b>DESCRIPTION</b>	<b>PART#</b>
Cooktop ASSY <b>UGP-30CR EC</b>	<b>UGP-QJG00227</b>
Oven Door ASSY Turquoise <b>UGP-30CR EC</b>	<b>UGP-QJG00194</b>
Oven Door ASSY Black <b>UGP-30CR EC</b>	<b>UGP-QJG00233</b>
Oven Door ASSY White <b>UGP-30CR EC</b>	<b>UGP-QJG00234</b>
Oven Door ASSY Light Green <b>UGP-30CR EC</b>	<b>UGP-QJG00235</b>
Drawer Door Turquoise ASSY <b>UGP-30CR EC</b>	<b>UGP-QJG00195</b>
Drawer Door Black ASSY <b>UGP-30CR EC</b>	<b>UGP-QJG00236</b>
Drawer Door White ASSY <b>UGP-30CR EC</b>	<b>UGP-QJG00237</b>
Drawer Door Light Green ASSY <b>UGP-30CR EC</b>	<b>UGP-QJG00238</b>
Backsplash ASSY Turquoise <b>UGP-30CR EC</b>	<b>UGP-QJG00242</b>
Backsplash ASSY Black <b>UGP-30CR EC</b>	<b>UGP-QJG00243</b>
Backsplash ASSY White <b>UGP-30CR EC</b>	<b>UGP-QJG00244</b>
Backsplash ASSY Light Green <b>UGP-30CR EC</b>	<b>UGP-QJG00245</b>
Outer Carton <b>UGP-30CR EC</b>	<b>UGP-BZX00003-30CR EC</b>
Bottom Pallet <b>UGP-30CR EC</b>	<b>UGP-BHJ00081</b>
Packaging Materials Kit <b>UGP-30CR EC</b>	<b>UGP-QJG00247</b>
Manual Kit	<b>UGP-QJG00246</b>