


PARTS DIAGRAM AND LIST

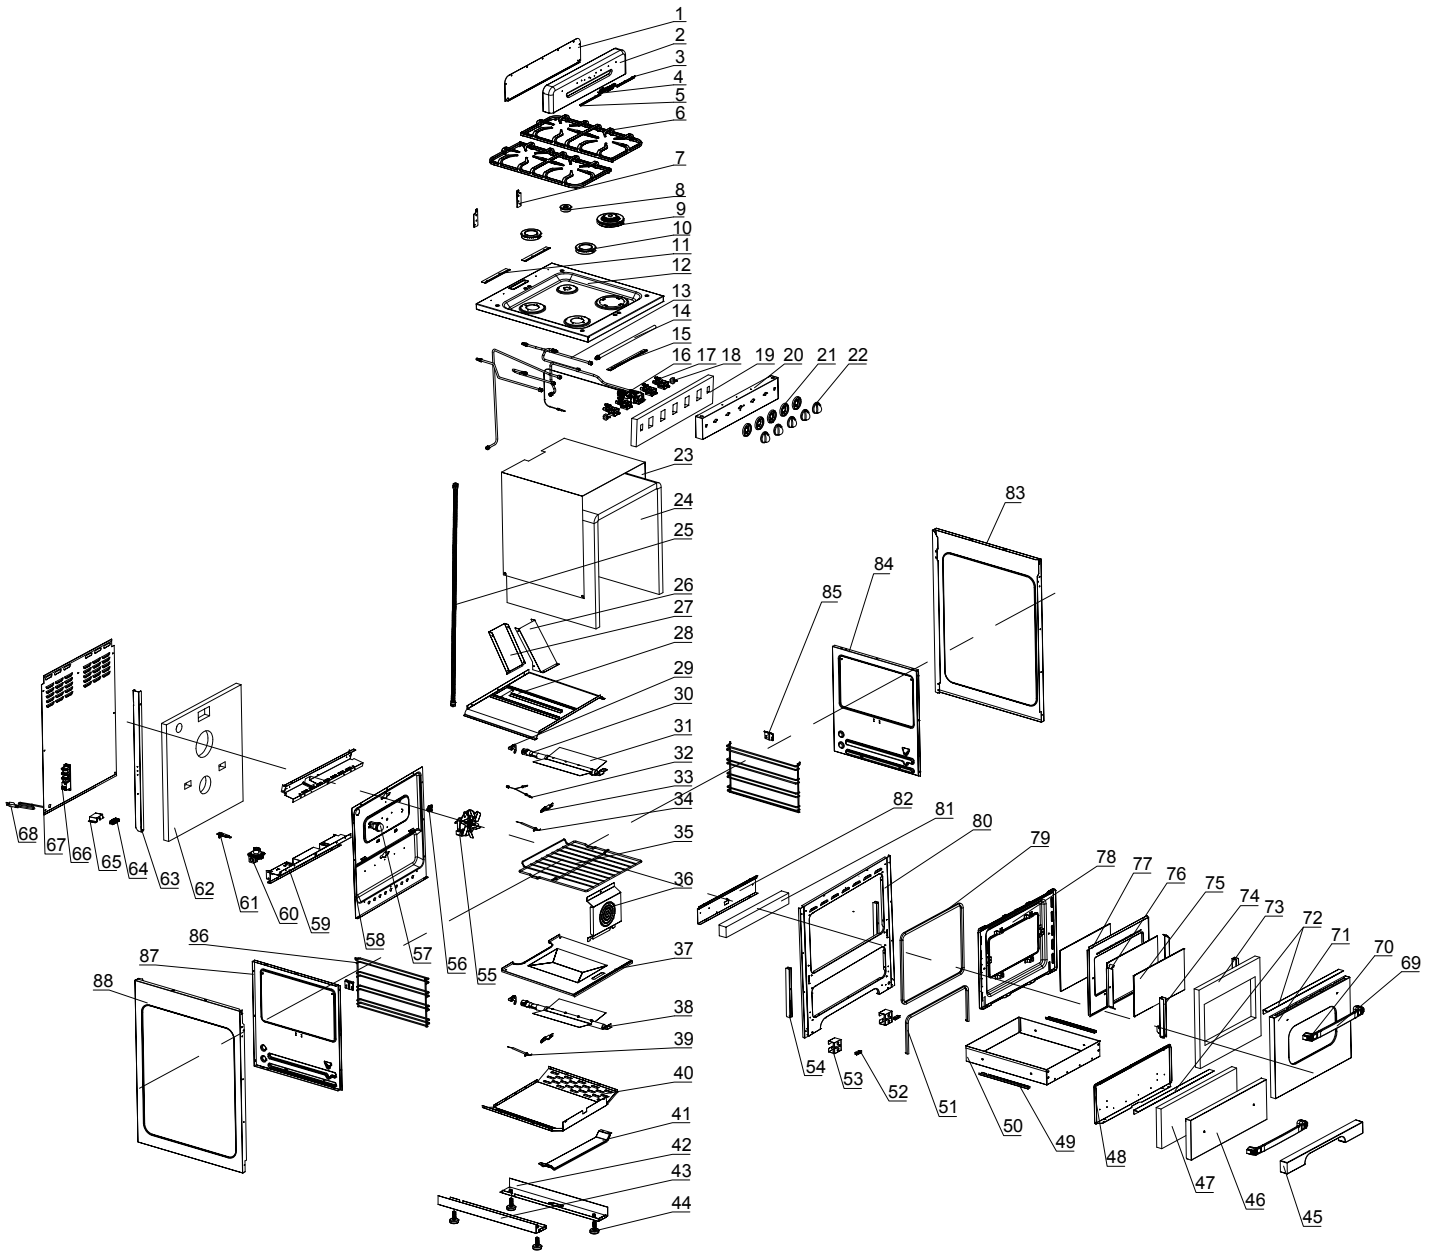

Please visit our website www.uniqueappliances.com to view a PDF version of the schematics which will allow you to zoom in & out

PARTS DIAGRAM AND LIST (continued)

Item	Description	Model #	
1	Back splash board	CYJ00141	
2	Backsplash board	UGP-30CR W	PSJ00049-W
		UGP-30CR B	PSJ00049-B
		UGP-30CR LG	PSJ00049-LG
		UGP-30CR T	PSJ00049-T
		UGP-30CR LB	PSJ00049-LB
		UGP-30CR R	PSJ00049-R
		UGP-30CR RB	PSJ00049-RB
3	Left logo	JSJ00006	
4	Middle logo	CY99109	
5	Right logo	JSJ00007	
6	Cast Iron Grate	DWWJ01019	
7	Fixed board	CY14516	
8	#50 burner assembly	QJG05020	
9	#130 burner assembly	QJG05022	
10	#100 burner assembly	QGJ05021	
11	Clip board for backsplash board	CY14515-1	
12	Cooking panel	WSJ13248-4	
13	Right rear Alum. gas pipe assembly	DWWJ01003	
	Right front Alum. gas pipe assembly	DWWJ01004	
	Left rear Alum. gas pipe assembly	DWWJ01006	
	Left front Alum. gas pipe assembly	DWWJ01005	
	Top burner gas pipe assembly	DWWJ01334	
	Bottom burner gas pipe assembly	DWWJ01007	
14	Main gas pipe assembly	DWWJ01001	
15	Cooking panel block	CY14226	
16	Thermostat valve	UGP-WJJ00030	
17	Gas valve (0.45)	DPJ99170	
	Gas valve (0.55)	DPJ99171	
	Gas valve (0.68)	DPJ99172	
18	Toggle switch	KG9923	
19	Control panel heat-resistance cotton	DPJ00005	
20	Control panel	UGP-30CR W	SYJ00047-W
		UGP-30CR B	SYJ00037-B
		UGP-30CR LG	SYJ00038-LG
		UGP-30CR T	SYJ00039-T
		UGP-30CR LB	SYJ00040-LB
		UGP-30CR R	SYJ00041-R
		UGP-30CR RB	SYJ00042-RB
19	Control panel heat-resistance cotton	DPJ00005	
21	Bezel	WSJ040003	
22	Knob assembly	QJG05018	
23	Liner heat-resistance board	CYJ00176	
24	Liner heat-resistance cotton	DPJ99004	
25	Below	DWWJ01002	
26	Smoke diffuser A	CY14536	
27	Smoke diffuser B	CY14537	
28	Liner top board	PSJ00063	
29	Nozzle base	DPJ24070	

PARTS DIAGRAM AND LIST (continued)

Item	Description	Model #	
30	Oven Upper Burner	DWWJ01335	
31	Bottom burner flame spreader	CY04248	
32	Split Thermocouple and Terminal	DXQJ9913	
33	Igniter bracket	CY14543	
34	Burner Ignition Needle	DXQJ9971	
35	Oven Rack	PSJ00045	
36	Fan Cover	PSJ00046	
37	Oven floor	PSJ00047	
38	Oven Burner	DWWJ01296	
39	Igniter needle	DXQJ9971-2	
40	Middle heat-resistance board	PSJ00048	
41	Bottom fixed board	CYJ00214	
42	Feet assembly board(left)	CY14237	
43	Feet assembly board(right)	CY14238	
44	Feet	DWWJ01010	
45	Kick plate	UGP-30CR W	PSJ00050-W
		UGP-30CR B	PSJ00050-B
		UGP-30CR LG	PSJ00050-LG
		UGP-30CR T	PSJ00050-T
		UGP-30CR LB	PSJ00050-LB
		UGP-30CR R	PSJ00050-R
46	Drawer panel	UGP-30CR W	PSJ00051-W
		UGP-30CR B	PSJ00051-B
		UGP-30CR LG	PSJ00051-LG
		UGP-30CR T	PSJ00051-T
		UGP-30CR LB	PSJ00051-LB
		UGP-30CR R	PSJ00051-R
47	Drawer heat-resistance cotton	DPJ99007	
48	Drawer inner board	PSJ00053	
49	Drawer Slider	DWJ10100	
50	Drawer	PSJ00054	
51	Drawer seal	DWWJ01018	
52	Magnet	DWJ9945-4	
53	Kick plate support	CY14266	
54	Hinge base	DWWJ01345-1	
55	Convection Fan	DQT01367	
56	Fixed board	CY14249	
57	Light	DPJ99188	
58	Liner back board	PSJ00058	
59	Liner support	CY14241	
60	Gas Regulator	DPJ24060	
61	Gas Regulator Fixed part	CY14271	
62	Liner back heat-resistance cotton	DPJ99005	
63	Back panel support bar	CY14250	
64	Terminal Black	JXZ0200	
65	Protective cover	CY14548	
66	Pulse igniter	DXQJ9977-2	
67	Back panel	CYJ00215	

PARTS DIAGRAM AND LIST (continued)

Item	Description	Model #	
68	Power Cord	DX0231	
69	Handle	UGP-30CR W	PSJ00005-W
		UGP-30CR B	PSJ00005-B
		UGP-30CR LG	PSJ00005-LG
		UGP-30CR T	PSJ00005-T
		UGP-30CR LB	PSJ00005-LB
		UGP-30CR R	PSJ00005-R
		UGP-30CR RB	PSJ00005-RB
70	Left/side handle base	CY99112	
71	Door panel	UGP-30CR W	PSJ00003-W
		UGP-30CR B	PSJ00003-B
		UGP-30CR LG	PSJ00003-LG
		UGP-30CR T	PSJ00003-T
		UGP-30CR LB	PSJ00003-LB
		UGP-30CR R	PSJ00003-R
		UGP-30CR RB	PSJ00003-RB
72	Door top cover	CYJ00056	
73	Door heat-resistance cotton	DPJ99006	
74	Door hinge	DWWJ01016-2	
75	Oven Door Glass	DQT01003	
76	Door middle glass fixed part	CY14261	
77	Door inner glass fixed part	CY14257	
78	Door inner panel	PSJ00056	
79	Liner seal	DWWJ01014	
80	Liner front panel	PSJ00055	
81	Liner front heat-resistance cotton	DPJ99003	
82	Burner fixed bar	CY14231	
83	Outside Left side panel	UGP-30CR W	WSJ13245-1-W
		UGP-30CR B	WSJ13245-1-B
		UGP-30CR LG	WSJ13245-1-LG
		UGP-30CR T	WSJ13245-1-T
		UGP-30CR LB	WSJ13245-1-LB
		UGP-30CR R	WSJ13245-1-R
		UGP-30CR RB	WSJ13245-1-RB
84	Liner left side panel	PSJ00060	
85	Oven Rack Fixed Part	CY14270	
86	Oven Rack Support	DWWJ01011-1	
87	Liner right side panel	PSJ00061	
88	Outside right side panel	UGP-30CR W	WSJ13246-1-W
		UGP-30CR B	WSJ13246-1-B
		UGP-30CR LG	WSJ13246-1-LG
		UGP-30CR T	WSJ13246-1-T
		UGP-30CR LB	WSJ13246-1-LB
		UGP-30CR R	WSJ13246-1-R
		UGP-30CR RB	WSJ13246-1-RB
	Logo assembly	QJG00018	
	Oven door assembly	QJG00026	
	Drawer door assembly	QJG00036	