



Find purposefully-designed storage zones for items you use most in this 30-inch french door bottom freezer refrigerator. Humidity-controlled crispers let you store fruits and veggies in their ideal environment while adjustable gallon door bins add loading flexibility when and where you need it.

WRF560SEHZ

30-inch Wide French Door Refrigerator - 20 cu. ft.

Available Finishes/Colours

WRF560SEHZ FingerPrint Resistant Stair	WRF560SEHZ FingerPrint Resistant Stainless Steel						
Dimensions							
Depth	34 3/8						
Height	68 3/8						
Width	30						
AHAM Volumes And Shelf Area							
Freezer Volume (Cu Ft)	6.34						
Refrigerator Volume (Cu Ft)	13.34						
Total Volume (Cu Ft)	19.7						
Details							
Advance Foam Insulation	99.9% lower Global Warming Potential and						

Compatibility	
Connectivity	No
Works With	No
Misc.	
Accessory Relationships	Yes
Home Delivery	Yes
Will Call	Yes
Exterior	
Base Grille Color	Grey
Cabinet Color	Grey
Cabinet Finish	Textured
Number of Doors	3

Fingerprint Resistant Stainless Steel

Fingerprint Resistant

Fingerprint Resistant

Tuck Shelf

Top Features

FreshFlow[™] Produce Preserver

Manuals & Literature:

Dimension Guide 🚾 Energy Guide

warranty Information

,	Details	
	Advance Foam Insulation	99.9% lower Global Warm Potential and Better Energy Performance
	Cooling Type	Single Evaporator
_	Counter Depth	No

rlpool

Because Whirlpool Corporation policy includes a continuous commitment to improve our products, we reserve the right to change materials and specifications without notice. Dimensions are for planning purposes only. For complete details, see Installation Instructions packed with product. Specifications subject to change without notice.

Door Color

Door Finish

Whirlpool[®] French Door Bottom Mount Refrigerator

PRODUCT MODEL NUMBERS

WRF560SEH

Electrical: A 115 V, 60 Hz., AC only,

15 or 20 A fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your freezer be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

NOTE: Before performing any type of installation, cleaning, or removing a light bulb, turn the control (Thermostat, Refrigerator or Freezer Control depending on the model) to OFF and then disconnect the refrigerator from the electrical source. When you are nished, reconnect the refrigerator to the electrical source and reset the control (Thermostat, Refrigerator or Freezer Control depending on the model) to the desired setting. See "Using the Controls."

Water: A cold water supply with water pressure between 35 and 120 psi (241 and 827 kPa) is required to operate the water dispenser and ice maker. If you have questions about your water pressure, call a licensed, quali ed plumber.


NOTE: If the water pressure is less than what is required, the ow of water from the water dispenser could decrease or ice cubes could be hollow or irregular shaped.


Reverse Osmosis Water Supply


IMPORTANT: The pressure of the water supply coming out of a reverse osmosis system going to the water inlet valve of the refrigerator needs to be between 35 and 120 psi (241 and 827 kPa).

If a reverse osmosis water Itration system is connected to your home cold water supply, the water pressure to the reverse osmosis system needs to be a minimum of 40 to 60 psi (276 to 414 kPa).

PRODUCT DIMENSIONS

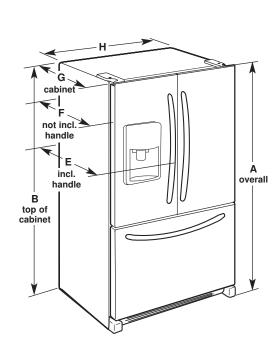


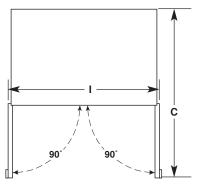

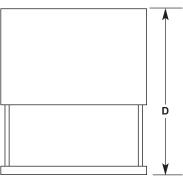

Model Number	Model Size	Height - Overall "A"	Height - Top of Cabinet "B"	Depth - Doors Open 90° "C"	Depth - Drawer Open "D"	Depth - With Handles "E"	Depth - Without Handles "F"	Depth - Cabinet Only "G"	Width - Cabinet "H"
WRF560SEH	20 cu. ft.	68¾"	67¾"	515⁄8"	52 ^{1/} 8	34 ^{3/} 8"	32 ^{3/} 8"	27 ^{13/} 16"	29 ^{1/} 2"
	(566.3 L)	(173.7 cm)	(171.1 cm)	(131.3 cm)	(132.4 cm)	(87.3 cm)	(82.2 cm)	(70.7 cm)	(74.9 cm)

LOCATION REQUIREMENTS

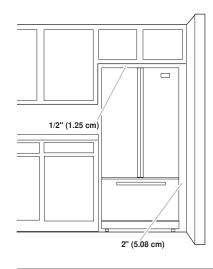

To ensure proper ventilation for your refrigerator, allow for a 1/2" (1.25 cm) of space on each side and at the top. Allow for a 1" (2.54 cm) space behind the refrigerator. If your refrigerator has an ice maker, allow extra space at the back for the water line connections. When installing your refrigerator next to a xed wall, leave a 2" (5.08 cm) minimum space between the refrigerator and wall to allow the door to swing open.

NOTE: This refrigerator is intended for use in a location where the temperature ranges from a minimum of 55°F (13°C) to a maximum of 110°F (43°C). The preferred room temperature range for optimum performance, which reduces electricity usage and provides superior cooling, is between 60°F (15°C) and 90°F (32°C). It is recommended that you do not install the refrigerator near a heat source, such as an oven or radiator.

Because Whirlpool Corporation policy includes a continuous commitment to improve our products, we reserve the right to change materials and specifications without notice.