



This ENERGY STAR® certified refrigerator with glass shelves lets you store more items on each shelf. It also has a crisper drawer to store fruits and veggies at the ideal temperature while LED lighting keeps food looking as great as it tastes.

То		<b>-</b>	-		
10	n	Ee	жп	шг	es
	Μ.			••••	

**Humidity-Controlled Crispers** 

Adaptive Defrost adjusts to your usage to save more energy

Energy Guide

Owner Manual

FreshFlow<sup>™</sup> Produce Preserver

#### Manuals & Literature:

Dimension Guide

Installation Guide

Warranty Information

# 33-inch Wide French Door Refrigerator - 22 cu. ft.

Details

## WRF532SNHV

**Available Finishes/Colours** 

Dimensions				
Depth	34 1/2			
Height	70 1/8			
Width	32 5/8			
AHAM Volumes And Shelf Area				
Freezer Volume (Cu Ft)	6.45			

Refrigerator Volume (Cu Ft)

Configuration and Overview						
Advance Foam Insulation	99.9% lower Global Warming Potential and Better Energy Performance					
Counter Depth	No					
Number of Doors	3					

#### Details

Advance Foam Insulation

99.9% lower Global Warming Potential and Better Energy Performance

15.66

Cooling Type	Single Evaporator		
Counter Depth	No		
Door Style	Contour		
Controls			
Control Type	Electronic		
Air Filter Indicator/Reset	No		
Automatic Defrost	Yes		
Verrouillage des commandes	No		
Door Ajar/Open Alarm	No		
LCD Touch Screen	No		
Control Lockout	No		
Control Location	Interior Up Front		



# Whirlpool French Door Bottom Mount Refrigerator

# PRODUCT MODEL NUMBERS

### WRF532SNH

**Electrical:** A 115 V, 60 Hz, AC only 15 or 20 A fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

**NOTE:** Before performing any type of installation, cleaning, or removing a light bulb, turn the control (Thermostat, Refrigerator or Freezer Control depending on the model) to OFF and then disconnect the refrigerator from the electrical source. When you are finished, reconnect the refrigerator to the electrical source and reset the control (Thermostat, Refrigerator or Freezer Control depending on the model) to the desired setting. See "Using the Controls."


**Water:** A cold water supply with water pressure between 35 and 120 psi (241 and 827 kPa) is required to operate the water dispenser and ice maker. If you have questions about your water pressure, call a licensed, qualified plumber.


**IMPORTANT:** The pressure of the water coming out of a reverse osmosis system going to the water inlet valve of the refrigerator needs to be between 35 and 120 psi (241 and 827 kPa).

### **Reverse Osmosis Water Supply:**

If a reverse osmosis water filtration system is connected to your cold water supply, the water pressure to the reverse osmosis system needs to be a minimum of 40 to 60 psi (276 to 414 kPa).


# **PRODUCT DIMENSIONS**

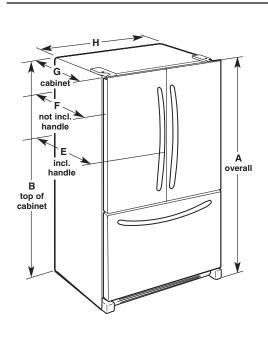

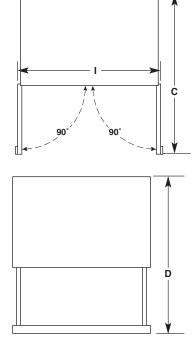

Model Number	Model Size	Height - Overall "A"	Height - Top of Cabinet "B"	Depth - Doors Open 90° "C"	Depth - Drawer Open "D"	Depth - With Handles "E"	Depth - Without Handles "F"	Depth - Cabinet Only "G"	Width - Cabinet "H"
WRF532SNH	22.1 cu. ft.	701/8" (178.1 cm)	68 <sup>7</sup> ⁄8" (174.9 cm)	47 <sup>1</sup> ⁄8" (119.7 cm)	52 <sup>1</sup> ⁄8" (132.4 cm)	34 <sup>1</sup> /2" (87.4 cm)	32" (81.3 cm)	28 <sup>1</sup> /8" (71.3 cm)	325%" (82.9 cm)

# LOCATION REQUIREMENTS

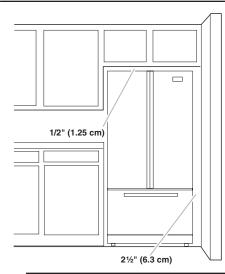

**IMPORTANT:** This refrigerator is designed only for indoor, household use only.

To ensure proper ventilation for your refrigerator, allow for a 1/2" (1.25 cm) space on each side and at the top. Allow for 1" (2.54 cm) of space behind the refrigerator. If your refrigerator has an ice maker, make sure you leave some extra space at the back for the water line connections.

If you are installing your refrigerator next to a fixed wall, leave  $2\frac{1}{2}$ " (6.3 cm) minimum on the hinge side (some models require more) to allow for the door to swing open.

**NOTE:** This refrigerator is intended for use in a location where the temperature ranges from a minimum of 55°F (13°C) to a maximum of 110°F (43°C). The preferred room temperature range for optimum performance, which reduces electricity usage and provides superior cooling, is between 60°F (15°C) and 90°F (32°C). It is recommended that you do not install the refrigerator near a heat source, such as an oven or radiator.