


Installation instructions

Levelling legs

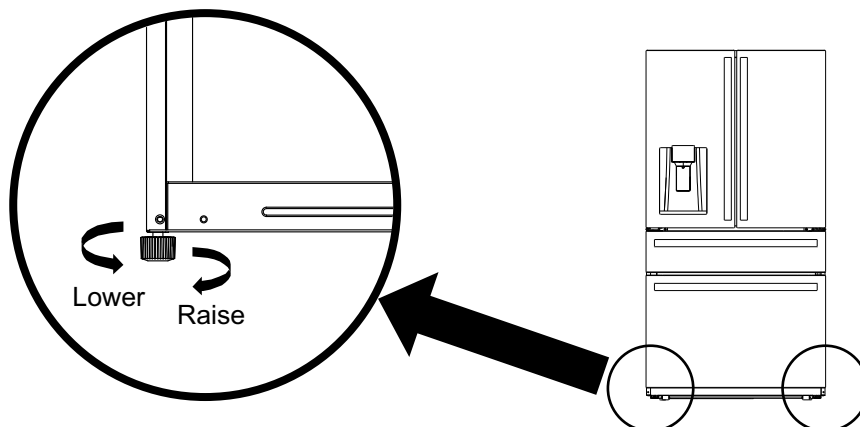

Adjusting procedure:


1. Turn the leveling legs clockwise to raise the refrigerator.
2. Turn the leveling legs counterclockwise to lower the refrigerator.
3. Adjust right and left leveling legs to achieve an horizontal position.

The illustration above is for reference only. The actual configuration will depend on the physical product or statement by the dealer.

Level the doors

List of tools to be provided by the user:

Pliers

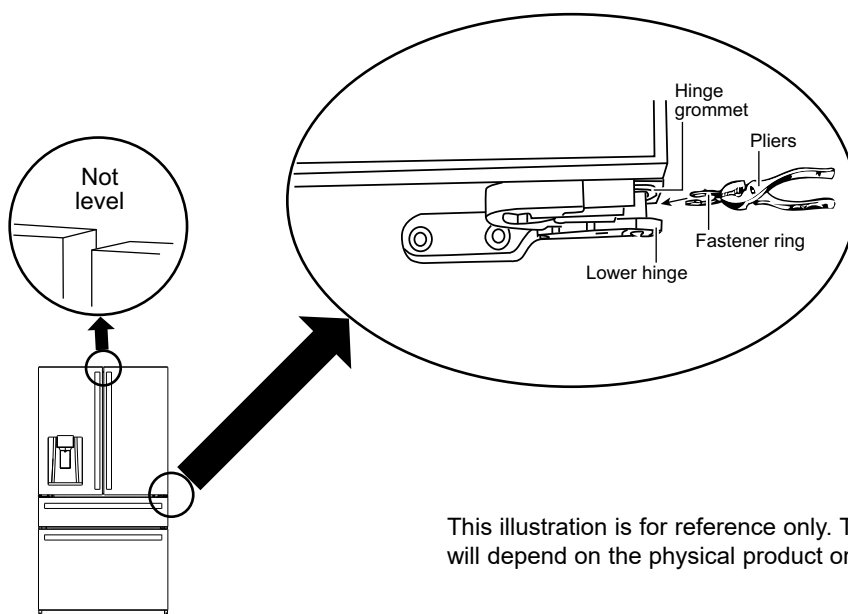

This illustration is for reference only. The actual configuration will depend on the physical product or statement by the dealer.

1. Raise the lower door up to the level of the higher door.
2. Insert the supplied fastener ring using pliers in the gap between the hinge grommet and the lower hinge. The number of fastener rings you will need to insert depends on the gap.

Installation instructions

Connecting the water line to a drinkable water source


If your water line is NOT drinkable, please add an external water filter.

If you must repair or disassemble the water line, cut off the plastic tubing to make sure you get a snug, leak-free connection.

Installing door handles

Precautions should be taken to prevent fall of the handle causing personal injuries.

List of tools to be provided by the user:



Phillips screwdriver



Inner hexagonal wrench

Installation procedure

1. Take out bolt (1) from the accessories bag, then use a Phillips screwdriver to fix the bolt 1 into the bolt hole (2) of refrigerator doors. See Figure 8.
2. Place the handle on the door using bolt (1) and make sure the handle contacts the door surface closely. See Figure 9.
3. Fix the handle by rotating the handle screw (3) to the end, then shake the handle to verify that it is firmly fixed.
4. Place the cap (4) on the handle screw hole to complete this installation.

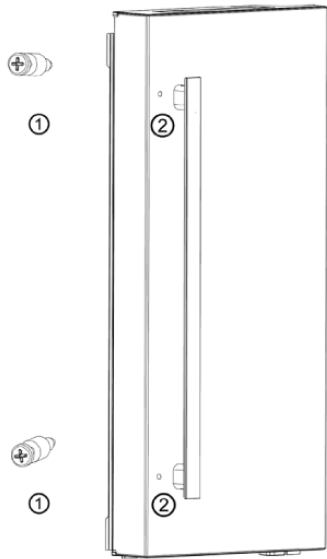


Figure 8

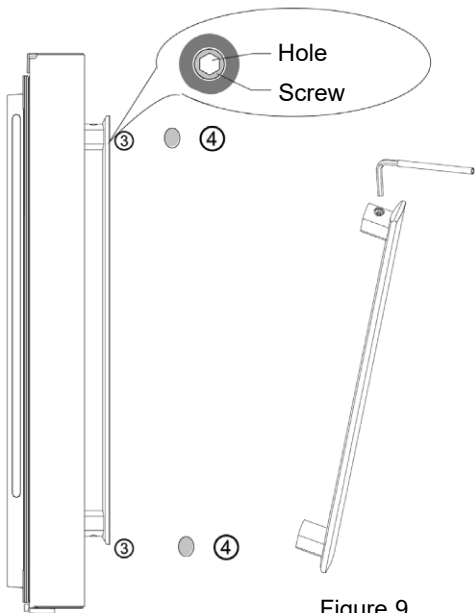


Figure 9

1. Bolt
2. Bolt hole

3. Handle screw
4. Screw hole cap

Before using the refrigerator

- Before operation, remove all packing materials, including bottom foam pads and tape inside the refrigerator; tear off protective film from doors and refrigerator body.
- Before turning the refrigerator on, keep it still two hours before connecting it to power supply.
- Before placing fresh or frozen foods, the refrigerator should run for 2-3 hours, or for more than 4 hours during summer when the ambient temperature is high.


Installation instructions

Adjustment of cantilever rack

The cantilever rack can be adjusted to the proper height as required by food.

Adjust the cantilever rack by following the arrows as shown in the illustration.


Raise the rack upward first and then take it out by tilting it upwards. During installation, place the upper end of the fixed leg into one of the upper slots on the support iron first, and then place the lower end of the fixed leg into the third slot on the lower part of the support iron.

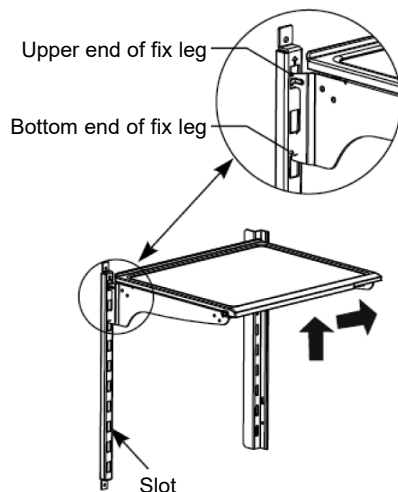

Height adjustment and cleaning of door-mounted bottle rack


Raise the bottle rack in the direction shown by the arrow, hold it with both hands and take it out in the direction shown.

After cleaning, you can install the rack in the inverse order and you can also adjust the height of the rack.

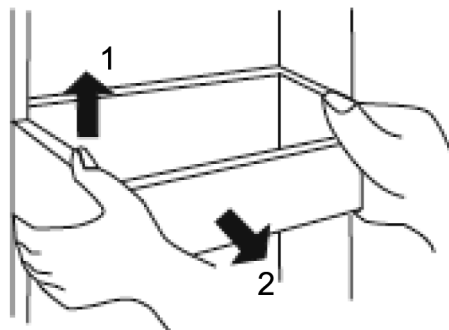


Installing the filter


1. When the refrigerator is used for the first time, press down the marks on both sides of the filter cover by hand and open the filter cover downward.

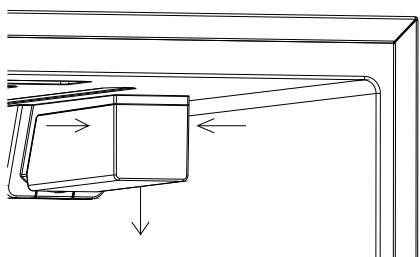

2. Rotate the dustproof plug counterclockwise and remove it.

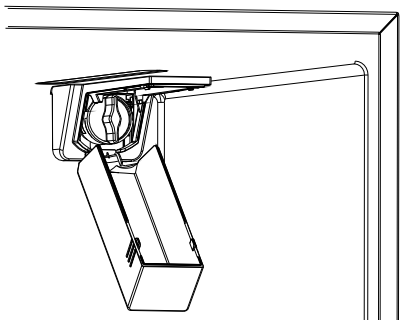

3. Remove the exterior package of the filter. Turn the filter clockwise and press the filter element, and install the filter element at the joint position of the refrigerator filter until the filter element does not rotate.

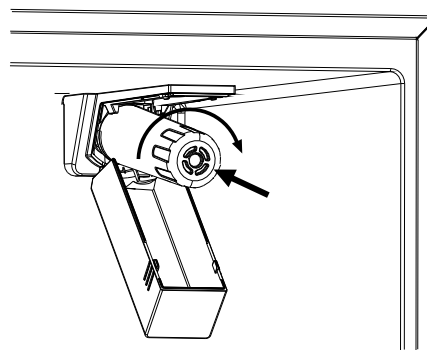

4. When the filter indicator light in the display panel is on, it prompts to replace the filter element. The method of removing the filter element is the same as that of removing the dustproof plug.

5. The filter is recommended to be replaced every half a year.

Installation instructions

Installing the water line

⚠ WARNING

RISK OF ELECTRIC SHOCK AND DAMAGE TO THE APPLIANCE!

DISCONNECT THE APPLIANCE FROM THE POWER SOURCE BEFORE PERFORMING ANY WORK ON THE WATER CONNECTION.

ONLY A QUALIFIED INSTALLATION TECHNICIAN SHOULD CONNECT THE APPLIANCE TO THE WATER SUPPLY IN ACCORDANCE WITH PLUMBING AND RELEVANT WATER UTILITY COMPANY REGULATIONS.

Connect the appliance to a drinking water line only.

- Minimum pressure: 0.17 MPa (1.72 bar, 24.95 PSI)
- Maximum pressure: 0.82 MPa (8.25 bar, 119.66 PSI)
- Pressure over 0.82 MPa (8.25 bar, 119.66 PSI): install a pressure limiter between drinking water connection and hose set.

The water should be connected by a competent plumber according to the local regulations of the water supply company.


A cold water connection is necessary to operate the ice maker. The water pressure must be between 0.17 MPa (1.72 bar, 24.95 PSI) and 0.82 MPa (8.25 bar, 119.66 PSI). The installation must comply with local plumbing regulations.

A separate shut-off valve should be installed in the cold water inlet.

The shut-off valve should not be located behind the appliance. It is recommended to mount it directly next to the appliance or at another place that is easily accessible.

When installing the water connection, pay attention to the permissible installation area for the water line.

For connection to the drinking water line, use water pipes that are suitable for drinking water. Observe national regulations and the connection conditions of the local water supply companies.

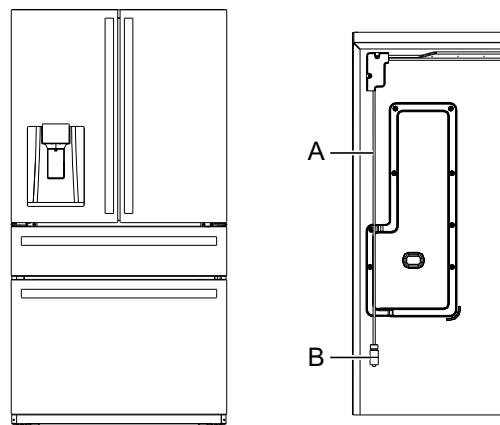


Connecting the water line

Most homes are equipped with water line installation parts. If yours is not or needs replacing, water line installation kits are available (part number 00646836) or from a hardware store/dealer.

1. Shut off the main water supply line.
2. Install a shut-off valve and water line 1/4" x 1/4" compression thread (UNS 7/16-24), accessible with product in place. Refer to local code and instructions with water line installation kit (not included).
3. Connect the newly installed water supply line (C) to the refrigerator water inlet connector (B), tighten using a proper tool.

4. Gently tug on the supply waterline to ensure a proper fit and risk of damage when pulling or pushing the unit for cleaning.
5. Turn main water back on and check for leaks.

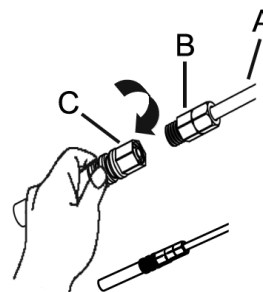


Replacing the light bulb

Any replacement or maintenance of the LED lamps should be made by the manufacturer, its service agent or similar qualified person.

Installation instructions


Remove refrigerator doors

1. Use a screwdriver to remove the 2 screws, then remove the upper hinge cover of the left door. See Figure 1.
2. Use a screwdriver to loosen the 3 screws and 1 grounding screw fixing the upper hinge, then remove the plug terminal and the left door. See Figure 2.
3. For the right door, there is no grounding screw. Follow the rest of the steps for the left door.
4. For a drawer, first remove the security block of the stopper by hand. See Figure 3.
5. Press the lock buttons of both the left and right glide rails and slowly pull the drawer out. See Figure 3.

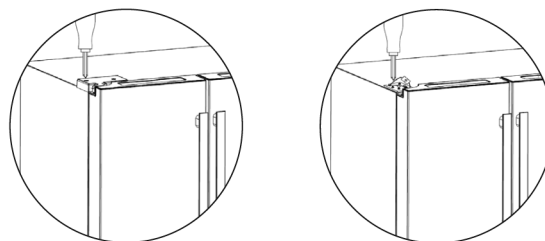


Remove the variable temperature drawer (Flex Drawer)

1. Pull the variable temperature drawer to the maximum stroke, remove harness cover with screwdriver or electronic runner for screw fixation, then remove the harness cover.
2. Remove harness using a screwdriver or electronic runner for fixation and clamping with screw, then unplug the connecting terminal.
3. Remove the screw on the left and right slideway support using a screwdriver or electronic runner. It is best that one person hold the drawer against falling in the process.
4. Lift the drawer to a certain angle with both hands and pull out.

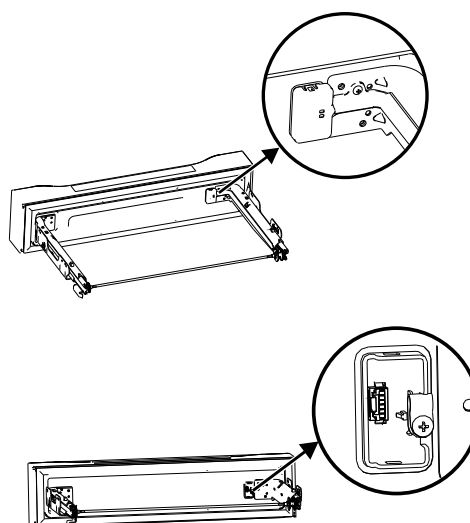


Remove freezer drawer

1. Remove the screw on the left and right slideway support using a screwdriver or electronic runner. It is best that one person hold the drawer against falling in the process.
2. Lift the drawer to a certain angle with both hands and pull out.

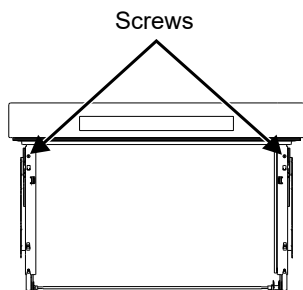

Disassembly of freezer drawer

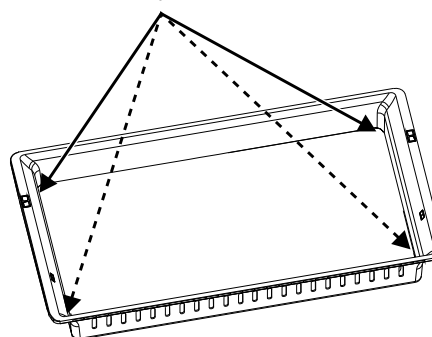

Troubleshooting tips... Before you call for service

You can try to solve the following simple problems by yourself. If they cannot be solved, contact the service area.

Problem	Possible cause/What to do
Appliance won't run.	<ul style="list-style-type: none"> ■ Make sure the appliance is connected to the power source and the plug is firmly connected to the wall outlet. ■ Supply voltage is too low. ■ Power failure or circuit breaker is tripped.
Odor.	<ul style="list-style-type: none"> ■ Strong odor foods should be tightly wrapped. ■ Rotten food inside the appliance. ■ Clean the interior of the refrigerator.
Compressor runs for large periods of time.	<ul style="list-style-type: none"> ■ Normal during summer when ambient temperature is high. ■ Refrigerator is full. Let foods cool down to room temperature before placing them into the refrigerator. ■ Doors are opened too frequently.
Light does not turn on	<ul style="list-style-type: none"> ■ Make sure the refrigerator is connected to power supply. ■ Light bulb is burned out. Have the light bulb replaced by a qualified service technician.
Doors cannot be properly closed.	<ul style="list-style-type: none"> ■ A food package is holding the door open. ■ The appliance is not properly level.
Noise.	<ul style="list-style-type: none"> ■ Make sure floor is level and the appliance is properly seated. ■ Make sure accessories are placed at correct places.
Door gasket is not tight.	<ul style="list-style-type: none"> ■ Remove foreign matter from door gasket. ■ Carefully heat the door seal to reshape it to the door. Use an electrical hair dryer and a clean towel.
Water pan overflows.	<ul style="list-style-type: none"> ■ Too much food in the fresh food compartment resulting in heavy defrost. ■ Doors not closed properly, resulting in frost due to hot air entering the compartments.
Hot cabinet.	<ul style="list-style-type: none"> ■ Heat dissipation of the built-in condenser via the cabinet. This is normal. ■ When cabinet becomes hot due to high room temperature, storage of too much food or shutdown of the compressor, provide proper ventilation to facilitate heat dissipation.
Surface condensation.	<ul style="list-style-type: none"> ■ Condensation on the exterior surface and door gaskets of the refrigerator is normal when the ambient humidity is too high. Just wipe the condensed water using a clean cloth.
Abnormal noise.	<ul style="list-style-type: none"> ■ Buzz: The compressor may buzz during operation, this noise is particularly high upon start or stop. This is normal. ■ Cracking: Refrigerant flowing inside of the appliance may produce a cracking noise which is normal.
Ice maker does not produce ice.	<ul style="list-style-type: none"> ■ After installing the water line and starting the refrigerator, it takes 12 hours to produce ice cubes. ■ Turn on the ice maker. ■ Check whether the water pressure is 30-100 psi and the water line is connected normally. ■ Make sure the water supply valve is open and check the water pipe is not bent. ■ Make sure whether the ice storage box is installed.

Troubleshooting tips... Before you call for service

Problem	Possible cause/What to do
No ice is dispensed.	<ul style="list-style-type: none"> ■ Make sure there is ice in the ice storage box. ■ Check if ice is melted. If the ice will not be used for a long period of time, empty the ice storage box and turn off the ice maker. ■ Make sure the water line is properly connected, the water supply valve is open, and that the water supply pipe is not bent. ■ The ice dispensing function can only be used when the refrigerator compartment door is closed. ■ Make sure the ice storage box is properly installed.
Water is not dispensed.	<ul style="list-style-type: none"> ■ Make sure the water line is properly connected, the water supply valve is open, and that the water supply pipe is not bent. ■ The filter and the dustproof plug must be installed before water can be dispensed. Make sure these components are properly installed in place.
The speed of dispensing water is slow.	<ul style="list-style-type: none"> ■ Make sure the water pressure is 30-100 psi. ■ Replace the water filter.
Water drips from water dispenser.	<ul style="list-style-type: none"> ■ It is normal for a few drops to come out from the water dispenser. However, if water keeps dripping, check the connection of the water line.
Dispensed water tastes bad.	<ul style="list-style-type: none"> ■ If the refrigerator is not used for more than four days, dispense at least one gallon of water. ■ Replace the filter in time.

Climate class table

Class	Ambient temperature range
SN (Subnormal)	+10°C to +32°C
N (Normal)	+16°C to +32°C
ST (Subtropical)	+16°C to +38°C
T (Tropical)	+16°C to +43°C

Please place in envelope and mail to:
Veuillez mettre dans une enveloppe et envoyez à:

**OWNERSHIP REGISTRATION
P.O. BOX 1780
MISSISSAUGA, ONTARIO
L4Y 4G1**

**(FOR CANADIAN CONSUMERS ONLY -
POUR RÉSIDENTS CANADIENS SEULEMENT)**



For Canadian
Customers



Pour les
Consommateurs
Canadiens

CUT ALONG THIS LINE AND RETURN CARD - THANKS
DÉCOUPEZ ICI ET ENVOYEZ LA FICHE - MERCI

OWNERSHIP REGISTRATION CERTIFICATE – FICHE D'INSCRIPTION DU PROPRIÉTAIRE

Please register your product to enable us to contact you in the remote event a safety notice is issued for this product and to allow for efficient communication under the terms of your warranty, should the need arise.

Veuillez enregistrer votre produit afin de nous permettre de communiquer avec vous si jamais un avis de sécurité concernant ce produit était émis et de communiquer facilement avec vous en vertu de votre garantie, si le besoin s'en fait sentir.

REGISTER ON-LINE: www.geappliances.ca

ENREGISTREMENT SUR INTERNET À : www.electromenagersge.ca

MAIL TO: **P.O. BOX 1780, MISSISSAUGA**

POSTEZ À : **ONTARIO, L4Y 4G1**

<input type="checkbox"/> MR. / M		<input type="checkbox"/> MRS. / MME.		FIRST NAME / PRÉNOM		LAST NAME / NOM	
<input type="checkbox"/> MISS/Mlle.		<input type="checkbox"/> MS.					
STREET NO / N° RUE		STREET NAME / RUE				APT.NO/APP/RR#	
CITY / VILLE				PROVINCE		POSTAL CODE/CODE POSTAL	
AREA CODE/IND. RÉG.		TELEPHONE/TÉLÉPHONE		E-MAIL/COURRIEL			
DID YOU PURCHASE A SERVICE CONTRACT FOR THIS APPLIANCE? AVEZ-VOUS ACHETÉ UN CONTRAT DE SERVICE POUR CET APPAREIL?				YES/OUI <input type="checkbox"/> NO/NON <input type="checkbox"/>		IF YES/SI OUI : EXPIRATION Y/A M D/J	
NAME OF SELLING DEALER / NOM DU MARCHAND				MODEL / MODÈLE			
INSTALLATION DATE / DATE D'INSTALLATION Y/A M D/J		CORRESPONDENCE CORRESPONDANCE		<input type="checkbox"/> ENGLISH <input type="checkbox"/> FRANÇAIS		SERIAL / SÉRIE	

☐ I do not wish to receive any promotional offers regarding this product.
Je ne désire pas recevoir d'offres promotionnelles concernant ce produit.

Warranty

All warranty service provided by our Factory Service Centers, or an authorized Customer Care® technician. To schedule service, contact us at 1.800.561.3344. Please have serial number and model number available when calling for service.

For The Period Of:	Mabe Will Replace:
One Year From the date of the original purchase	Any part of the refrigerator which fails due to a defect in materials or workmanship. During this limited one-year warranty, Mabe will also provide, free of charge, all labor and related service to replace the defective part.

What Mabe Will Not Cover:

- Service trips to your home to teach you how to use the product.
- Improper installation, delivery or maintenance.
- Failure of the product if it is abused, misused, or used for other than the intended purpose or used commercially.
- Loss of food due to spoilage.
- Damage caused after delivery.
- Replacement of house fuses or resetting of circuit breakers.
- Damage to the product caused by accident, fire, floods or acts of God.
- Incidental or consequential damage caused by possible defects with this appliance.
- Product not accessible to provide required service.

EXCLUSION OF IMPLIED WARRANTIES

Your sole and exclusive remedy is product repair as provided in this Limited Warranty. Any implied warranties, including the implied warranties of merchantability or fitness for a particular purpose, are limited to one year or the shortest period allowed by law.

This warranty is extended to the original purchaser and any succeeding owner for products purchased in Canada for home use within Canada. In-home warranty service will be provided in areas where it is available and deemed reasonable by Mabe to provide. If the product is located in an area where service by a GE Authorized Servicer is not available, you may be responsible for a trip charge or you may be required to bring the product to an Authorized GE Service location.

Warrantor: MC Commercial Inc., Burlington, ON L7R 5B6

Staple your receipt here. Proof of the original purchase date is needed to obtain service under the warranty.

Consumer Support

Appliances Website

Have a question or need assistance with your appliance? Try the GE Appliances Website, any day of the year! For greater convenience and faster service, you can now download Owner's Manuals, order parts or even schedule service on-line at www.geappliances.ca

Schedule Service

Expert repair service is only one step away from your door. Get on-line and schedule your service at your convenience any day of the year! Or call **1.800.561.3344** during normal business hours.

Extended Warranties

Please consult your local listings for an extended warranty provider.

Parts and Accessories

Customers **in Canada** should consult the yellow pages for the nearest Mabe service center, visit our website or call 1.800.661.1616.

Contact Us

If you are not satisfied with the service you receive, contact us on our Website with all the details including your phone number, or write to: Director, Consumer Relations, Mabe Canada Inc.

Suite 310, 1 Factory Lane
Moncton, NB, E1C 9M3

Register Your Appliance

Register your new appliance on-line—at your convenience! Timely product registration will allow for enhanced communication and prompt service under the terms of your warranty, should the need arise. You may also mail in the pre-printed registration card included in the packing material. **www.geappliances.ca**.

à congélateur inférieur RÉFRIGÉRATEUR

INFORMATION DE SÉCURITÉ	...2
UTILISATION DU RÉFRIGÉRATEUR6
Mise en place6
Démarrage7
Pièces et caractéristiques8
Panneau de contrôle9
Paramètres de réglages11
Distribution d'eau froide et des glaçons13
SOIN ET NETTOYAGE14
Nettoyage général14
Dégivrage16
INSTRUCTIONS D'INSTALLATION17
Pieds de mise à niveau17
Mise à niveau de las portes17
Procédures d'installation18
Installation du filtre19
Arrivée d'eau20
CONSEILS DE DÉPANNAGE22
GARANTIE27
SERVICE À LA CLIENTÈLE28

MANUEL D'UTILISATION ET D'INSTALLATION

MYE22HYPKFS

Inscrivez ci-dessous les numéros
de modèle et de série:

N° de modèle _____

N° de série _____